



User Manual

PRIVÉ™
LOUNGE

INNOVATING SALON LUXURY



THE KEY TO SALON SUCCESS

PRIVE PEDICURE SPA USER MANUAL

RECEIVING AND INSPECTION: If missing parts or damages are found, please notify the carrier at once and insist on a notation of the damage on the bill of lading. DO NOT DISCARD THE SHIPPING BOX. If you give the carrier a clear receipt for goods that have been damaged in transit, you do so at your own risk and expense.

Table of Contents

IDENTIFYING PARTS FOR PRIVE® MODEL	2
WALL CLEARANCE & SPA TO SPA RECOMMENDED CLEARANCE	3
INSTALLATION OF PEDICURE SPA DOME	4
INSTALLATION OF PEDICURE SPA SEAT	5
INSTALLATION OF PLUMBING SYSTEM	8
INSTALLATION OF VENTILATION SYSTEM (OPTIONAL)	11
ELECTRICAL AND PEDICURE SPA COMPONENT SPECIFICATIONS	12
PRE-OPERATIONAL SETUP	13
OPERATE AUTO-FILL / JET SWITCH	15
OPERATE DIGITAL CONTROL PANEL	16
RESET WATER SENSOR AND WATER LEVEL	17
MASSAGE SYSTEM & REMOTE CONTROLLER	19
DOME SPOTLIGHT REPLACEMENT	20
STEAMER REPLACEMENT	21
AF-CONTROL BOX REPLACEMENT	22
DRAIN KNOB & AUTO-FILL /JET KNOB	24
REMOVING THE FRONT PANEL	25
FAUCET ASSEMBLY INSTRUCTION	26
REMOVING THE FOOTREST	27

WARNING:



1. This product is for indoor use only & is not recommended for use on carpet or wood floor.
2. This product must be connected to a circuit outlet protected by a class A GFCI.
3. DO NOT USE if you have poor circulation, or if any area of your feet or legs has an open sore.
4. Maximum temperature of the water should never exceed 100 degrees F.
5. DO NOT STEP or STAND IN THE FOOT BASIN.
6. DO NOT operate any electrical devices near the pedicure spa.
7. Maximum load in the spa chair is 250lbs (114kg).


PROPER INSTALLATION ACCORDING TO THIS MANUAL IS REQUIRED. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY AND/OR WARRANTY WILL BE NULL. YOU MUST HAVE A LICENSED PLUMBER TO CONNECT THE SPA AND WATER SYSTEM IN PLACE SAFELY.

STATES' NOTICE

In the commonwealth of most states, all pedicure spas installed for commercial usage are required to have a backflow preventer at the salon's cost. This device shall be installed between the water inlet hose and the spout

PLEASE SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE



Identifying Parts for PRIVE® Model

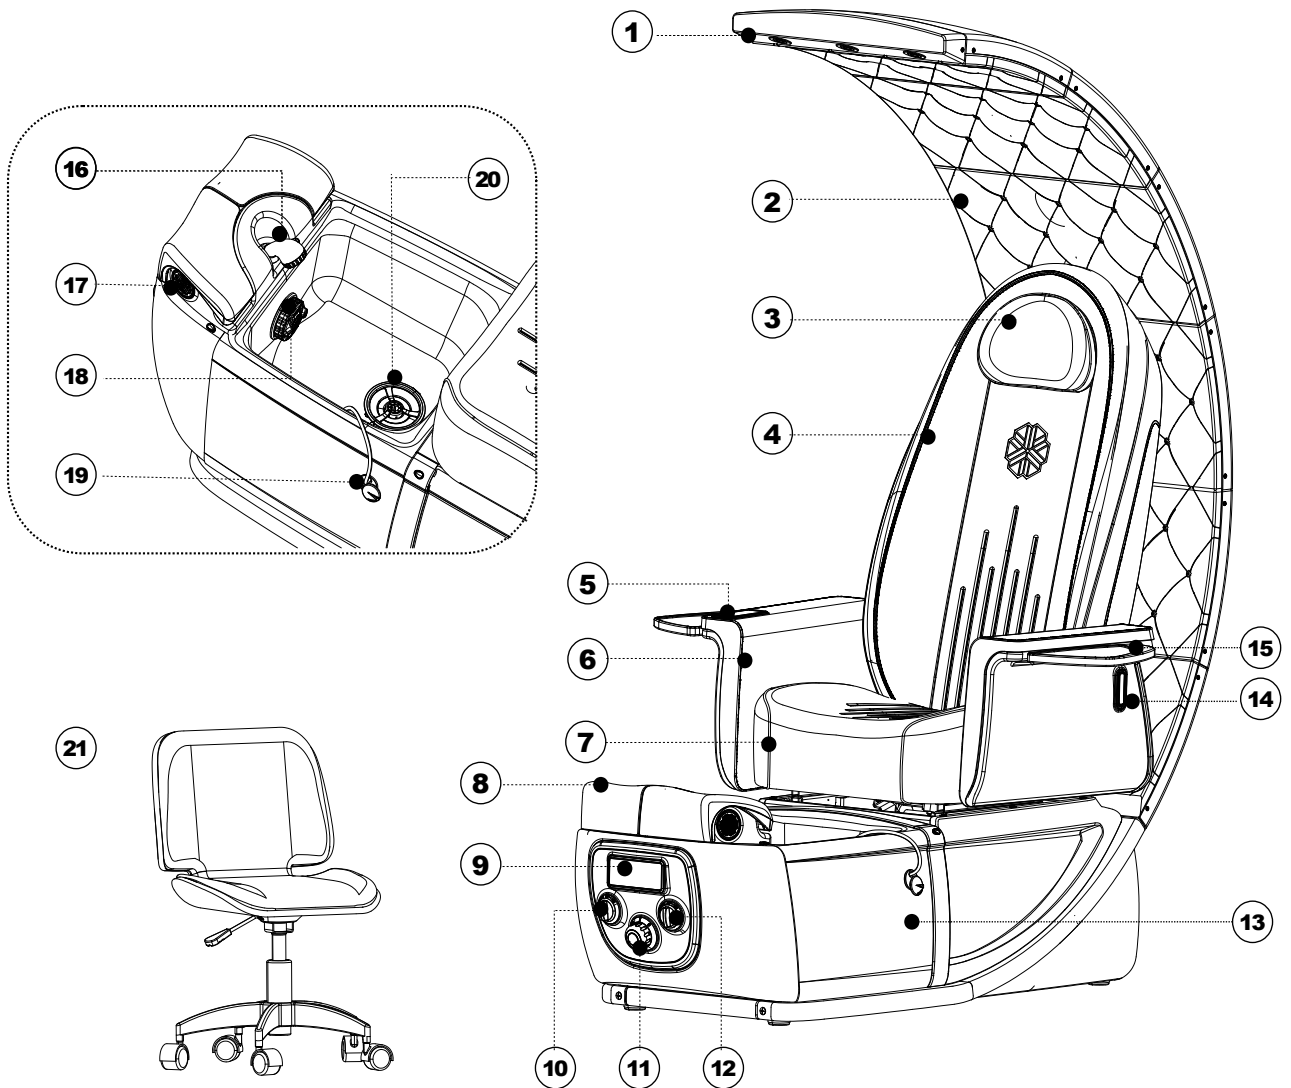

Pedicure Spa with Massage System

- | | |
|-------------------------------|--------------------------------------|
| 1. Dome spotlight | 11. Hot/Cold water mixer valve |
| 2. Dome | 12. Auto-fill/Jet knob |
| 3. Pillow | 13. Aurora bowl |
| 4. Back cushion with massage | 14. Handbag (purse) hook |
| 5. Massage remote control | 15. Manicure tray |
| 6. Armrest cushion | 16. Hand spray spout |
| 7. Seat cushion | 17. Ventilation inlet |
| 8. Footrest with calf support | 18. ECOJET™ Magnetic drive |
| 9. Digital control panel | 19. Safety device for steamer |
| 10. Drain knob | 20. Air ring therma Jet |
| | 21. Low profile pedicure stool prive |


WALL CLEARANCE & SPA TO SPA RECOMMENDED CLEARANCE

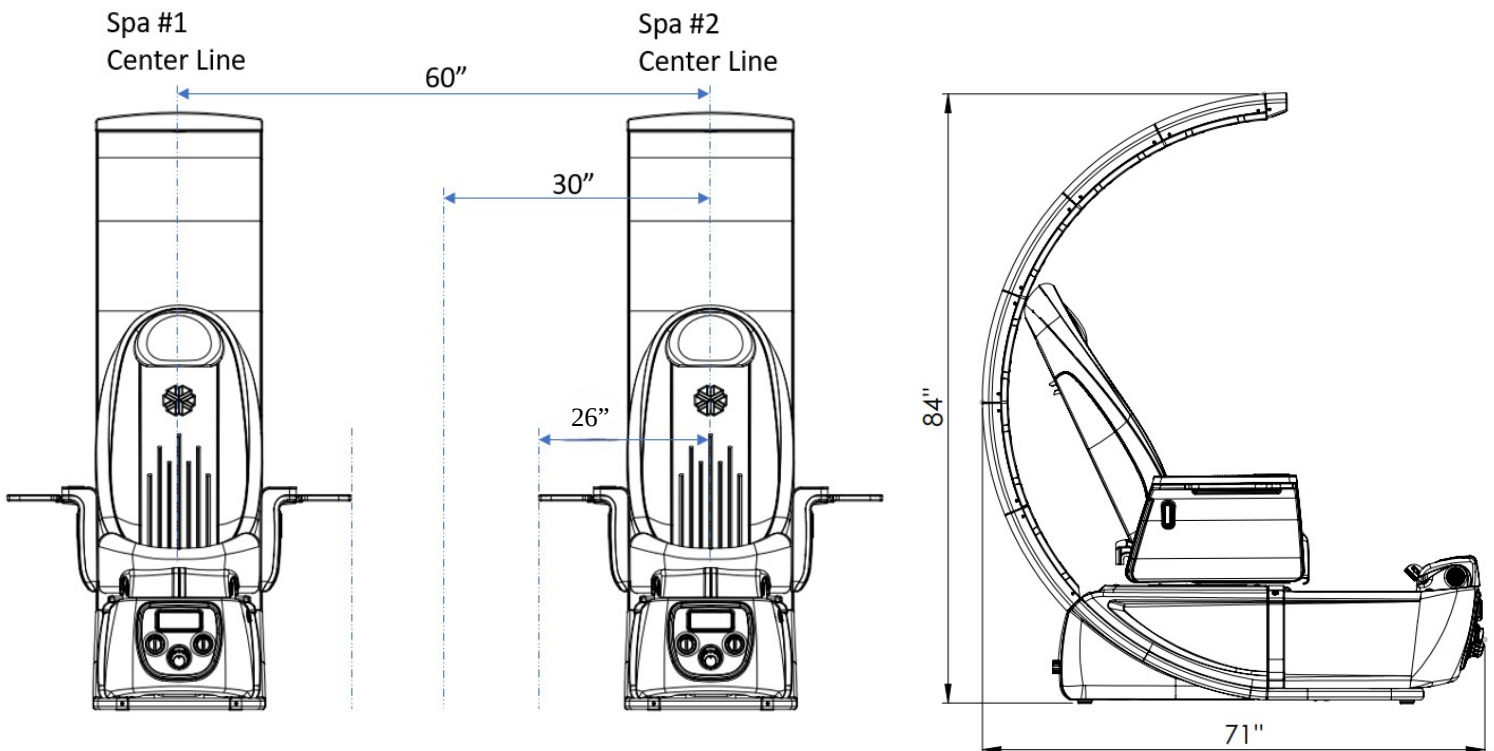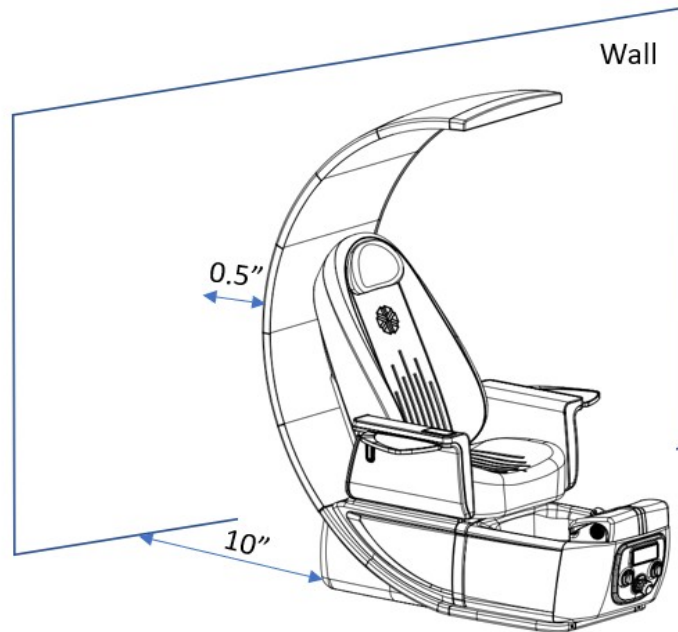

VERY IMPORTANT: The wall clearance for dome-to-wall 0.5 inch / 1.25cm and base-to-wall 10 inch / 25.4cm are mandatory to give enough space for the unobstructed chair recline and plumbing system connections. Failure to follow may result in serious damage to the spa component and void the warranty.


INSTALLATION OF PEDICURE SPA DOME

1. LOWER DOME ASSEMBLY

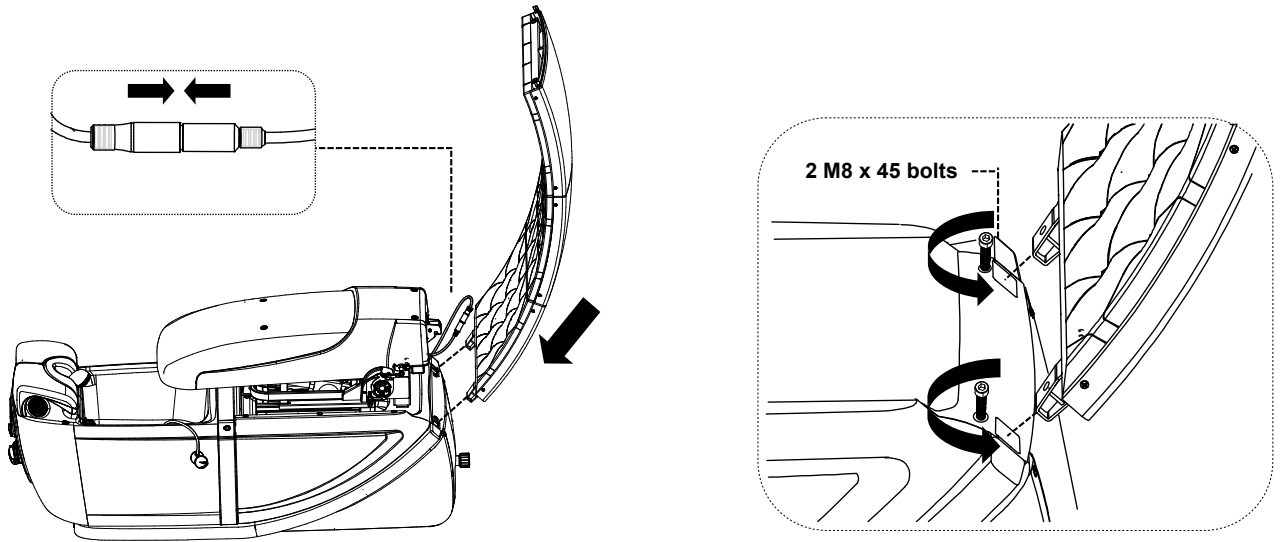

Step 1: Install lower-dome by inserting 2 mounting rods from lower dome into spa base frame then secure 2 M8 x 45 bolts (attached on base). Locate and connect both ends of spotlight power cables.


2. UPPER DOME ASSEMBLY

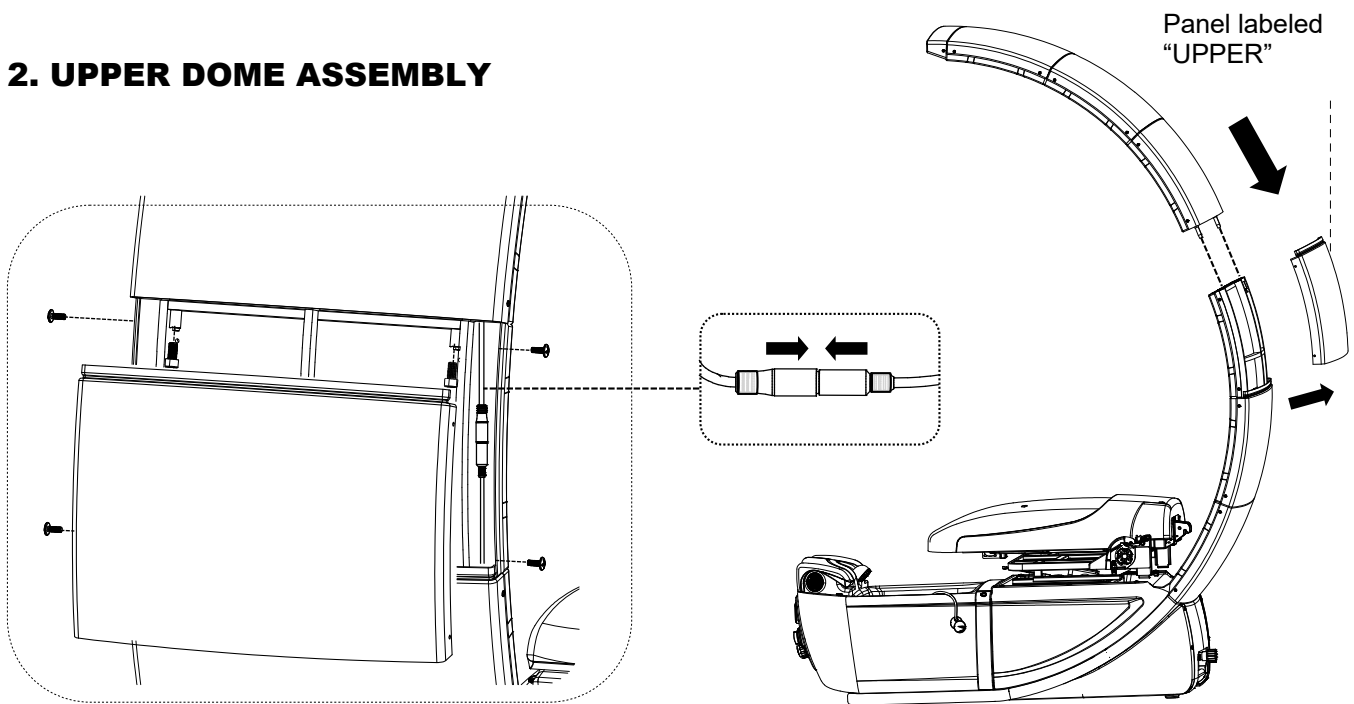


Step 2: Open the panel labeled "UPPER". Install upper-dome by inserting 2 mounting rods from upper-dome to lower-dome frame then secure 2 M8 x 20 bolts (in the accessory bag). Locate and connect both ends of spotlight power cables. Re-install the panel.

INSTALLATION OF PEDICURE SPA SEAT**1. FOLD & UNFOLD BACK-REST MASSAGE**


Raise the backrest until a “click” is heard. Make sure the lever is locked before operating.

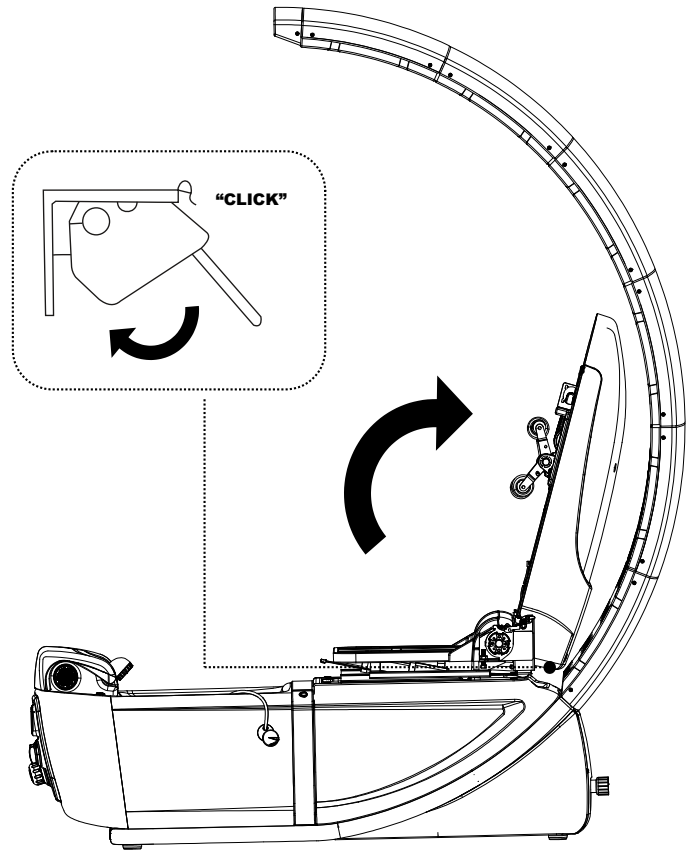


To fold down the backrest: Lift up lever handle and push the backrest downward.

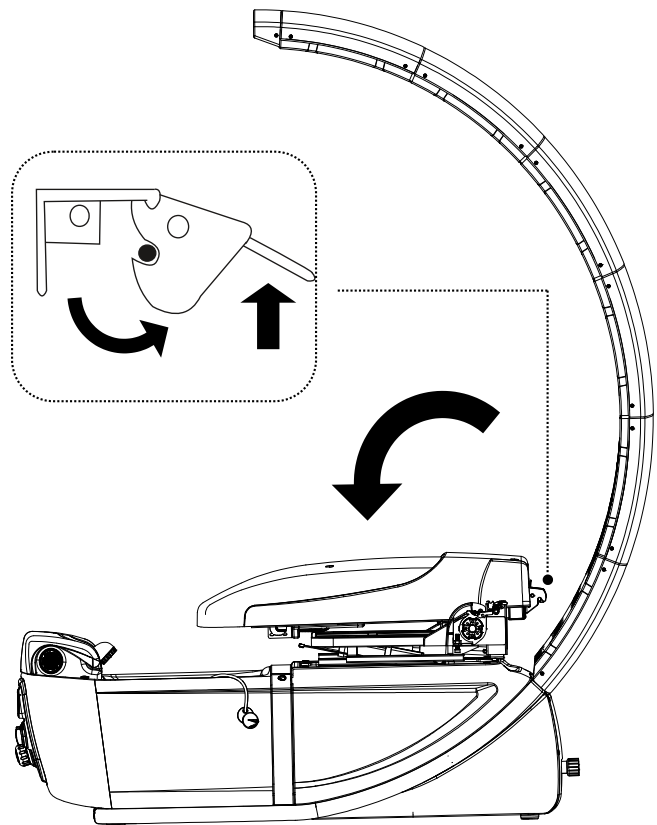



2. BACK CUSHION ASSEMBLY

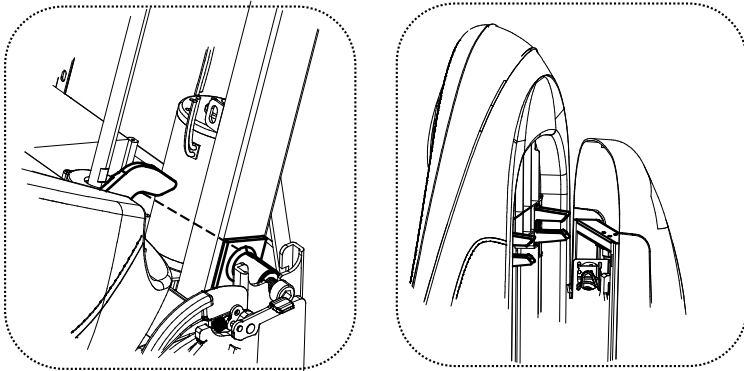

Install the back cushion by engaging the 2 bottom hooks of cushion onto the shaft of massage frame. Position the top of back cushion, then snap the fit joint of back cushion to the crossbar of massage frame, press the back cushion firmly on the massage frame to secure it.

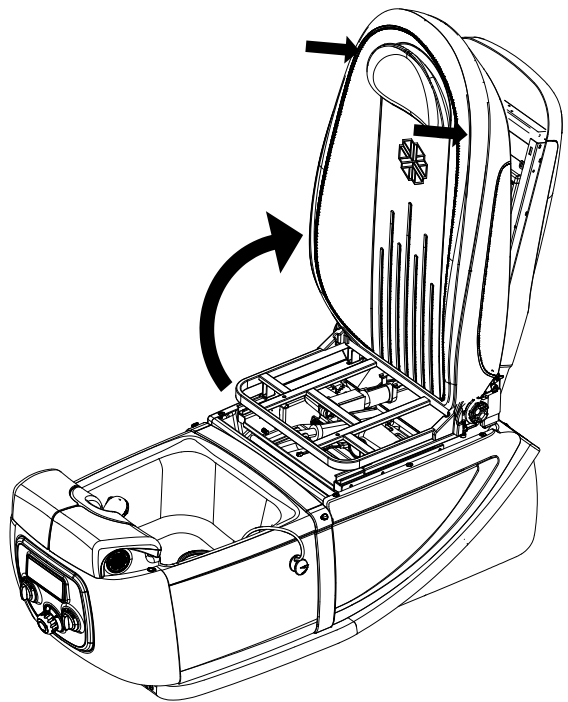

3. SEAT CUSHION ASSEMBLY

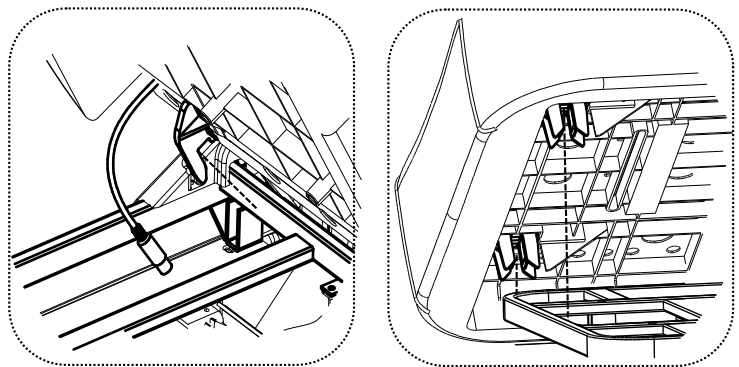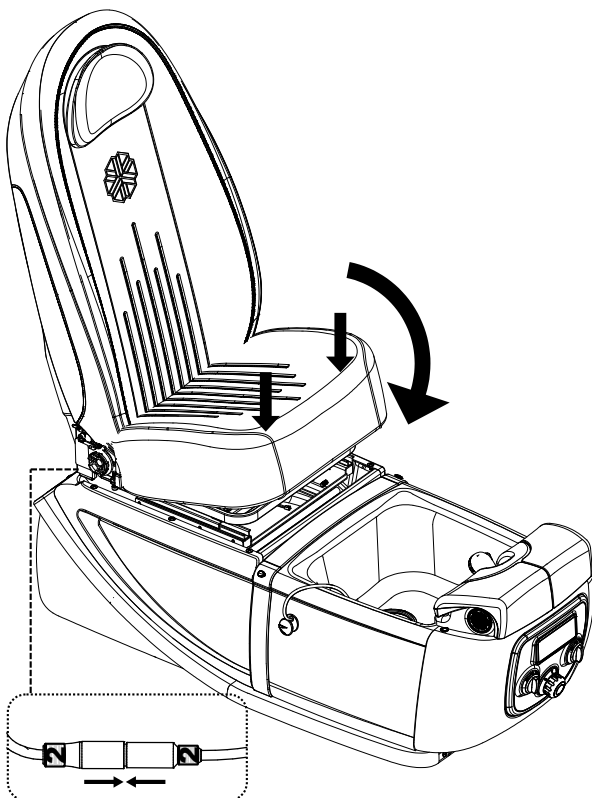

Install the seat cushion by engaging the 2-rear hooks of seat cushion onto the seat frame. Position the seat cushion then snap the fit joint of seat cushion to the seat frame. Press the seat cushion firmly on the seat frame to secure it.

Connect the 2 connectors labeled "2" from the seat cushion to the spa base.


NOTE:

Wire & connector number 2 must be routed under the seat frame.


DON'T plug the (+) connector of the number 2 into the (-) connector of the number 1.

ARMRESTS ASSEMBLY

Step 1: Install the armrests by inserting part A into part B and gently shake the armrest while turning the knob clockwise to secure it.

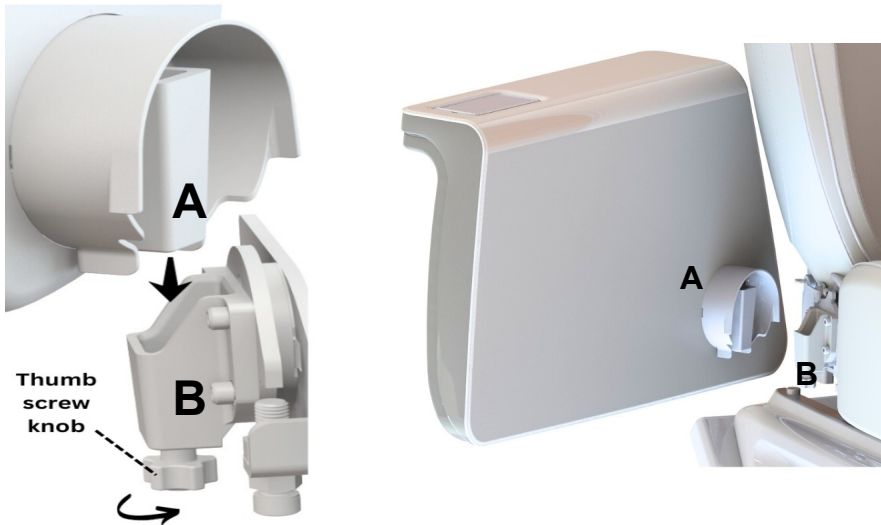

Step 2: Connect cable connectors labeled "1" and cable connectors labeled "3" together (Right armrest).

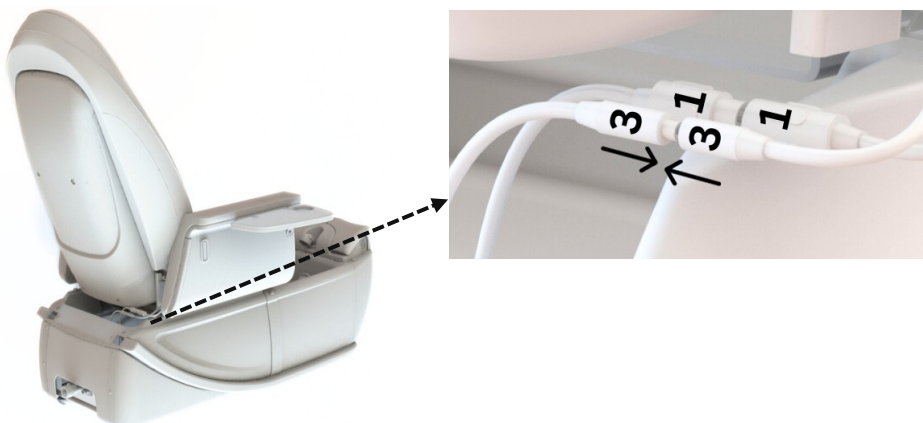

Note: If the armrest is not parallel to the floor, we can adjust the hex bolt at the bottom of the seat frame. After adjustment, tighten the nut to lock.




INSTALLATION OF PLUMBING SYSTEM

NOTE: The drainage and water supply system installation require a licensed plumber. Detailed instructions can be found in the manual book. Instructions and local plumbing codes need to be carefully complied to pass the city inspections.

1. GRAVITY DRAIN**GRAVITY DRAIN**

** 1-1/4" Flex hose with removable connector is provided for easy installation.

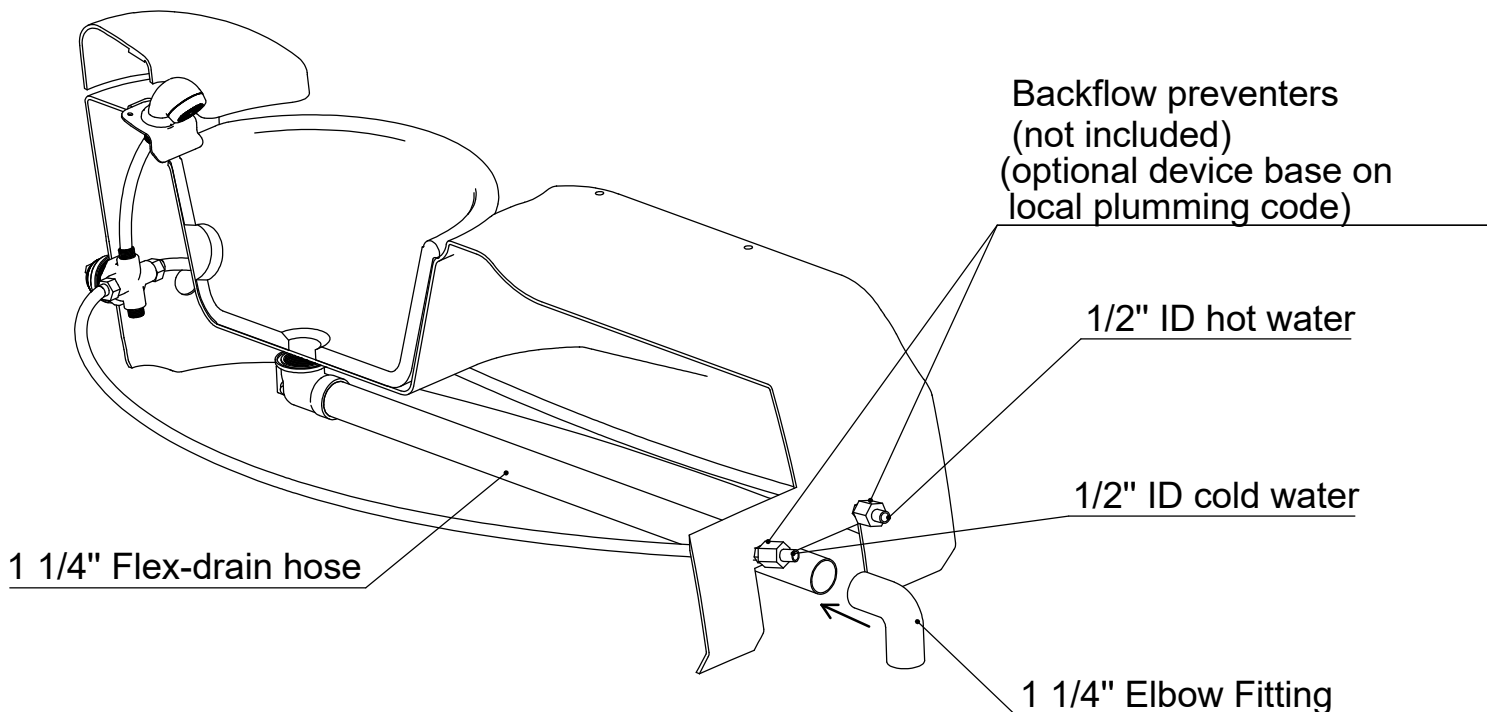

The gravity drainage installation should comply with SECTION 701.0, 2018 UPC.


P-trap, vent, and connectors should comply with SECTION 1001.1 and 1001.2 UPC.

An alternative code needs to be complied with by the states not adopting UPC.

- Drainage system: SECTION 701.2 and 702.2 IPC (or local plumbing code).
- P-trap, vent, and connectors: SECTION 1002.1 and 1002.2 IPC (or local plumbing code).

The installer/plumber is responsible for obtaining and complying with the local plumbing code for inspection. If any assistance is required from the vendor's side, please contact our customer service.

2. POWER DRAIN

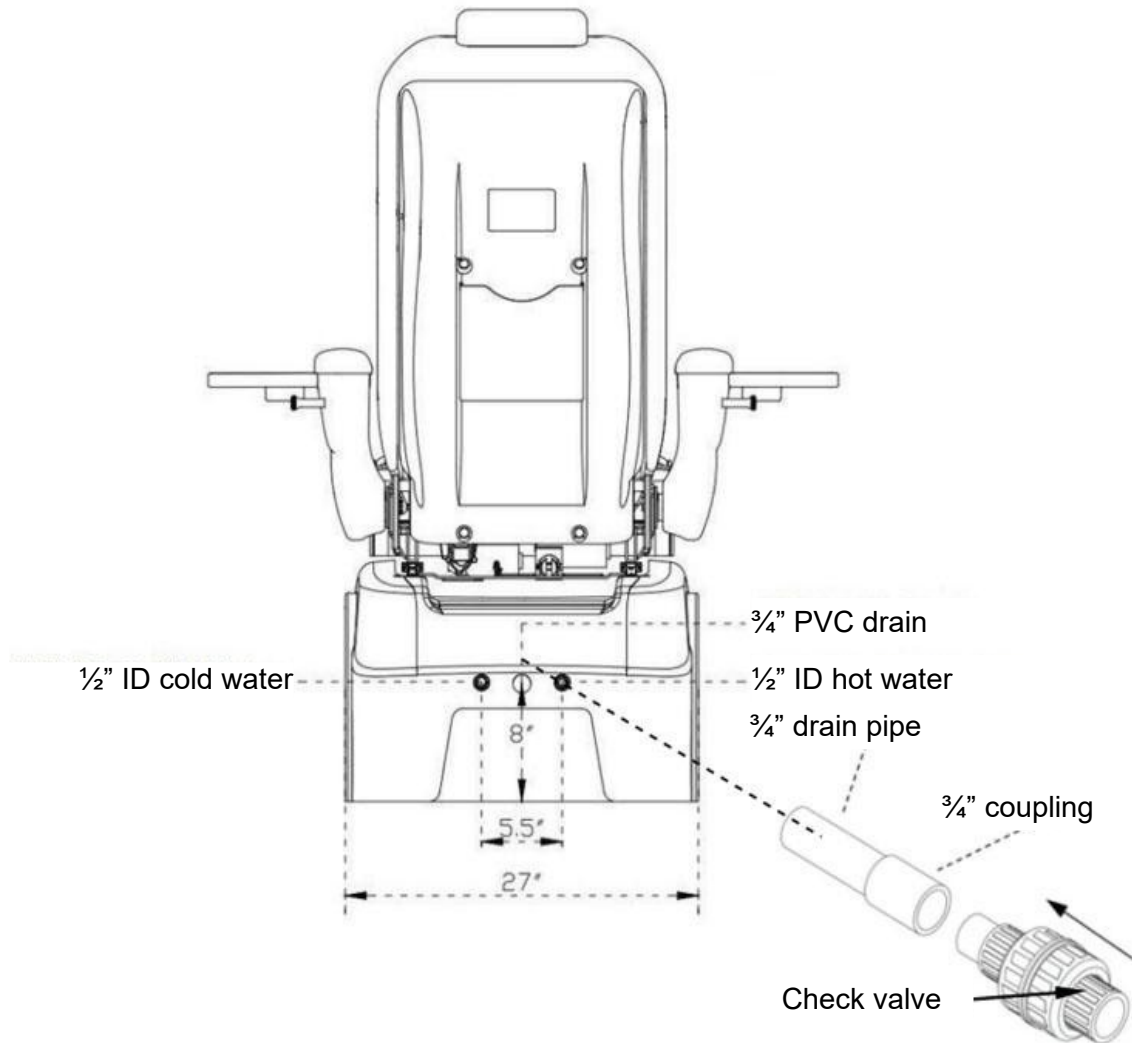

The power drainage installation should comply with SECTION 807.1, 2018 UPC.


P-trap, vent, and connectors should comply with SECTION 1001.1 and 1001.2 UPC.

An alternative code needs to be complied with by the states not adopting UPC.

- Drainage system: SECTION 701.2 and 702.2 IPC (or local plumbing code).
- P-trap, vent, and connectors: SECTION 1002.1 and 1002.2 IPC (or local plumbing code).

The installer/plumber is responsible for obtaining and complying with the local plumbing code for inspection. If any assistance is required from the vendor's side, please contact our customer service.

3. DRAIN SYSTEM RECOMMENDATION

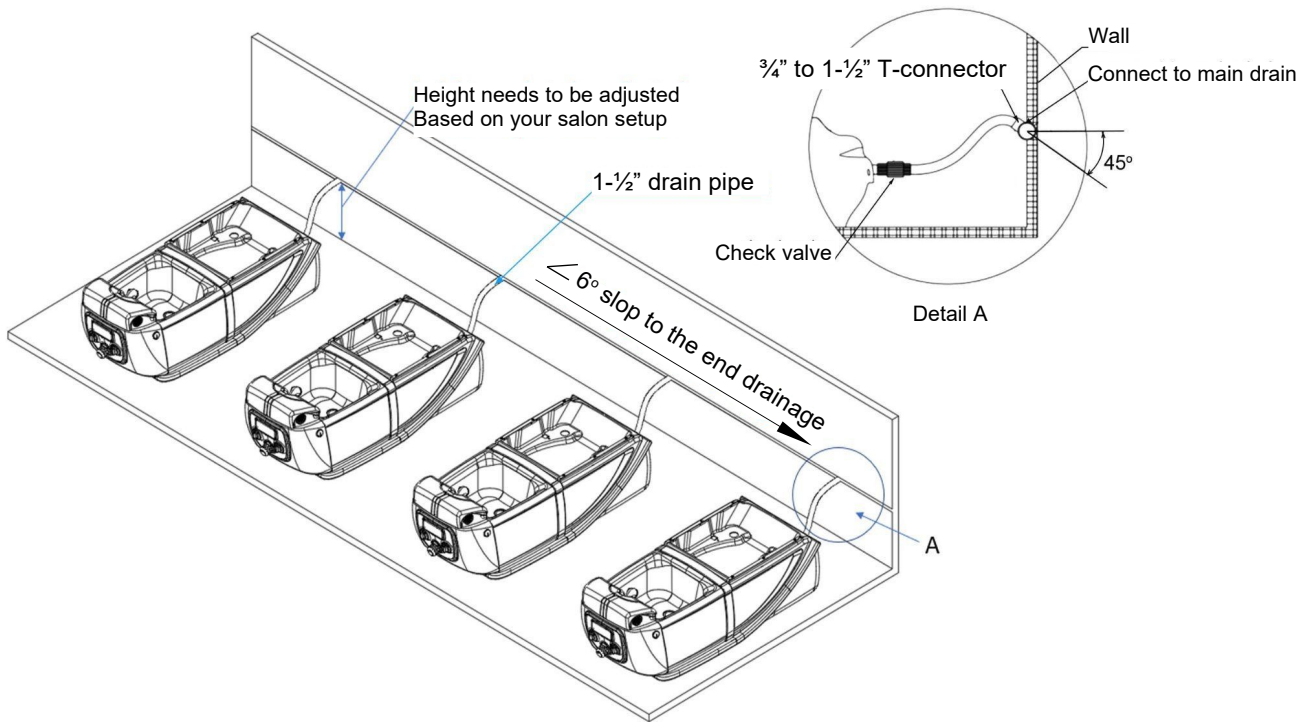

4. HOT/COLD WATER SUPPLY SYSTEM

NOTE: The drainage and water supply system installation require a licensed plumber. Instructions and local plumbing codes need to be carefully complied to pass the city inspections.

New constructions: drain a good amount of water in a bucket to remove all debris from the new hot/cold water pipes before connecting to new spa chairs (figure 1).

Replacement Spas: Make sure to use new hot/cold water hoses to replace old ones before installing a new Spa chair. The old debris, rubber, or plastic chips could clog the water inlet system.

** Failure to do so will void the warranty.

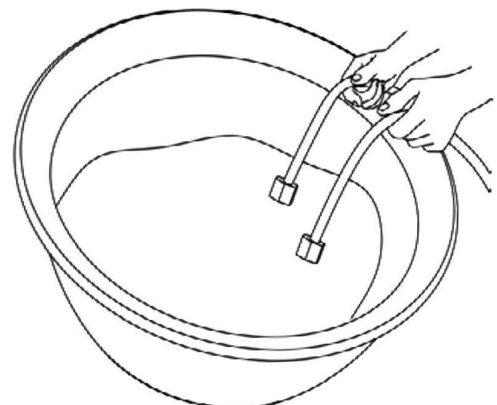



Figure 1. Drain water to remove debris before installing new Spa chair.

INSTALLATION OF VENTILATION SYSTEM (OPTIONAL)

(The spa comes with a preinstalled ventilation system. Please contact your state department for the requirements and regulations).



Pull out the stretchable air pipe located inside the spa base and connect to your ventilation system as needed.

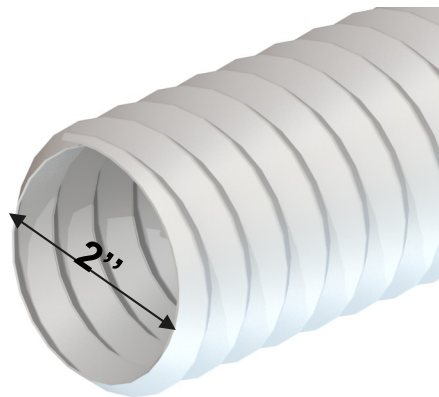

ELECTRICAL AND PEDICURE SPA COMPONENT SPECIFICATIONS

All electrical connections **MUST** be made by a licensed electrician following Local & National Electrical and Building Codes.



WARNING:

**IT IS EXTREMELY IMPORTANT THAT THE FOOT SPA OPERATES WITH GFCI PROTECTION
A 110V-50/60Hz 15 Amp GFCI MUST BE UTILIZED**


SPECIFICATIONS LIST FOR PRIVE SPA CHAIR

Spa Dimensions & Weights	Spa : L=71"(180cm) W=34"(86cm) w/ Tray =52"(132cm) H=84"(214cm) Net Weight: ~ 310 lbs. Shipping Weight: ~ 350 lbs. Max. Handling Load: ~ 330 lbs.	
Steamer Rating	120V AC Max 850W	
Adjustable Stool	Pedicure Stool: Manicure Stool:	12" – 13". 16.25" – 20"
Spa Water Capacity	~ 4 US Gallon	
Jet Motor	120 VAC. At 85W 60Hz	
Massage, Motors, Seat Sliding & Reclining	24VDC, 120W Max	
Discharge Pump	Motor – 120V at 85W 60 Hz Maximum vertical lift: 3ft . Flow rate 400 GPH @ floor level	
Power source	125 VAC, 60HZ, 15A. The power needed per spa chair = 9 Amp	
Electrical Switches	One (1) electro-mechanical knob for the Whirlpool rated at 5A contacts. One (1) electro-mechanical knob for the Drain. Rated at 5A contact.	
Safety	Pedicure Spa is UL Listed.	


PRE-OPERATIONAL SETUP

1. STEAMER SET UP



Step 1: Insert air tube to air ring.

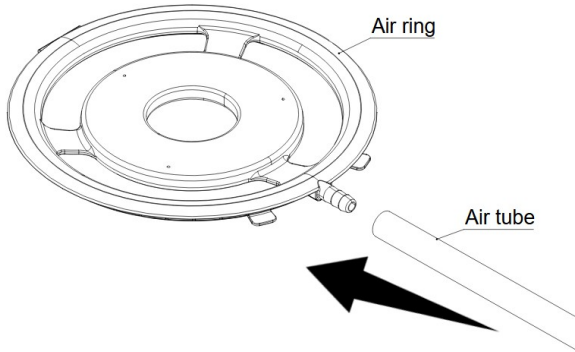

Step 2: Place the air ring in the bowl.

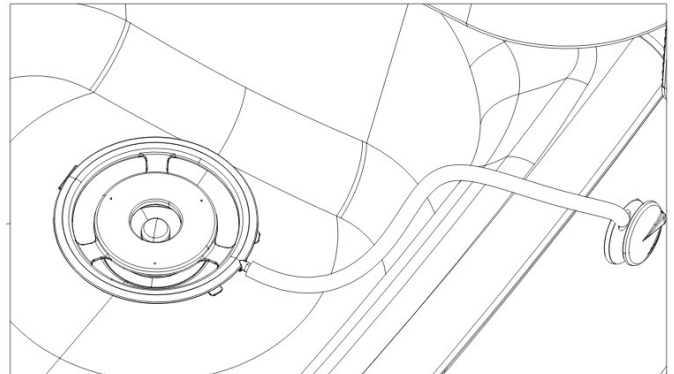

Step 3: Install the air tube to air dispenser as follows:

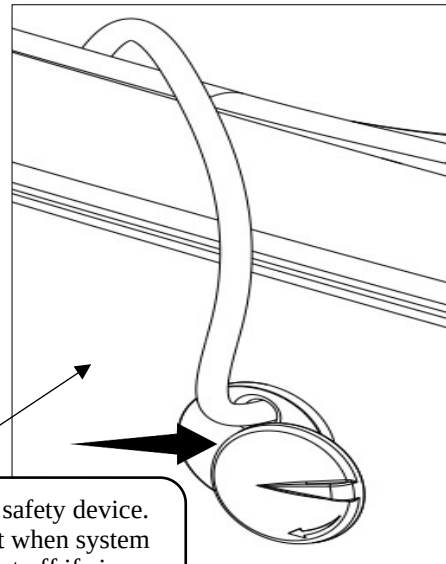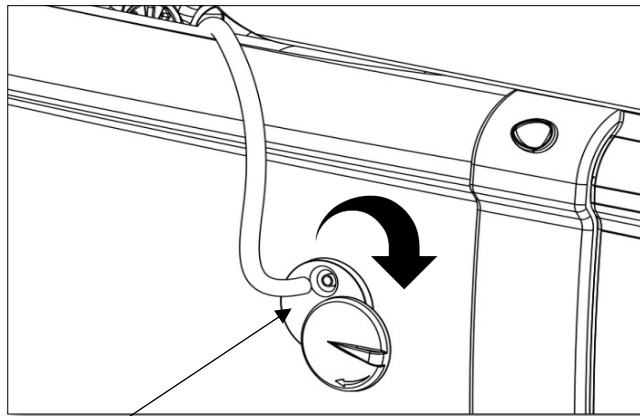

Turn safety cap cover clockwise to open the safety device

Insert the air tube into the safety device.
Note: Air tube will get hot when system is running. System will shut off if air tube pops out.



Note: Open and reassemble the air ring for cleaning as follows:

- Opening:


Hold one of the two levers of the air ring and pull the two halves apart.

- Reassembling:

Align the two halves of the air ring and press around the air ring (**press the internal snap first, then press the external snap air ring**).

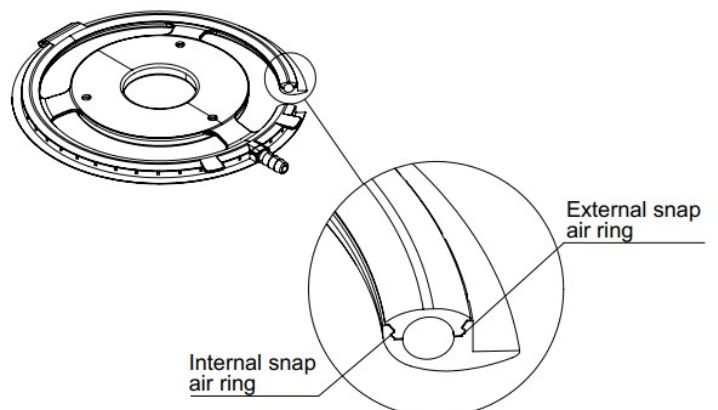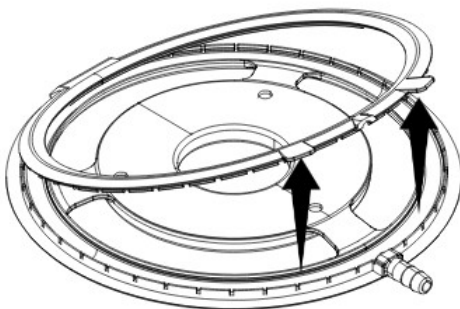


PRE-OPERATIONAL SETUP

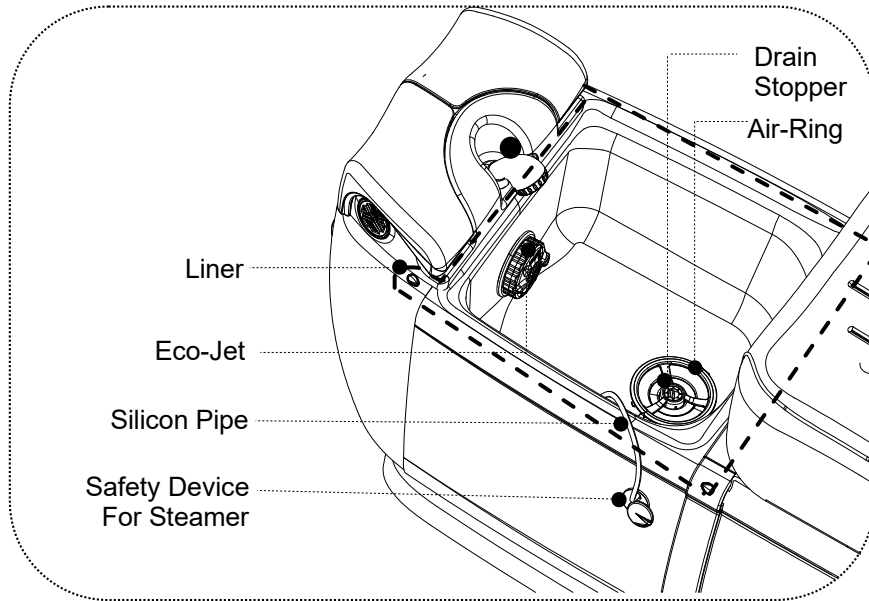



The system should be set as the picture above before each service section.

Note: To assure the safety for the operator; if the silicon pipe is not connected or accidentally popped out from the safety connector. The safety device will shut off the steam system.

2. ECO-JET SET UP

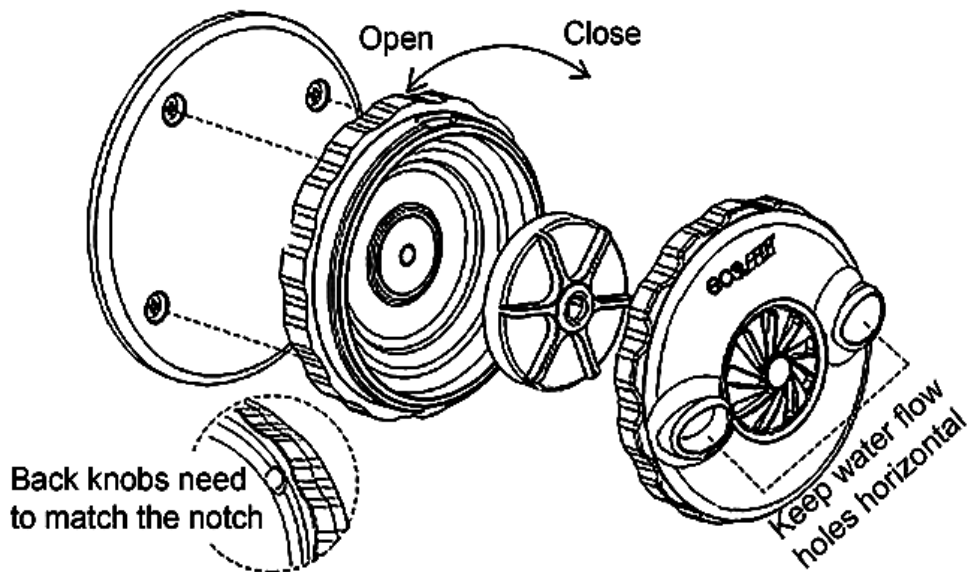

OPERATE AUTO-FILL /JET SWITCH

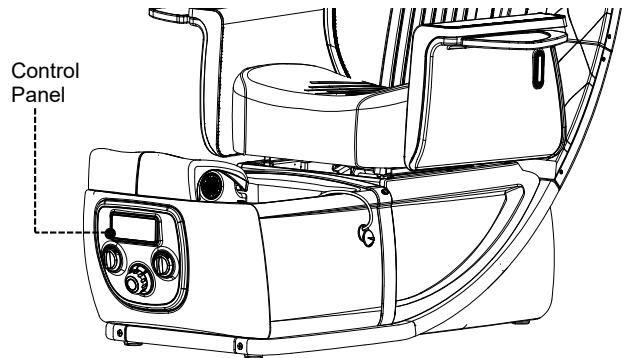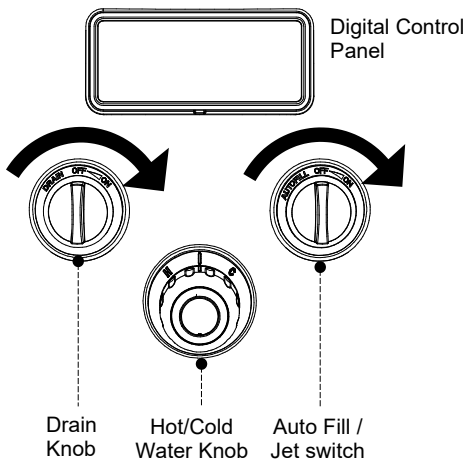

Locate the control panel at the front of the spa base. Follow the instructions below to operate the pedicure spa.



Push in button for manually shut off water

- Twist Auto-Fill/Jet switch clockwise then release to start auto-fill. Water will automatically shut off when it reaches the preset water sensor level.
- Turn the Auto-Fill/Jet switch again to turn off the water pump (also turn off Eco-Jet).
- Twist drain knob clockwise to start draining. Twist it back when the draining is done.
- Use “Hot/Cold water knob” to manually adjust the water temperature.
- Push button on the Hot/Cold Water Knob to turn On/Off main water valve.


***** The Hot/Cold water control knob should be turned off at the end of the day to prevent water leakage.**



- By default, Eco-Jet will automatically turn on when the water level is full. To turn off the Eco-Jet, click the “Whirlpool button” on the digital control panel or twist Auto-Fill/Jet switch.

***** ECO-JET MUST OFF BEFORE DRAINING THE WATER OUT, IF NOT THE DEVICE WILL BE DAMAGED.**

OPERATE DIGITAL CONTROL PANEL

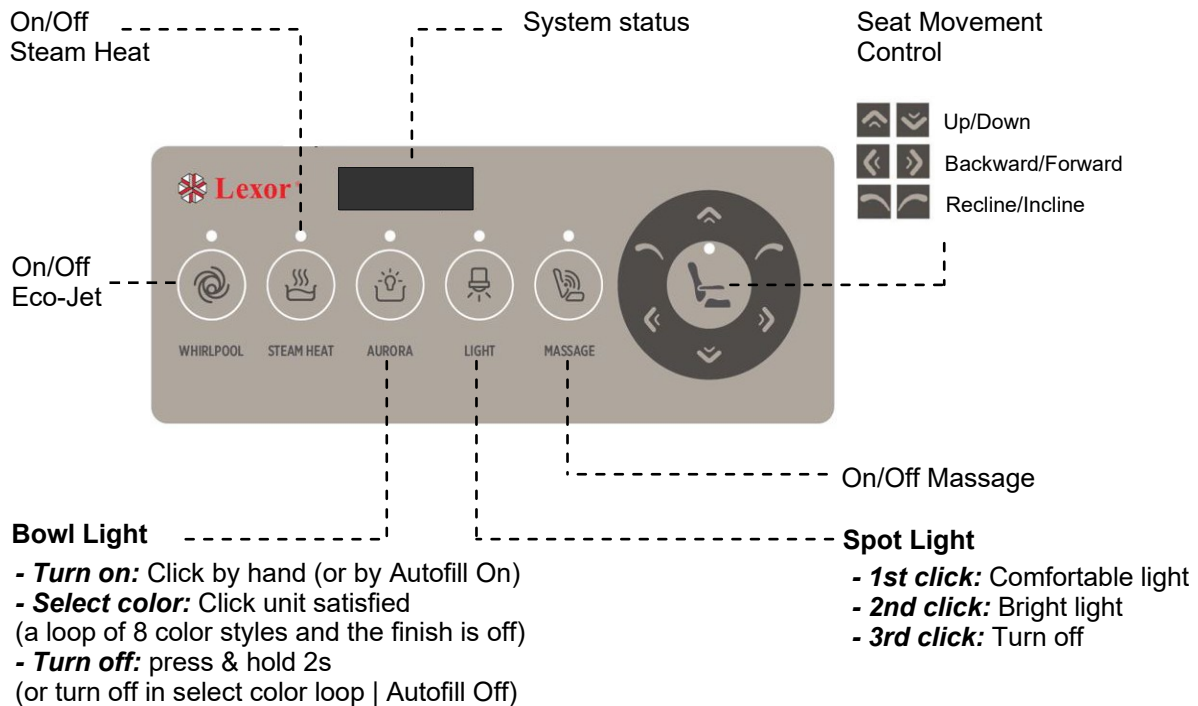

NOTE: Press and hold the Steam Heat Button for “3s”. The system will activate the Air Jet without the steamer.

- The Blue/White LED light indicates the current working status.
- Eco-Jet action can cause small amounts of soap or body oil to foam excessively. For this reason, refrain from using these products during the whirlpool cycle.
- For safety reasons, the steam heat function is off by default. Press the button to turn it on.



WARNING:
DO NOT TURN “ON” THE ECO-JET UNLESS ADEQUATE WATER IS IN THE TUB. OR IT MAY DAMAGE THE JET AND CAUSE NOISE.




WARNING:
DO NOT TURN “ON” THE DRAIN PUMP UNLESS ADEQUATE WATER IS IN THE TUB. THE WARRANTY IS VOID IF THE PUMP WAS RUNNING DRY.

RESET WATER SENSOR AND WATER LEVEL

1. RESET WATER SENSOR (EMPTY BASIN BEFORE ACTIVATING THIS MODE)

1. Press & Hold "Whirlpool" button for 3 sec

2. Status screen will display "CAL"

3. Click  to confirm:
 - "CAL" will blink if the reset is successful
 - No blink if failed



A reset water sensor is required when the water level is out of range.

**** Note :**

- This will also reset the water level to default = 3.
- Click should be pressed slowly.
- Press and hold the Whirlpool Button for 3 sec to resume system operation or the system will be automatically resumed if no action is taken in 20 sec

2. ADJUST THE WATER LEVEL FOR AUTO-FILL (EMPTY BASIN BEFORE ACTIVATING THIS MODE)


**** Note :**

- Click should be pressed slowly.
- Press and hold the Whirlpool Button for 3 sec to resume system operation or the system will be automatically resumed if no action is taken in 20 sec.



1. Press & Hold for 3 sec. The LED will display "CAL"
 Click until "L x" appears on the screen



2. The LED will display "L"

4. Click  to confirm:
 - "L - x" will blink if successful (x=1:5)
 - No blink if failed



3. Click  or  to increase or decrease the water level, where 1 is lowest and 5 is highest level


3. ADJUST THE STEAMER TIMEOUT (Turn off all system functions for configuration)


1. Press & Hold for 3 sec. The LED will display "CRL"



Click until "5 0" appears on the screen



2. LED screen will display the current setting

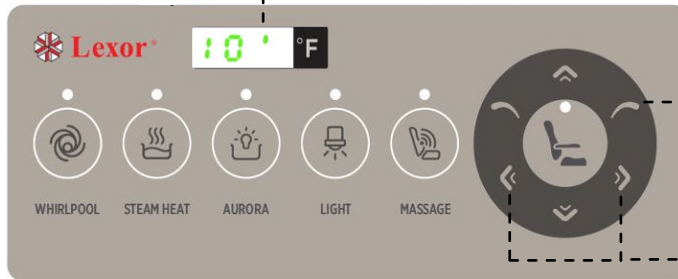

4. Click  to confirm:
- Display will blink if successful
- No blink if fail

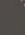
3. Click  or  to increase or decrease the timeout setting.
The setting range is 10 mins to 60 mins

4. RESET TO THE FACTORY SETTING

1. Press & Hold for 3 sec. The LED will display "CRL"

Click until "FRC" appears on the screen




2. Click  to confirm:
- Display will blink if successful
- No blink if fail


Factory Default Parameters

- Water level: 3
- Steamer timeout: 20 mins
- Safety device: Enabled.
- Unit of temperature: F


MASSAGE SYSTEM & CONTROLLER

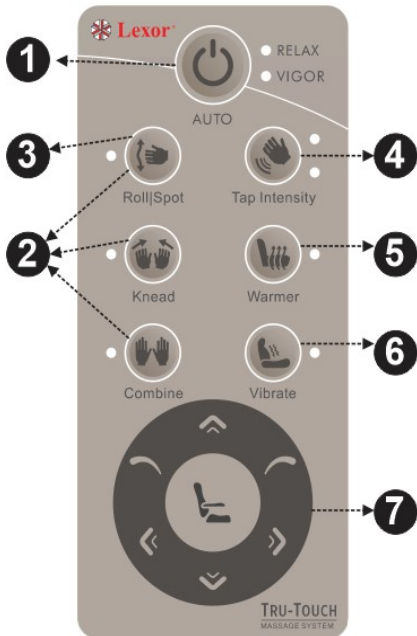


1. Press Auto Button to start Auto mode. Within 10 seconds from start-up there will be 2 options (relax/vigor) by pressing the 'AUTO' button one more time.
2. Press any button (Rolling/Spot, Kneading, Tapping, Combine) to enter Manual mode
3. Press Rolling/Spot to stop rolling up/down and stop at the desired spot.
4. Press the Intensity button to select tapping intensity
5. A Warmer Button is an option. Pressing this button will start the heated seat.
6. Vibrate Button is an option. Pressing this button will start the vibration at your seat.
7. Press any chair button (Recline, Incline, Backward, Forward, Up, Down) to move the chair to desired positions.

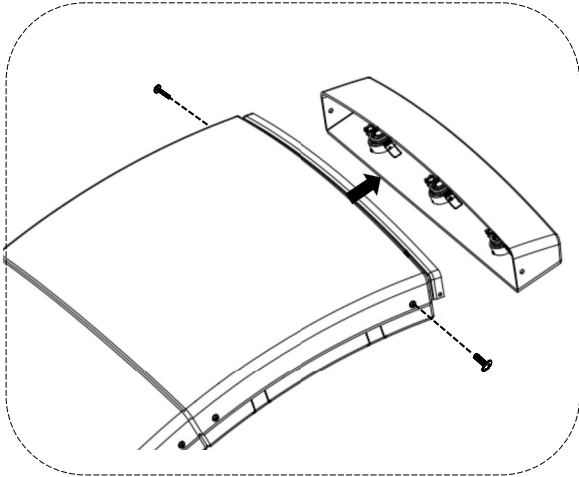DOMEST SPOTLIGHT REPLACEMENT


Remove the 2 mounting screws on both sides of the top dome cover.

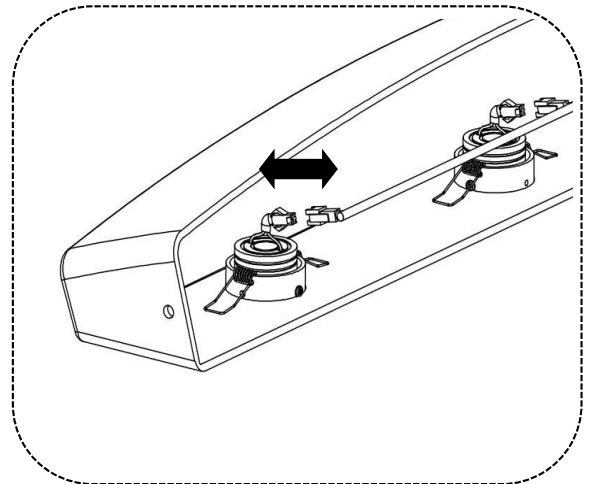

Disconnect Spotlight cable connector as needed.

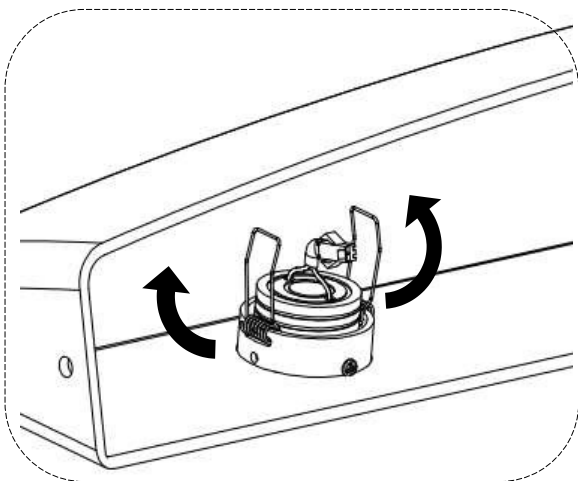



Remove the Spotlight by lifting the springs holder and push down the Spotlight housing.

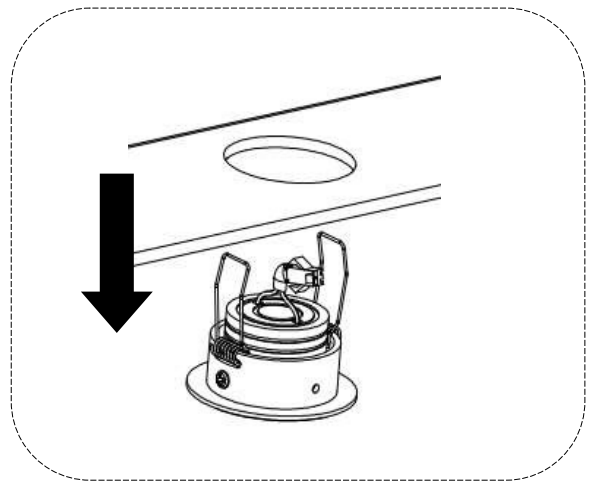

Reverse the above steps to reinstall the Spotlight.


STEAMER REPLACEMENT

1. REMOVE THE LEFT SIDE PANEL

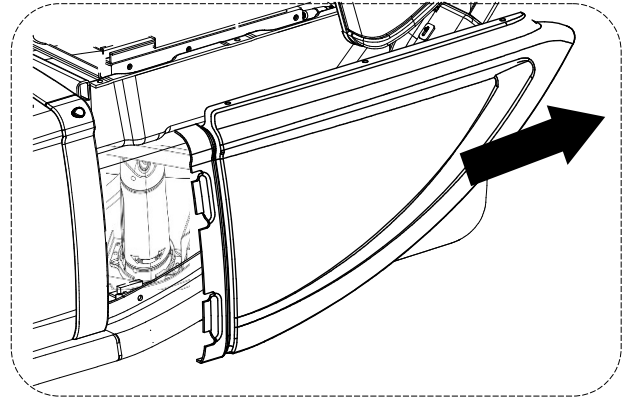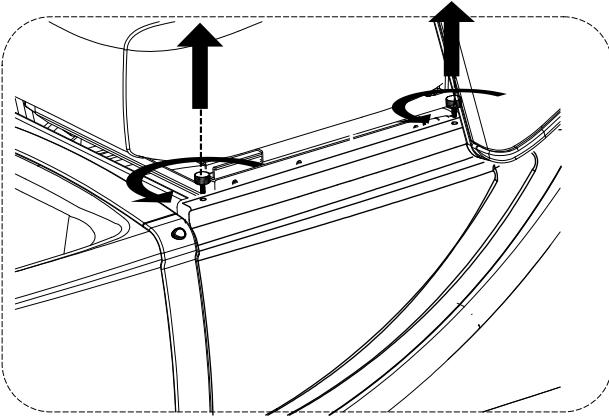


Swing up the left armrest
 Unscrew the 2 thumbscrews as indicated in the above figure
 Remove the side panel by lift the panel out of the holder then pull out the panel.


2. REPLACE THE STEAMER

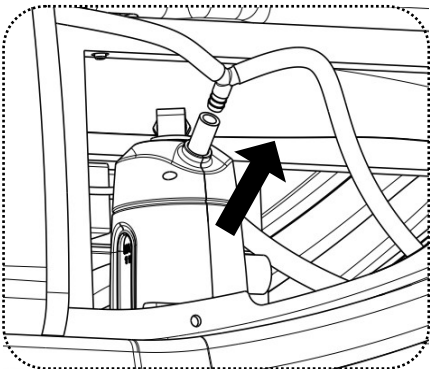


Remove "Y" Air Connector
 Use Pliers to loose the metal ring and remove the connector.

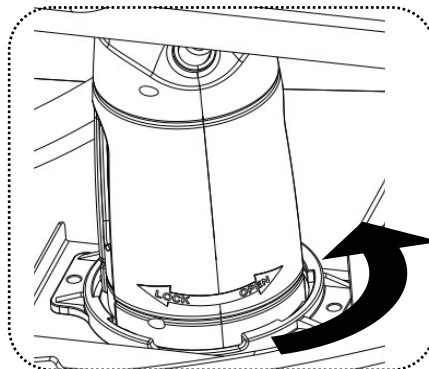


Turn the Steamer counter-clockwise $\frac{1}{4}$ turn then lift up to remove.

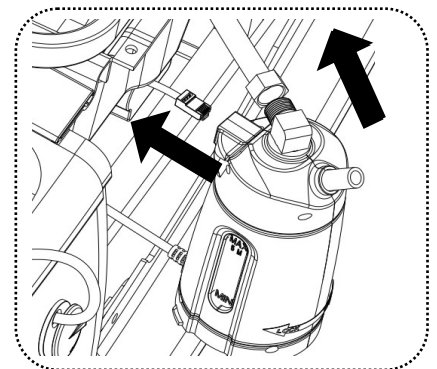

Press down the latching on signal cable connector then pull out using a wrench to remove the water hose.

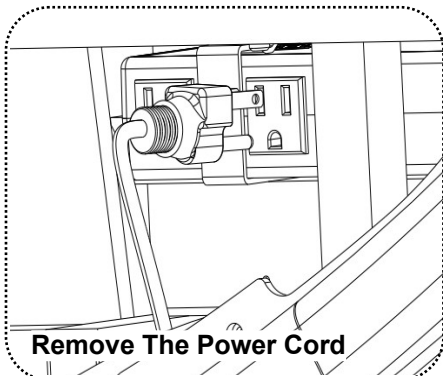

Remove The Power Cord


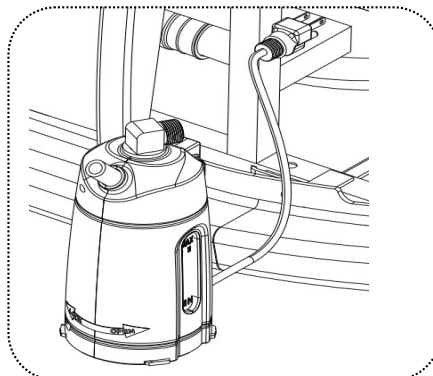


Caution: When reconnect the hose, make sure tighten it by hand and $\frac{1}{2}$ turn by wrench.

Reverse the above steps to reinstall the Steamer.





AF-CONTROL BOX REPLACEMENT

1. REMOVE THE RIGHT SIDE PANEL

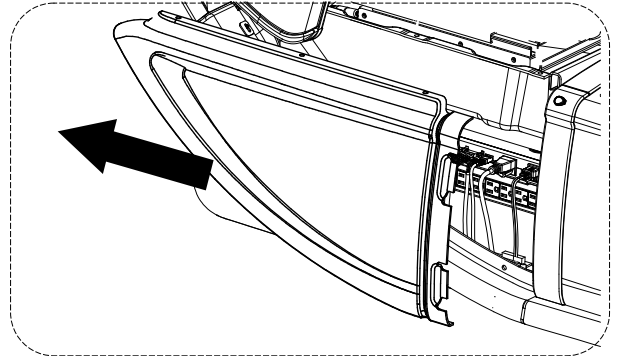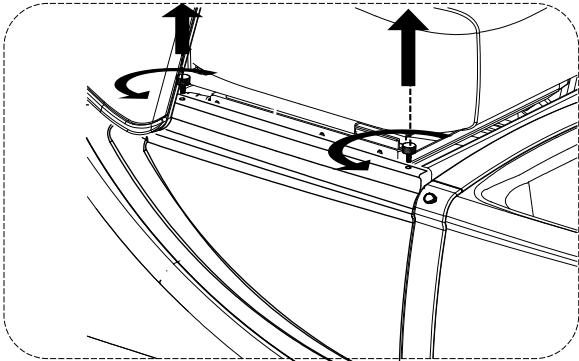

Swing up the right armrest. Unscrew the 2 thumbscrews as indicated in the above figure. Remove the side panel by lift the panel out of the holder then pull out the panel.


2. REPLACE AF-CONTROL BOX

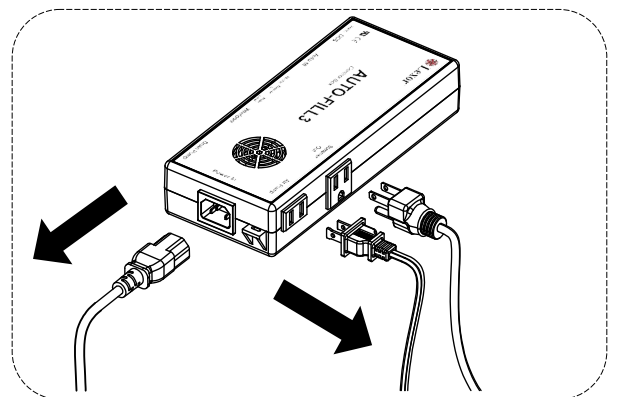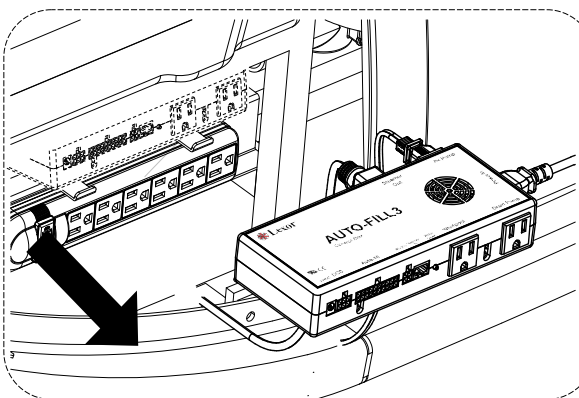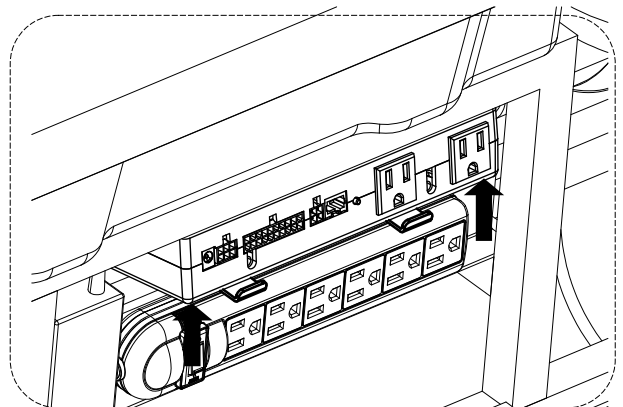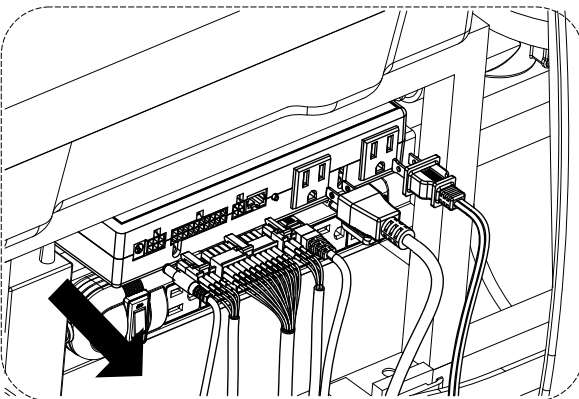

Remove all the connectors on the front of AF-Control Box. Push up and pull AF-Control Box out of the holder then remove the 3 remaining power plugs.

Reverse the above steps to reinstall the AF-Control Box. Refer to wiring diagram on the next page for installation.

3. WIRING DIAGRAM AF-CONTROL BOX

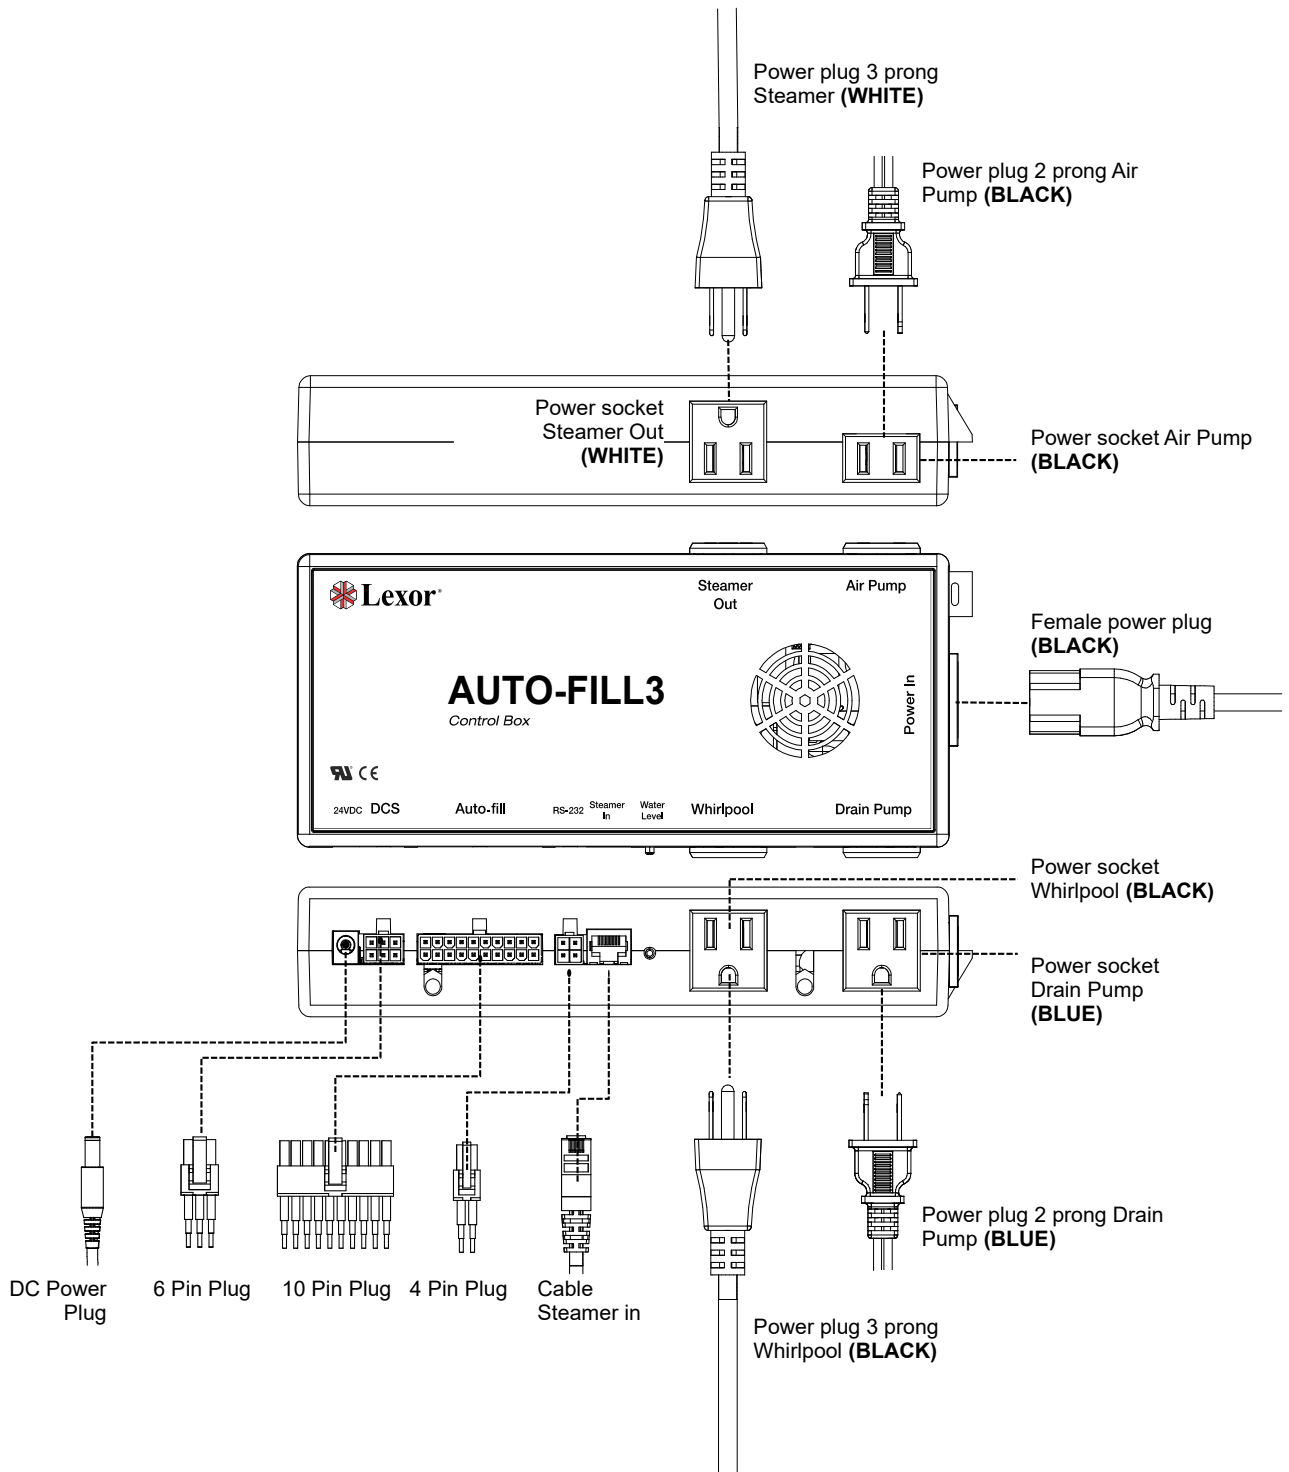

REMOVING THE DRAIN KNOB & THE AUTO-FILL/JET KNOB


1. REMOVING THE DRAIN KNOB.

Step 1. Pull out part 1.

Step 2. Loosen (do not remove) 3 black screws (**note: there are 3 black screws interspersed with 3 white screws**). Then, remove part 2 from the front panel.

Step 3. Remove the 3 screws at the back of part 2 to remove the cover.

Step 4. Unplug the signal wire and remove the cable.

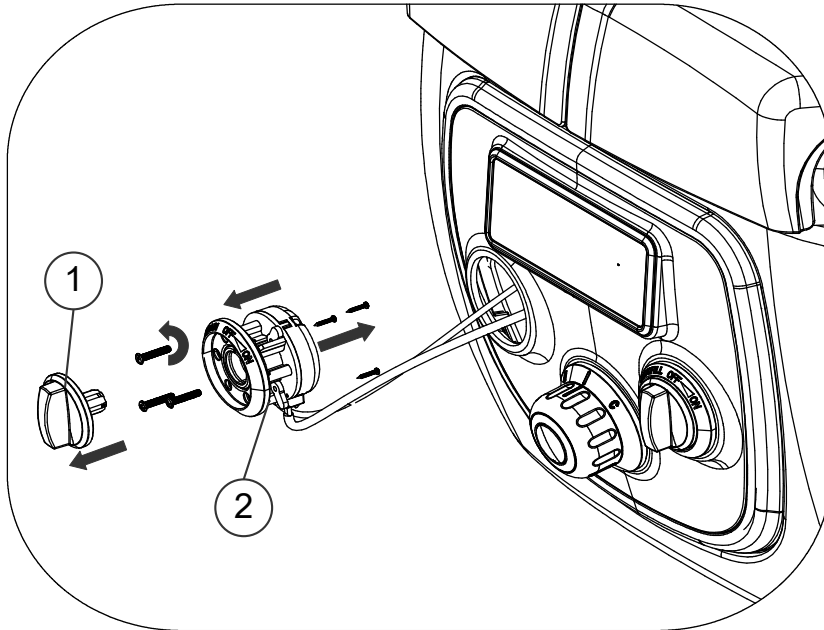


2. REMOVING THE AUTO-FILL/JET KNOB.

Step 1. Pull out part 1.


Step 2. Loosen (do not remove) 3 black screws (**note: there are 3 black screws interspersed with 3 white screws**). Then, remove part 2 from the front panel.

Step 3. Unplug the signal wire.

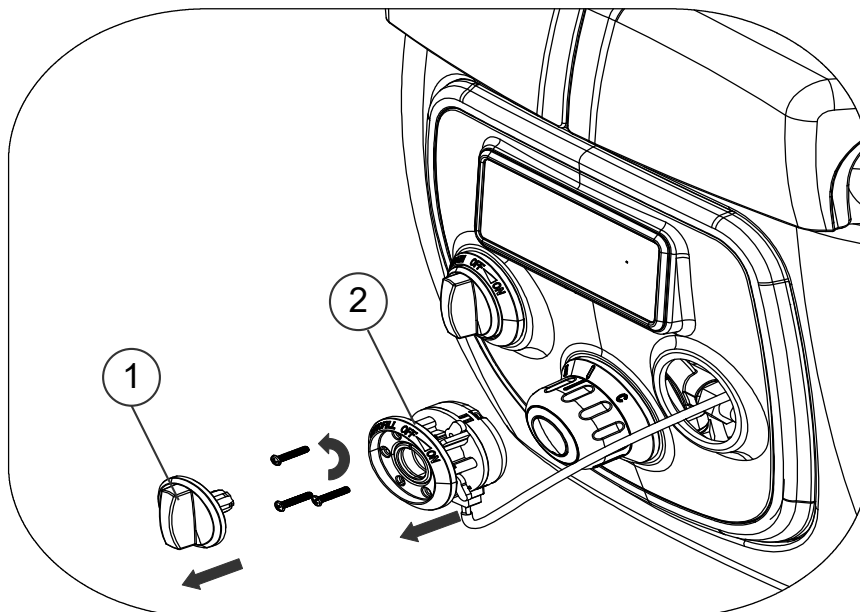


REMOVING THE FRONT PANEL


Step 1: Remove the digital control panel by hand. Then, remove all the signal wire connectors at the digital control panel.

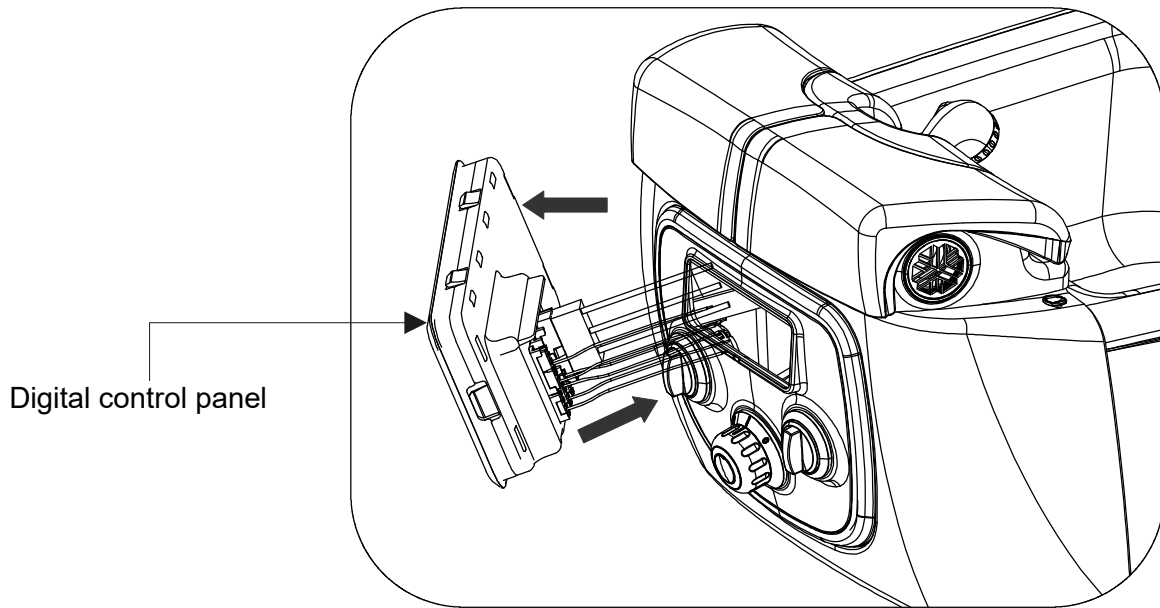

Step 2: Remove the 2 mounting screws of the front panel.

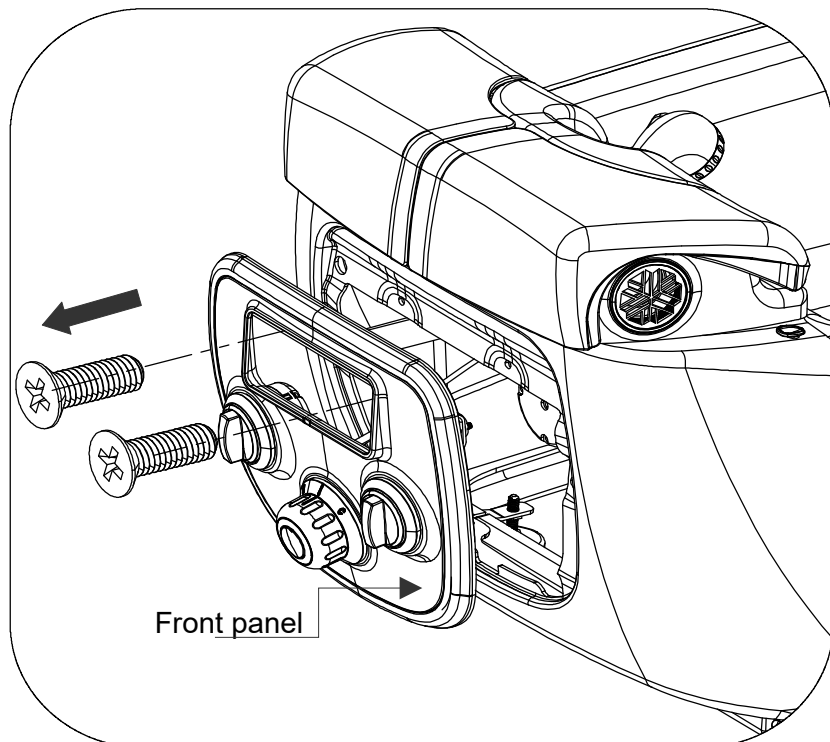

Faucet Assembly Instruction

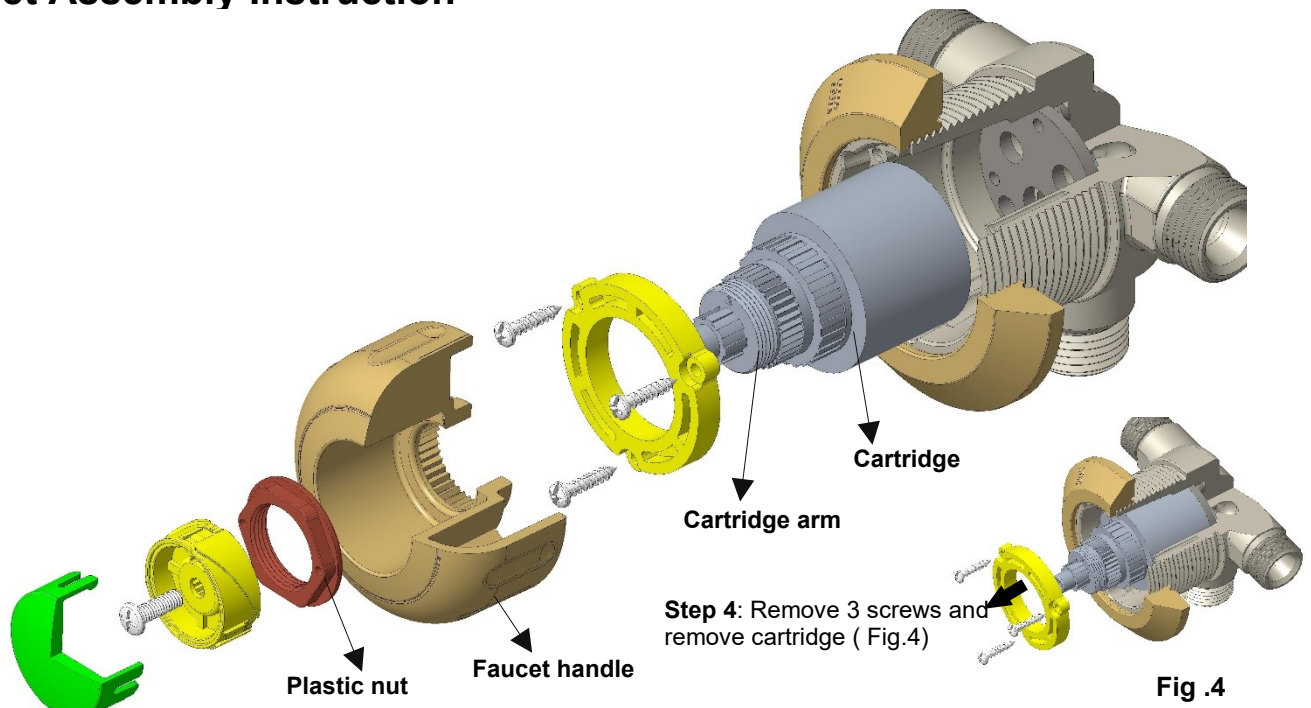

Step 1: To open cap cover , use a pointed object (pen tip, toothpick head...)put at trench of cap cover and rotate counter clockwise (Fig.1).

Step 2: Remove mounting screw and remove push button (Fig.2).

Step 3: Insert socket tool into faucet body to remove plastic nut and faucet handle (rotate counter clockwise) (Fig.3).

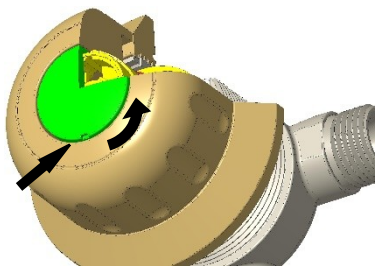


Fig .1

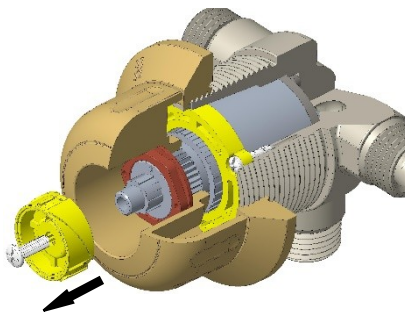


Fig .2

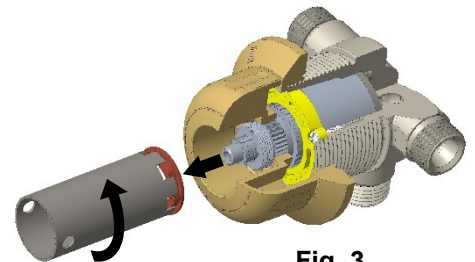


Fig .3

Step 5: When replacing the new cartridge. Pay fully attention on the 2 locking pins and the 2 guide holes (fig .5) they must be fully inserted and kept in place during the process to avoid leaking.

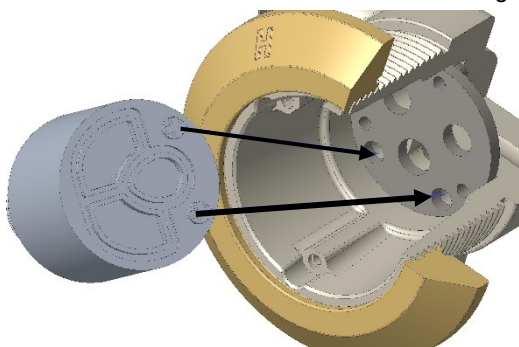


Fig .5

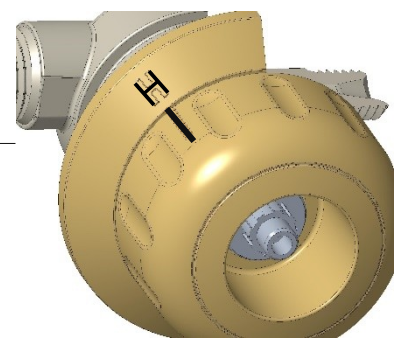


Fig .6.1

Step 6: Plug the cartridge into the valve body as instructed in step 5.

- Reverse step 4 by install the cartridge ring and 3 screws.
- Slowly turn the cartridge arm all the way to the left " H" (see Fig.6.1) or match the arrow inside the valve body (see fig.6.2) .
- Line up the trench mark on the faucet handle with the "H" on the valve body and reverse step 3 to secure them .
- Reverse step 2 to install the push button .
- Reverse step 1 to install the push button chrome cover.

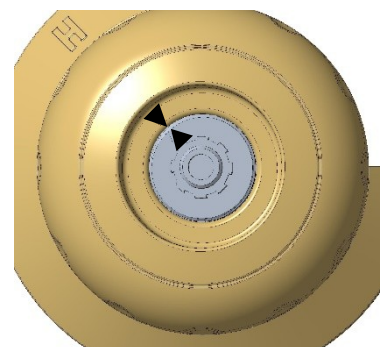
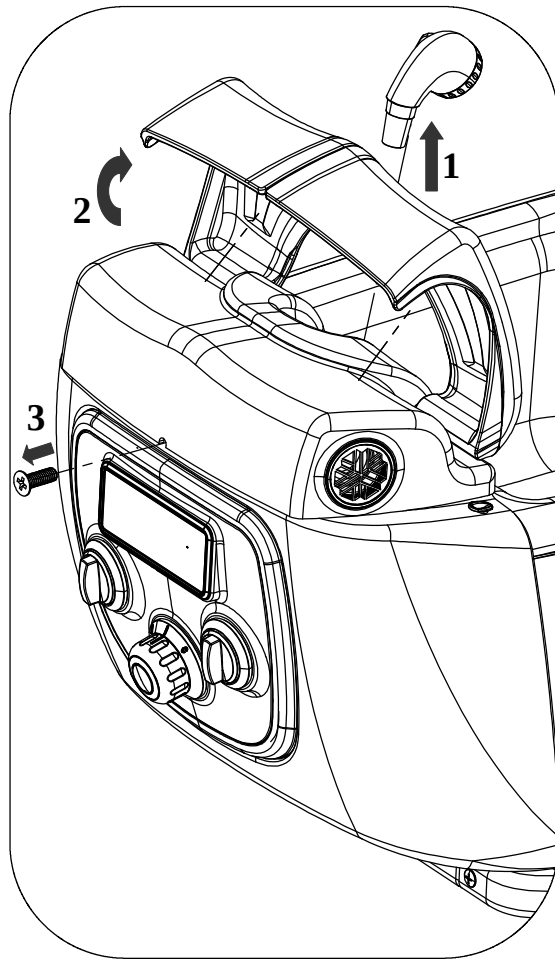



Fig .6.2

REMOVING THE FOOTREST.**STEP 1.**

1. Pull out & remove the spout and do not let the hose drop into the bottom base.
2. Raise the calf support.
3. Remove the screw on front of footrest.

**STEP 2.**

Lift up the footrest & push footrest backward.

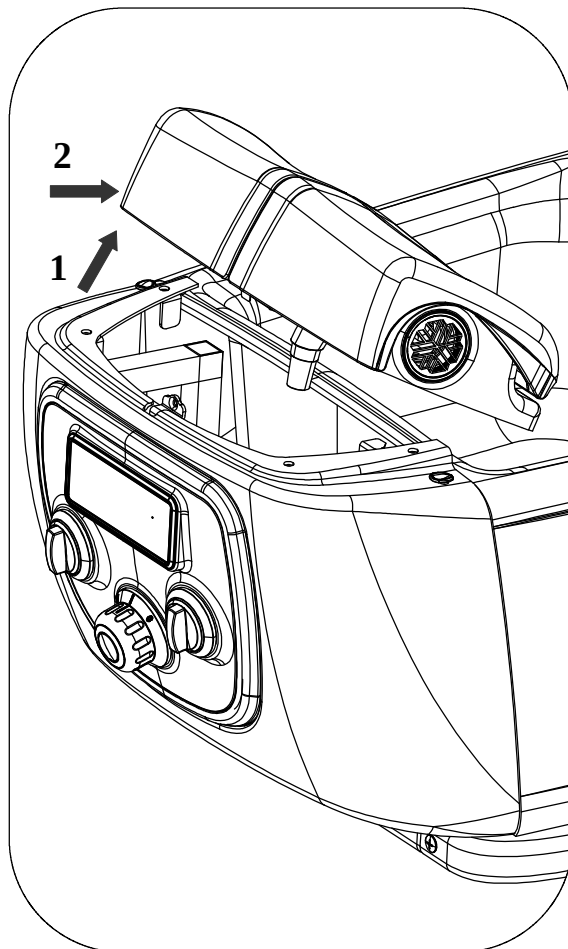

**WARNING:**

YOU MUST ALWAYS REFER TO YOUR STATE OR LOCAL GUIDELINES FOR CLEANING REQUIREMENTS, OVERNIGHT SOAKING WITH OVERDOSED CHLORINE MAY DAMAGE RUBBER PART IN BASIN

CLEANING PROCEDURE IS REQUIRED BY STATE BOARDS

Note: * A cleaning log should be kept with each pedicure spa *****

Each State will have slight differences in cleaning policies, please check with your state's Bureau of Barbering and Cosmetology or Regulatory Authority for specific details.

Safety Requirements for Pedicure Spas

The Bureau of Barbering and Cosmetology requires that salons using whirlpool pedicure foot spas must follow these disinfecting procedures to ensure proper cleaning and maintenance of the equipment and prevent bacterial or parasitic spread disease.

Violation of this section may result in an administrative fine and/or disciplinary action. Each foot spa that is not in compliance with this section may result in a separate violation.

NOTE: Authority cited: Section 7312, Business and Profession Code. Reference: Section 7312 (e), Business and Profession Code.

Below is a suggestion for your pedicure spa chair's cleaning procedure:

After each customer

1. All water shall be drained and all debris shall be removed from the spa basin.
2. The spa basin must be cleaned with soap or detergent and water
3. The spa basin must be disinfected with an EPA-registered disinfectant with demonstrated bactericidal, fungicidal, and virucidal activity, which must be used according to the manufacturer's instructions.
4. The spa basin must be wiped dry with a clean towel.

At the end of each day

1. The screen shall be removed, all debris trapped behind the screen shall be removed, and the screen and the inlet shall be washed with soap or detergent and water.
2. Before replacing the screen, the screen shall be immersed in an EPA-registered disinfectant with demonstrated bactericidal, fungicidal, and virucidal activity, which must be used according to the manufacturer's instructions.
3. The spa system shall be flushed with low sudsing soap and warm for at least 10 minutes, after which the spa shall be rinsed and drained.

At least once a week

1. The spa basin shall be filled with warm water and 1 teaspoon of 5.25% bleach for each gallon of water, or a solution of Sodium Hypochlorite of approximately 50ppm used according to manufacturer's instructions.
2. The spa system shall be flushed with the bleach and water solution, or Sodium Hypochlorite solution, for 5-10 minutes and allowed to sit for 6-10 hours.
3. The spa system shall be drained and flushed with water before use upon a patron.



LIMITED WARRANTY

Updated: 5/23/2022

TERM COMMENCEMENT:

Limited warranty term commences on date product is received by the customer.

2-YEAR PARTS EXCHANGE LIMITED WARRANTY:

All parts for the pedicure spa chair model: Prive Lounge, Prestige, Envision Spa, Elite, Liberte, Luminous and Infinity.

90-DAY PARTS EXCHANGE LIMITED WARRANTY ON INDIVIDUAL PARTS SOLD:

All purchased parts will be covered for 90-Day parts exchange only.

NON-WARRANTY PRODUCT:

This limited Warranty is not covered on Furniture, Technician Stools/Customer Chairs, and Accessories.

PART REPLACEMENT SHIPPING FEE:

Shipping fee for replacement parts are covered under this Limited Warranty. Customers must return the defective parts to Lexor. at customer's expense. The defective part must include the RETURN AUTHORIZATION NUMBER (RMA number) which is provided by Lexor's Customer Support Representative. The RMA number will help us locate the parts and complete the service in a timely manner. Lexor is not responsible for missing/lost returned defective parts which are being returned without the RMA number issued.

PARTIAL TERMS AND CONDITIONS OF LIMITED WARRANTY:

Wear and tear, thermal stress crack on glass and marble, physical damage, abuse, misuse, accidental events are not included in this Limited Warranty. Replacement parts are supplied with instructions and specially designed for simple installation; therefore, do not require a technician onsite.

SHIPPING DAMAGE CLAIM:

Shipping damages must be reported within Twenty-Four (24) Hours after receiving the products. Customers must inspect the shipment to make sure there are no damages prior to signing the Bill of Lading (BOL - provided by the trucking company). If there is any damage to the shipment, please notate it on the BOL before signing it and contact Lexor's Customer Support immediately for making a damage report.

WARRANTY DISCLAIMER:

Lexor shall have no obligation to repair, replace or refund until the verification process is completed. This limited warranty applies only to Lexor Pedicure Spa Chairs utilized in the United States. This Limited Warranty is not transferable. This Warranty is void if products are removed from its initial location of shipment as provided from the invoice. Furthermore, the Limited Warranty is void if the product is subjected to improper maintenance, negligence, improper cleaning or any other circumstances beyond Lexor's control.

Continuing a policy of constant research and development to improve the quality of our products. Lexor, Inc. reserves the right to change pricing, parts, designs and specifications without prior notice or obligation under this Limited Warranty.

Lexor Manufacturing, LLC.
7400 Hazard Ave. Westminster, CA 92683
Customer Support (800)559-3030

QMTX.E319402
Plumbing Accessories

LEXOR INC E319402

7400 Hazard Ave

Westminster Ca 92683

Pedicure Spa, Model(s) Prestige

Pedicure spas, Model(s) Elite, Infinity

Pedicure spas, additionally classified in accordance with the water retention requirements of ASME/ANSI A112.19.7M-2006, Model(s) Ambience, Elite Platinum, Elite Ultra, Envision, Essencia, Liberte, Luminous, Magna, Mystique, Q-Spa, Spa 100, Spa 200, Spa 300, PSD 400-xxx, Stellar, Ultima, Utopia, V-Spa, Versas, Vigor, Vista, Prive

QMTX7.E319402
Plumbing Accessories Certified for Canada

LEXOR INC E319402

7400 Hazard Ave

Westminster Ca 92683

Pedicure Spa, Model(s) Prestige

Pedicure Spa, Model(s) Prestige

Pedicure spas, additionally classified in accordance with the water retention requirements of ASME/ANSI A112.19.7M-2006, Model(s) Ambience, Elite Platinum, Elite Ultra, Envision, Essencia, Liberte, Luminous, Magna, Mystique, Q-Spa, Spa 100, Spa 200, Spa 300, PSD 400-xxx, Stellar, Ultima, Utopia, V-Spa, Versas, Vigor, Vista



THE KEY TO SALON SUCCESS

HƯỚNG DẪN SỬ DỤNG GHẾ PRIVE PEDI SPA

NHẬN VÀ KIỂM TRA: Nếu phát hiện thấy các bộ phận bị thiếu hoặc hư hỏng, vui lòng thông báo cho người vận chuyển ngay lập tức và yêu cầu ghi rõ về thiệt hại trên vận đơn. **KHÔNG VỨT BỎ THÙNG HÀNG.** Nếu bạn giao biên nhận của hàng bị hư trong quá trình vận tải cho phía hãng vận chuyển, thì bạn có thể sẽ không được bồi thường thiệt hại.

Mục Lục

CÁC BỘ PHẬN CHÍNH CỦA DÒNG GHẾ PRIVE®	2
HƯỚNG DẪN KHOẢNG CÁCH ĐẶT GHẾ	3
HƯỚNG DẪN LẮP ĐẶT MÁI VÒM	4
HƯỚNG DẪN LẮP ĐẶT NỆM GHẾ	5
HƯỚNG DẪN LẮP ĐẶT HỆ THỐNG THOÁT NƯỚC	8
HƯỚNG DẪN LẮP ĐẶT HỆ THỐNG THÔNG KHÍ (TÙY CHỌN)	11
THÔNG SỐ VỀ ĐIỆN VÀ LINH KIỆN GHẾ PEDI SPA	12
THIẾT LẬP TRƯỚC KHI VẬN HÀNH	13
VẬN HÀNH AUTO-FILL / JET SWITCH	15
VẬN HÀNH BẰNG ĐIỀU KHIỂN KỸ THUẬT SỐ	16
THIẾT LẬP LẠI CẢM BIẾN NƯỚC VÀ MỰC NƯỚC	17
HỆ THỐNG MASSAGE VÀ BỘ ĐIỀU KHIỂN TỪ XA	19
HƯỚNG DẪN THAY THẾ ĐÈN SPOTLIGHT MÁI VÒM	20
HƯỚNG DẪN THAY THẾ THIẾT BỊ STEAMER	21
HƯỚNG DẪN THAY THẾ HỘP ĐIỀU KHIỂN AUTO-FILL™	22
HƯỚNG DẪN THÁO NẮM VẬN XẢ DRAIN VÀ NẮM VẬN AUTO-FILL	24
HƯỚNG DẪN THÁO BẢNG ĐIỀU KHIỂN	25
HƯỚNG DẪN LẮP RÁP FAUCET	26
HƯỚNG DẪN THÁO GỐI CHÂN	27

CẢNH BÁO



1. Sản phẩm này chỉ sử dụng trong nhà & không được khuyến khích sử dụng trên thảm hoặc sàn gỗ
2. Sản phẩm phải được kết nối với ổ điện có thiết bị ngắt mạch Loại A (GFCI)
3. **KHÔNG SỬ DỤNG** nếu bạn có hệ tuần hoàn kém, hoặc bất kỳ vùng nào của bàn chân và chân có vết thương hở
4. Nhiệt độ nước cao nhất không được vượt quá 100 độ F.
5. **KHÔNG BƯỚC** hoặc **ĐỨNG TRONG CHẬU**
6. **KHÔNG** sử dụng các thiết bị điện tử gần ghế Pedi Spa
7. Trọng tải tối đa của ghế là 250 lbs (114 kg)


BẠN PHẢI LẮP ĐẶT GHẾ THEO ĐÚNG QUY CÁCH TRONG BẢN HƯỚNG DẪN NÀY. NẾU KHÔNG SẼ GÂY RA TAI NẠN NGHIÊM TRỌNG VÀ SẼ KHÔNG ĐƯỢC ÁP DỤNG QUY CHẾ BẢO HÀNH. GHẾ CẦN PHẢI ĐƯỢC CHUYÊN VIÊN ỒNG NƯỚC CÓ BẰNG HÀNH NGHỀ LẮP ĐẶT AN TOÀN.

LƯU Ý TỪ TIỂU BANG

Theo quy định chung của Liên Bang, tất cả các ghế spa được lắp ráp và sử dụng với mục đích thương mại tại tiểu bang đó, phải được trang bị backflow preventer. Thiết bị này được lắp đặt giữa ống cấp nước và vòi sen và do chủ salon tự chi trả.

VUI LÒNG LƯU LẠI CÁC HƯỚNG DẪN NÀY ĐỂ SỬ DỤNG VỀ SAU



Các bộ phận chính của dòng ghế PRIVE®

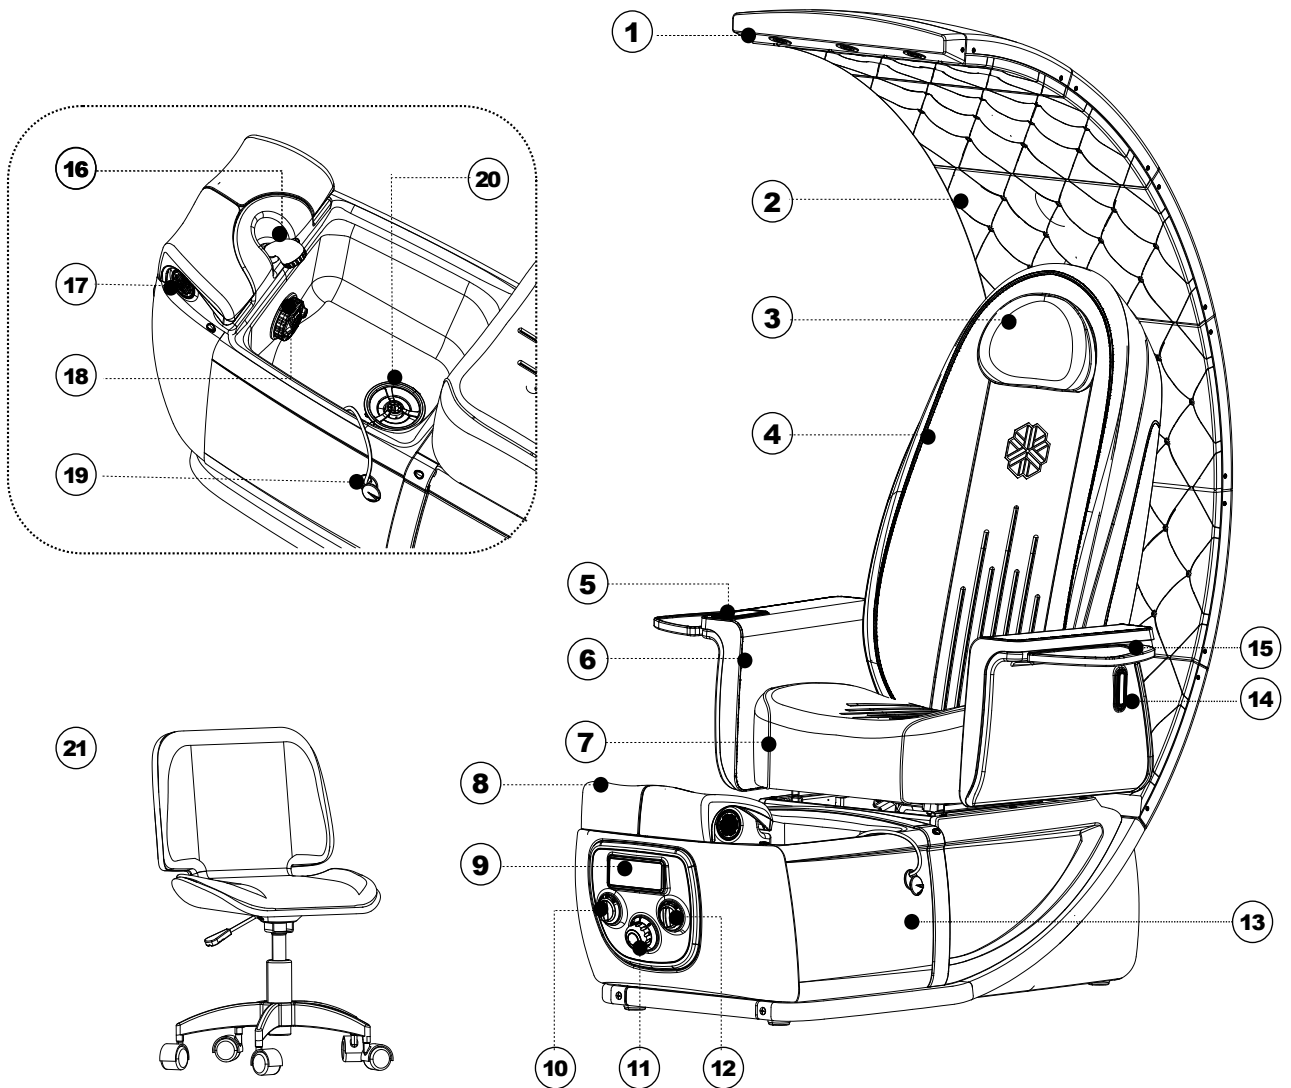

Ghế Pedicure Spa với hệ thống Massage

- | | |
|----------------------------------|--|
| 1. Đèn spotlight mái vòm | 11. Nắm vặn nước nóng/lạnh |
| 2. Mái vòm | 12. Nắm vặn Auto-fill/Jet |
| 3. Gối đầu | 13. Chậu Aurora |
| 4. Nệm lưng với hệ thống Massage | 14. Móc giỏ xách |
| 5. Điều khiển massage | 15. Khay làm móng tay |
| 6. Tay ghế với nệm | 16. Vòi sen |
| 7. Nệm ngồi | 17. Lỗ hút khí |
| 8. Gối chân | 18. Bộ ECOJET™ Magnetic drive |
| 9. Bảng điều khiển kỹ thuật số | 19. Thiết bị an toàn cho hệ thống xông hơi |
| 10. Nắm vặn bộ xả nước | 20. Bộ Air ring therma Jet |
| | 21. Ghế kỹ thuật viên prive |


HƯỚNG DẪN KHOẢNG CÁCH ĐẶT GHẾ

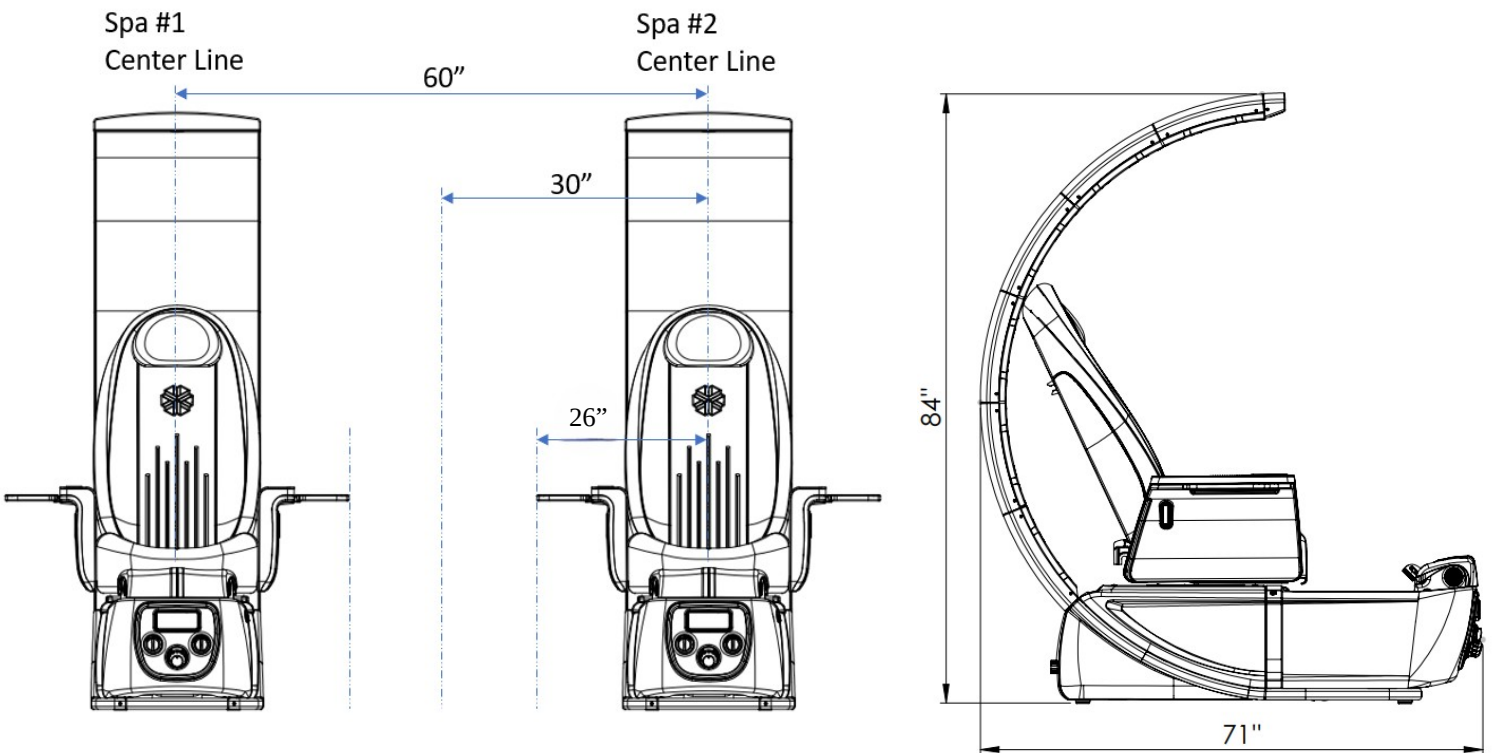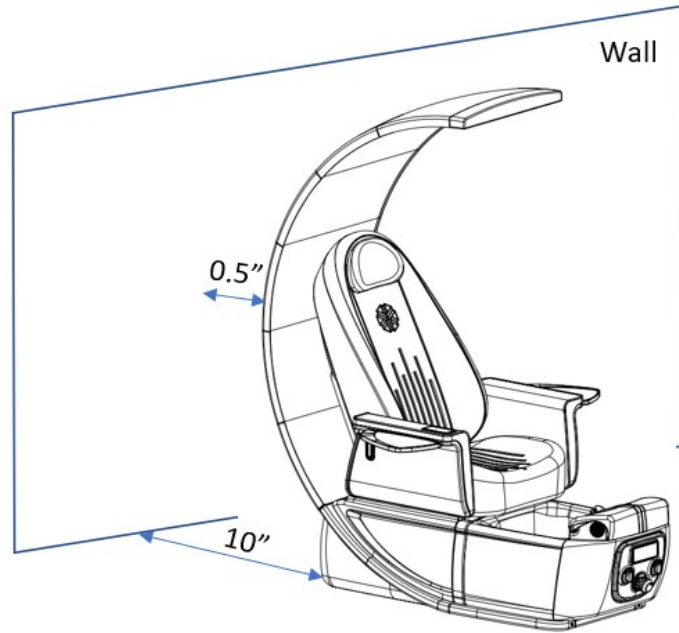

RẤT QUAN TRỌNG: Khoảng cách tối thiểu giữa mái vòm đến vách tường là 0,5 inch / 1,25cm và từ ghế Spa đến tường là 10 inch / 25,4cm cần phải được tuân thủ để đủ khoảng cách cho mái vòm và hệ thống ống nước không bị cản trở khi vận hành. Việc không tuân thủ theo điều kiện trên có thể dẫn đến việc hư hỏng nghiêm trọng với ghế Spa và không an toàn khi sử dụng.


LẮP ĐẶT MÁI VÒM

1. LẮP MÁI VÒM DƯỚI

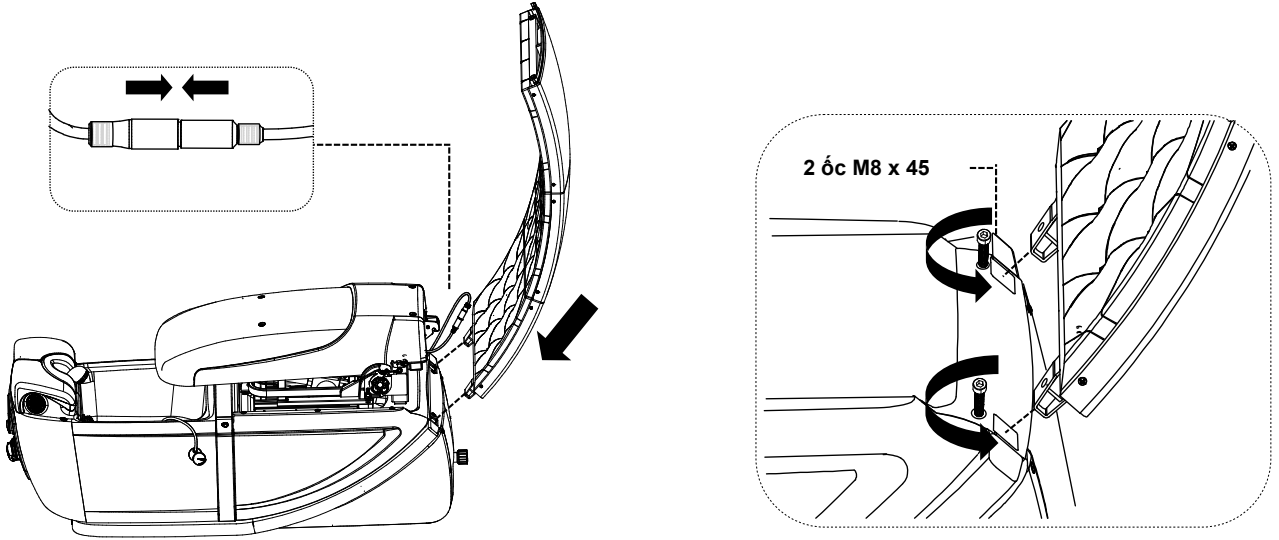

Bước 1: Lắp đặt mái vòm dưới bằng cách cắm 2 chốt của mái vòm dưới (có tem "Lower Dome") vào khung đế Spa, sau đó cố định 2 bu lông M8x45 (được gắn sẵn trên đế). Xác định vị trí và kết nối hai đầu cắm của dây đèn Spotlight.

2. LẮP MÁI VÒM TRÊN


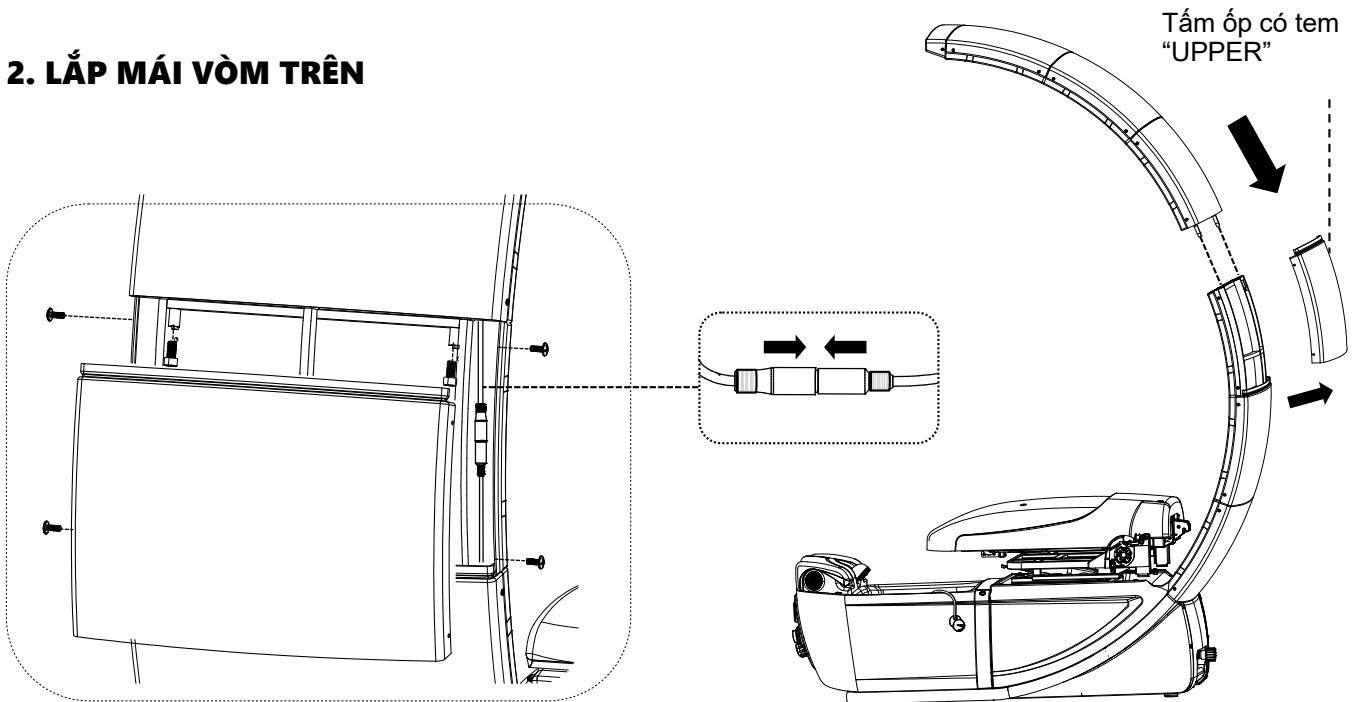


Bước 2: Mở tấm ốp có tem "UPPER". Lắp đặt mái vòm trên bằng cách cắm 2 chốt ở khung mái vòm trên vào lỗ trên khung mái vòm dưới. Sau đó cố định 2 bu lông M8 x 20 (trong túi linh kiện). Xác định vị trí và kết nối hai đầu nối của dây đèn Spotlight. Lắp lại tấm ốp.


LẮP ĐẶT PHẦN NỆM GHẾ

1. GẬP MỞ LƯNG GHẾ MASSAGE





Nhấc lưng ghế lên cho đến khi nghe thấy tiếng "tách". Phải đảm bảo chốt khóa đã được khóa lại trước khi vận hành.

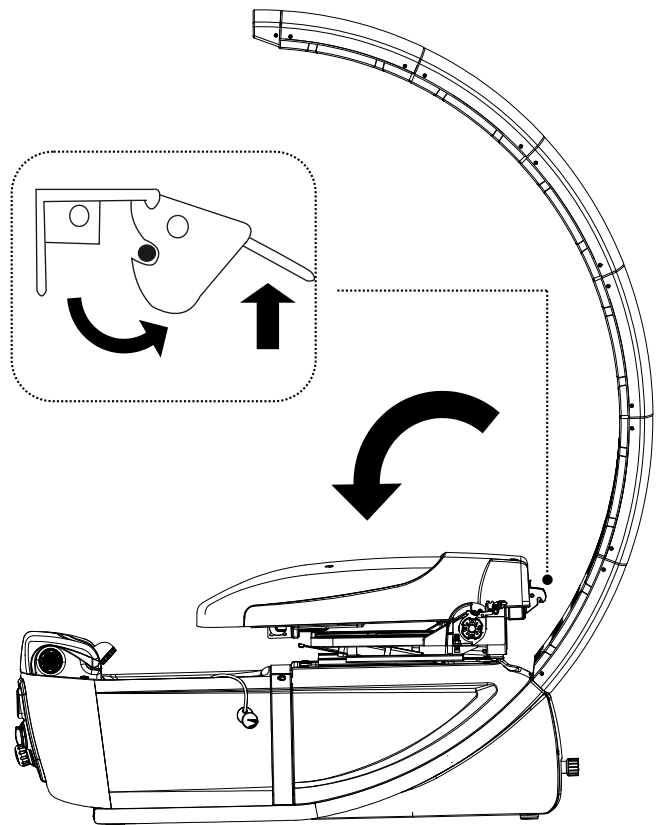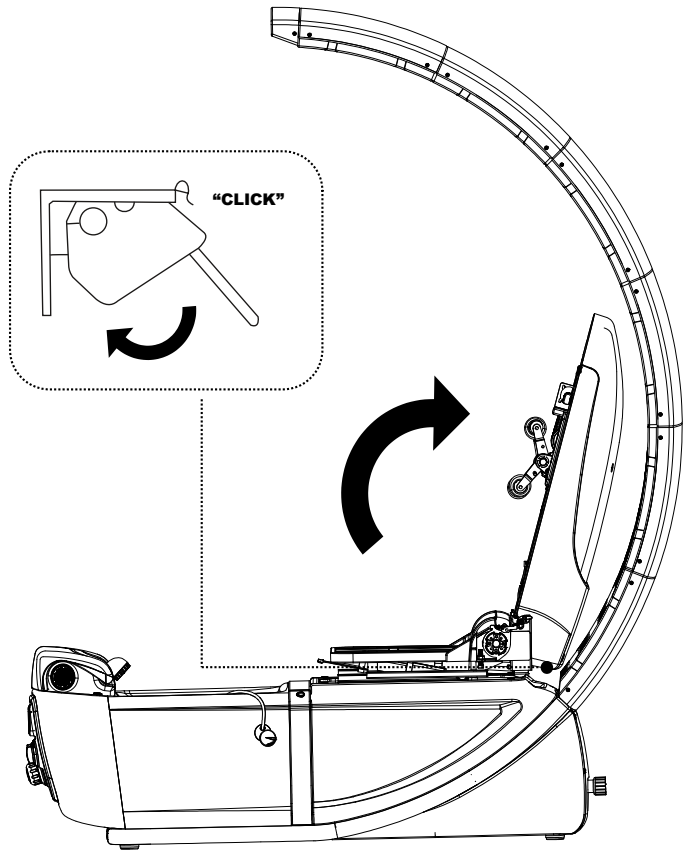

Để gập lưng ghế lại: Nâng chốt khóa lên và gập lưng ghế xuống.

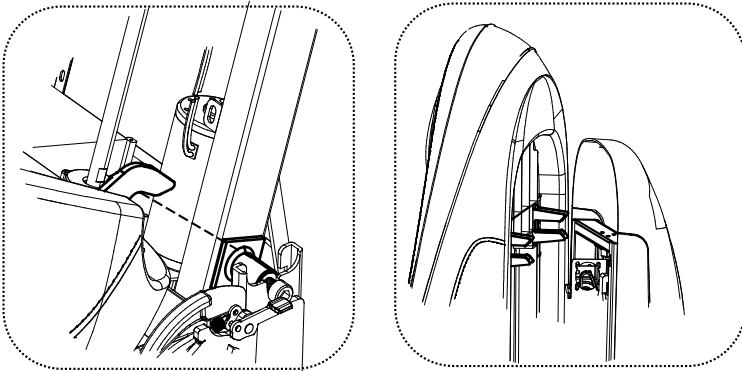2. LẮP NỆM LƯNG

Lắp nệm lưng bằng cách gắn 2 móc dưới của nệm vào trục trên khung massage. Định vị phía trên của nệm lưng, sau đó gắn ngàm nhựa của nệm lưng vào thanh ngang của khung massage, ấn chặt nệm lưng vào khung massage để cố định.

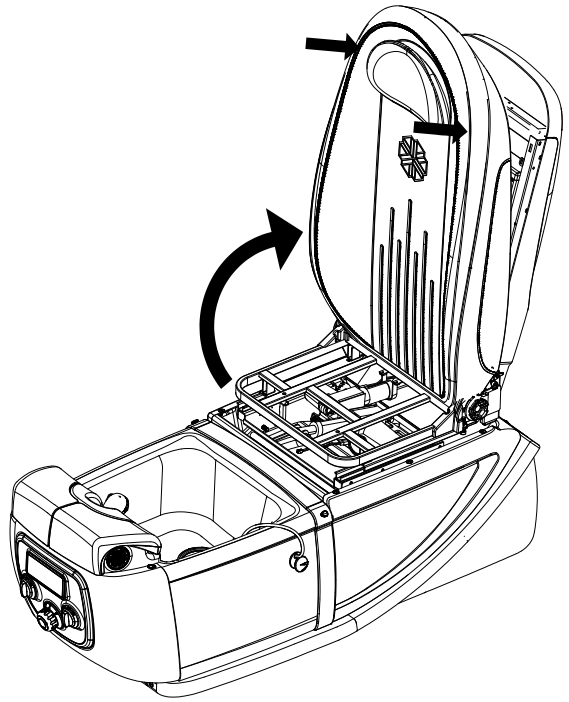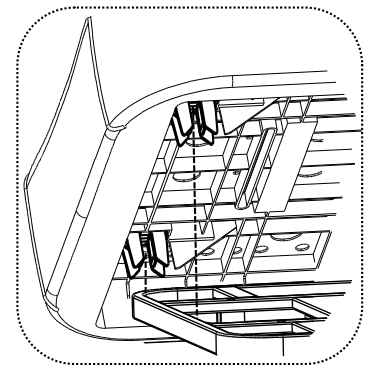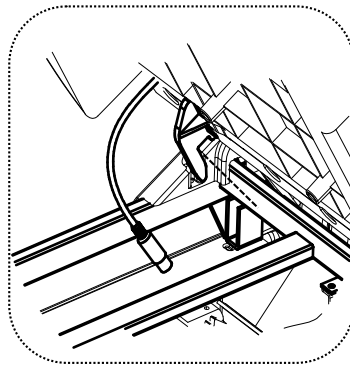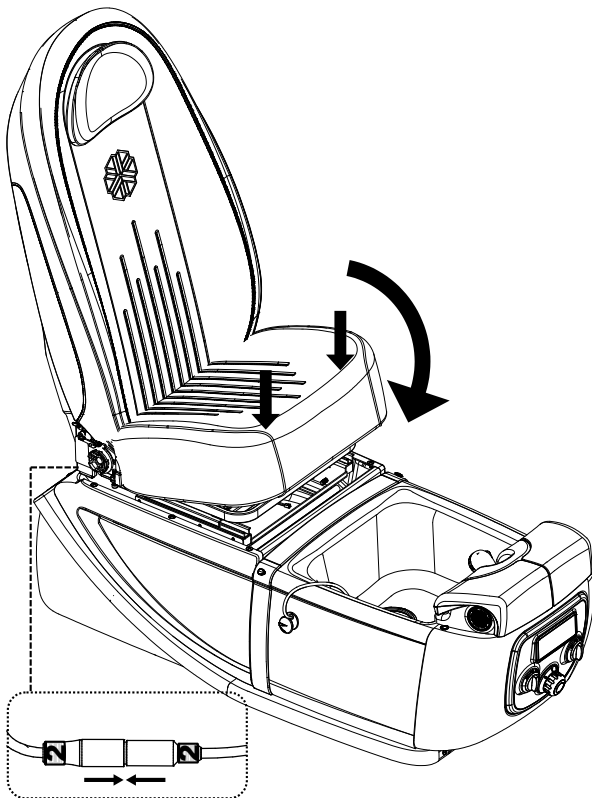**3. LẮP NỆM NGỒI**

Lắp nệm ngồi bằng cách đặt 2 móc phía sau của nệm ngồi vào khung ghế.

Định vị nệm ngồi sau đó lắp ngàm nhựa của nệm ngồi vào khung ghế. Ấn chặt nệm ghế vào khung ghế để cố định.


Kết nối 2 đầu nối có nhãn "2" từ nệm ngồi đến đế Spa.

LƯU Ý:


Dây & Đầu nối số 2 phải được luồn dưới khung ghế.
KHÔNG cắm đầu nối (+) của số 2 vào đầu nối (-) của số 1.

HƯỚNG DẪN LẮP RÁP TAY GHẾ

Bước 1: Lắp tay ghế bằng cách đưa chi tiết A lọt vào chi tiết B và lắc nhẹ tay ghế trong khi xoay nắm vặn theo chiều kim đồng hồ để cố định tay ghế.

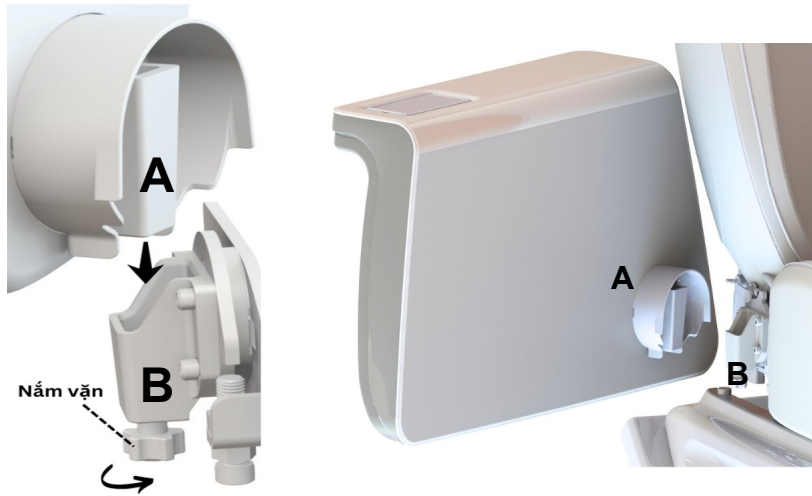

Bước 2: Kết nối 2 đầu có dán nhãn "1" và 2 đầu có dán nhãn "3" lại với nhau (phía tay ghế phải).

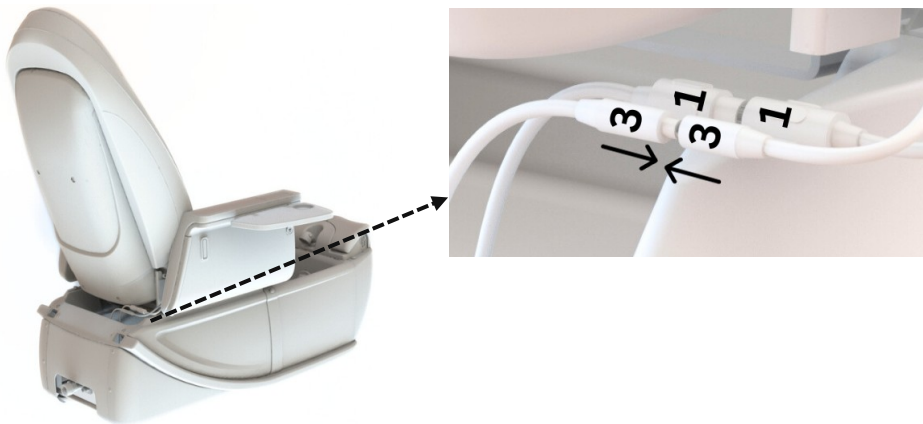

Lưu ý: Nếu tay ghế không nằm song song với mặt sàn, ta có thể điều chỉnh bằng cách vặn bulong ở phía dưới của khung bàn ngồi. Sau khi điều chỉnh, siết đai ốc để khóa.




LẮP ĐẶT HỆ THỐNG THOÁT NƯỚC

LƯU Ý: Việc lắp đặt hệ thống thoát nước và cấp nước phải được thi công với thợ ống nước có bằng hành nghề. Chi tiết hướng dẫn có thể được tìm thấy trong sách hướng dẫn. Hướng dẫn và mã hệ thống ống nước cần phải được tuân thủ tuyệt đối để được phê chuẩn kiểm tra của thành phố.

1. HỆ THỐNG THOÁT NƯỚC TỰ CHẢY**THOÁT NƯỚC TỰ CHẢY**

Ống mềm dễ uốn 1-1/4" với đầu nối có thể tháo rời, được cung cấp để dễ dàng lắp đặt.

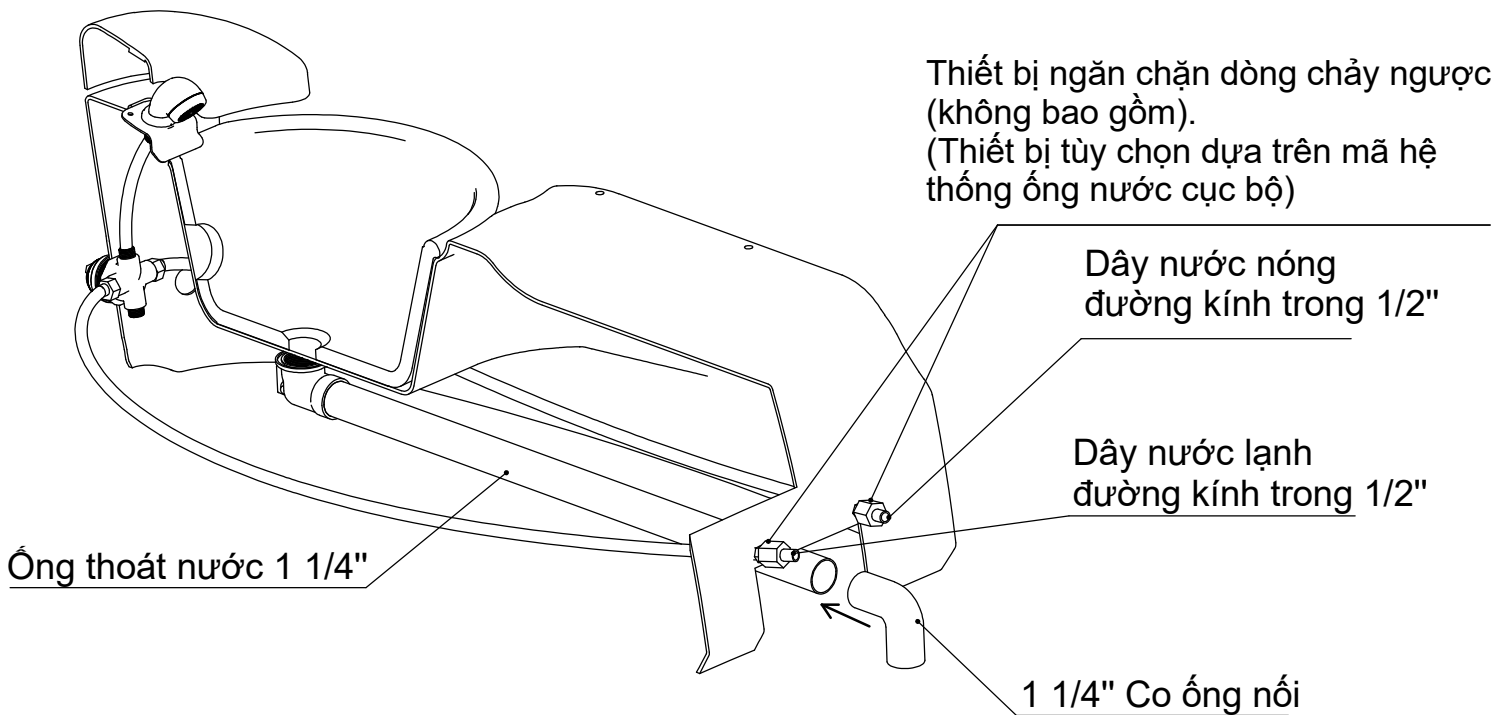

Việc lắp đặt hệ thống thoát nước tự chảy phải tuân theo MỤC 701.0, 2018 UPC.


P-trap, lỗ thông hơi và đầu nối phải tuân theo MỤC 1001.1 và 1001.2 UPC.

Các quốc gia không áp dụng UPC cần phải tuân thủ một mã thay thế.

- Hệ thống thoát nước: MỤC 701.2 và 702.2 IPC (hoặc mã đường ống dẫn nước địa phương).
- P-trap, lỗ thông hơi và đầu nối: MỤC 1002.1 và 1002.2 IPC (hoặc mã đường ống dẫn nước cục bộ).

Người lắp đặt/thợ sửa ống nước có trách nhiệm thu thập và tuân thủ mã hệ thống nước địa phương để kiểm tra. Nếu cần bất kỳ hỗ trợ nào từ phía nhà cung cấp, vui lòng liên hệ với bộ phận dịch vụ khách hàng của chúng tôi.

2. HỆ THỐNG THOÁT NƯỚC BẰNG BƠM

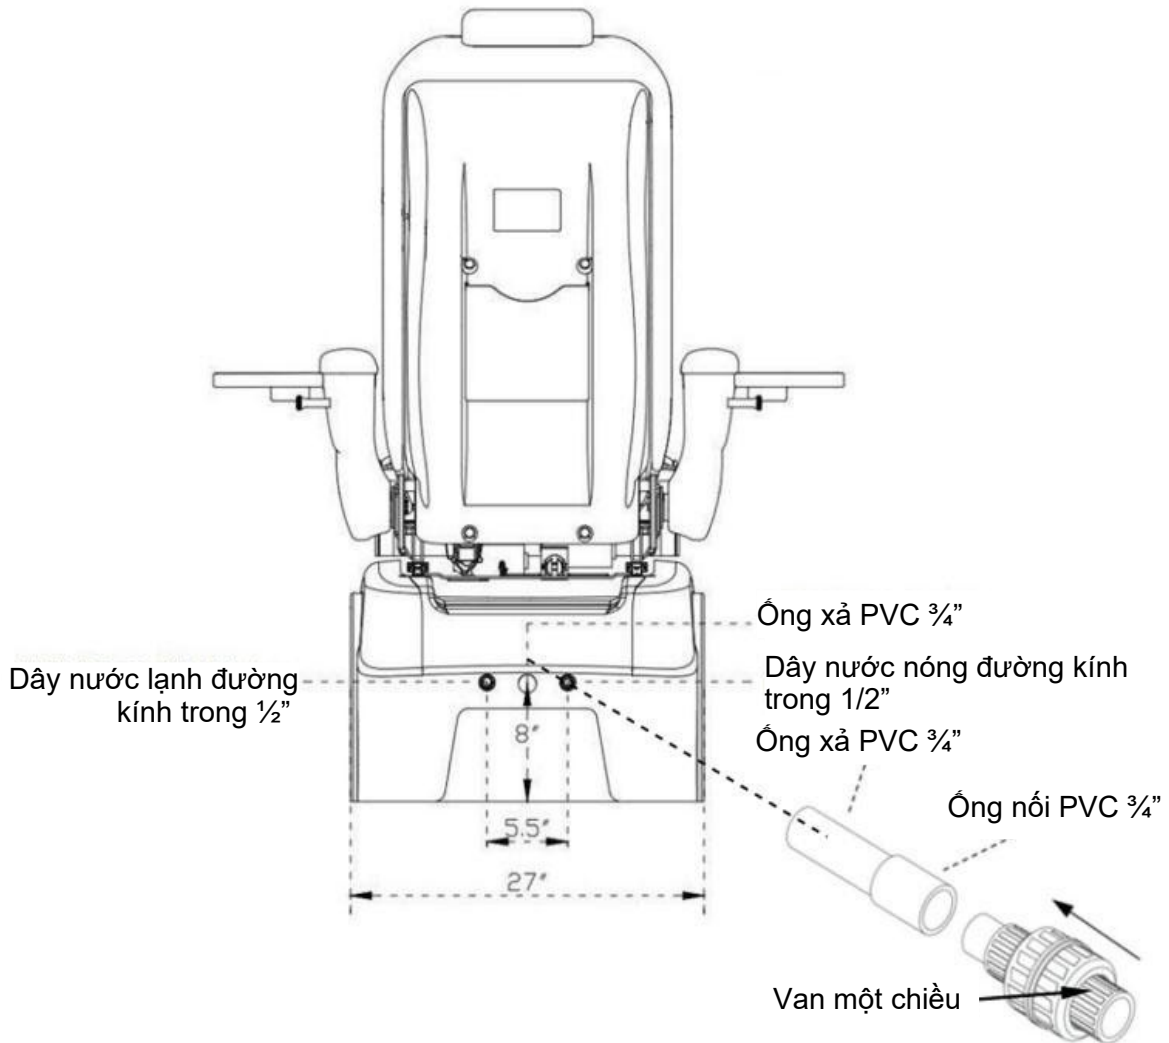

Việc lắp đặt hệ thống bơm thoát nước phải tuân theo MỤC 807.1, 2018 UPC.


P-trap, lỗ thông hơi và đầu nối phải tuân theo MỤC 1001.1 và 1001.2 UPC.

Các quốc gia không áp dụng UPC cần phải tuân thủ một mã thay thế.

- Hệ thống thoát nước: MỤC 701.2 và 702.2 IPC (hoặc mã đường ống dẫn nước địa phương).
- P-trap, lỗ thông hơi và đầu nối: MỤC 1002.1 và 1002.2 IPC (hoặc mã đường ống dẫn nước cục bộ).

Người lắp đặt hoặc thợ sửa ống nước có trách nhiệm thu thập và tuân thủ mã hệ thống ống nước địa phương để kiểm tra. Nếu cần bất kỳ hỗ trợ nào từ phía nhà cung cấp, vui lòng liên hệ với bộ phận dịch vụ khách hàng của chúng tôi.

3. KHUYẾN NGHỊ HỆ THỐNG THOÁT NƯỚC

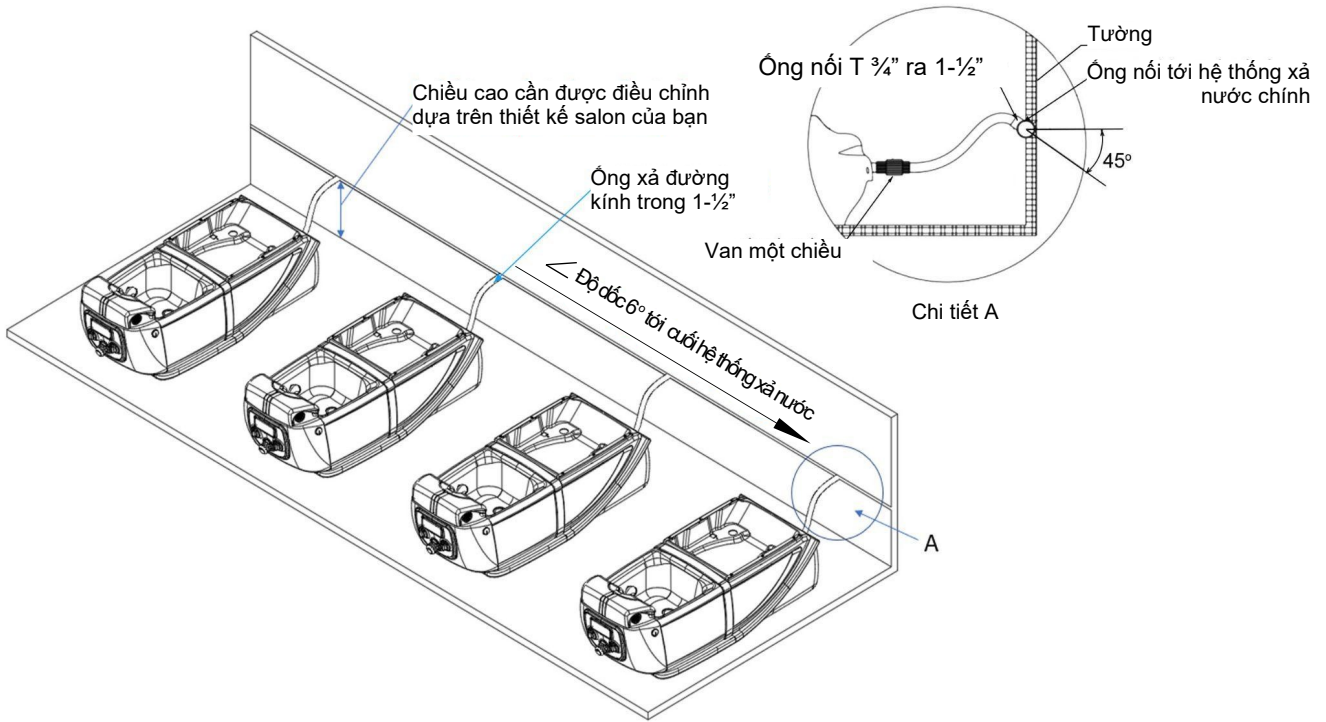


4. HỆ THỐNG CẤP NƯỚC NÓNG / LẠNH

Lưu ý: Việc lắp đặt hệ thống thoát nước và cấp nước phải được thi công bởi thợ ống nước có giấy phép hành nghề. Hướng dẫn và mã hệ thống ống nước cần được tuân thủ cẩn thận để được phê chuẩn kiểm tra của thành phố.

Các công trình xây dựng mới: Xả một lượng nước trong một cái xô để loại bỏ tất cả các mảnh vụn từ ống nước nóng/lạnh trước khi kết nối với ghế spa mới (Hình 1).

Spa thay thế: Đảm bảo sử dụng ống nước nóng/lạnh mới để thay thế ống cũ trước khi lắp đặt ghế spa mới. Các mảnh vụn, cao su hoặc vụn nhựa cũ có thể làm tắc nghẽn hệ thống nước đầu vào.

** Nếu không làm theo hướng dẫn sẽ không được xác nhận bảo hành.

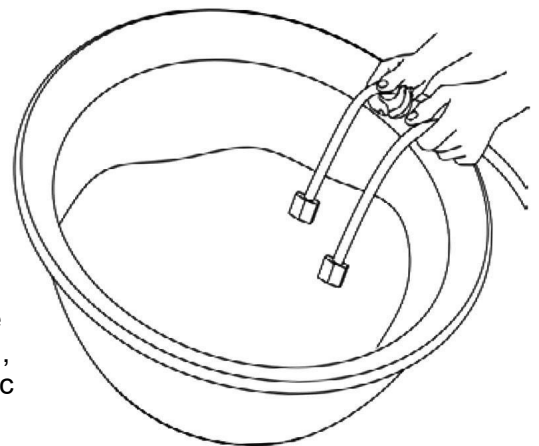


Hình 1. Xả nước để loại bỏ cặn bẩn trước khi lắp đặt ghế spa mới.

LẮP ĐẶT HỆ THỐNG THÔNG KHÍ (TÙY CHỌN)

(Ghế spa đi kèm với một hệ thống thông gió được lắp đặt sẵn theo một số quy định của tiểu bang. Mỗi tiểu bang có thể có một số quy định khác nhau. Vui lòng liên hệ với các cơ quan ở tiểu bang của bạn để biết thêm về các yêu cầu và quy định đó).



Kéo giãn ống thông khí nằm bên trong bồn ra để kết nối với hệ thống thông khí của tiệm khi có nhu cầu.

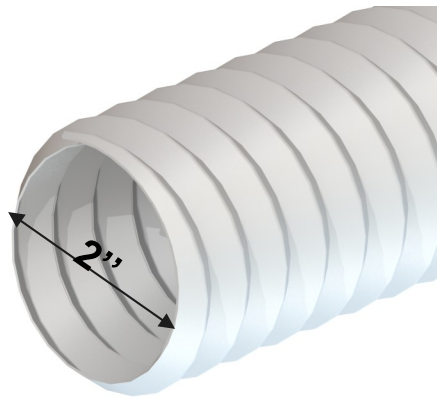

THÔNG SỐ VỀ ĐIỆN VÀ LINH KIỆN GHẾ SPA

Tất cả các mối nối điện PHẢI do kỹ thuật viên về điện thực hiện theo các quy định về điện và xây dựng ở địa phương.

**CẢNH BÁO:**


ĐIỀU NÀY VÔ CÙNG QUAN TRỌNG, GHẾ CỦA BẠN PHẢI ĐƯỢC VẬN HÀNH VỚI ĐIỀU KIỆN SỬ DỤNG THIẾT BỊ NGẮT ĐIỆN GFCI. THIẾT BỊ GFCI 110V-50/60 Hz 15 Amp BẮT BUỘC PHẢI ĐƯỢC SỬ DỤNG.

THÔNG SỐ		
Kích thước và trọng lượng ghế Spa	Spa :	L=71"(180cm) W=34"(86cm) w/ Tray =52"(132cm) H=84"(214cm)
	Trọng lượng ghế:	~ 310 lbs.
	Trọng lượng đóng gói:	~ 350 lbs.
	Trọng lượng tải tối đa:	~ 330 lbs.
Hệ thống Steamer	120V AC Max 850W	
Ghế kỹ thuật viên	Ghế KTV làm móng chân	12" – 13".
	Ghế KTV làm móng tay	16.25" – 20"
Dung tích nước	~ 4 US Gallon	
Động cơ của Jet	120 VAC. At 85W 60Hz	
Động cơ massage, benz trượt bàn ngồi-ngả lưng	24VDC, 120W Max	
Bơm xả	Động cơ –120V công suất 85W 60 Hz. Nâng tối đa:3ft. Hệ số lưu lượng 400 GPH @ floor level	
Nguồn điện	125 VAC, 60HZ, 15A. Nguồn cần cho mỗi ghế = 9 Amp	
Nút điện	Một (1) nút điện cơ đánh nước. Định mức 5A. Một (1) nút điện cơ xả. Định mức 5A	
Chứng nhận an toàn	Ghế Spa được UL chứng nhận.	


THIẾT LẬP TRƯỚC KHI VẬN HÀNH

1. THIẾT LẬP HỆ THỐNG XÔNG HƠI


Bước 1: Lắp dây hơi vào air ring.

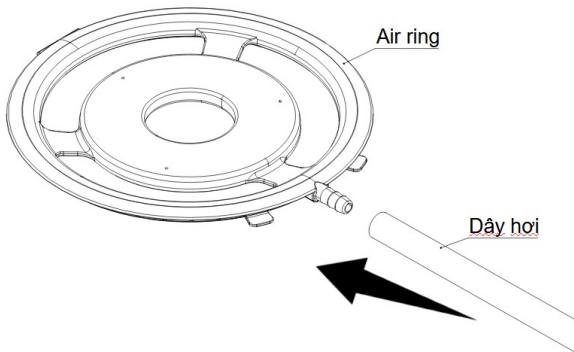


Bước 2: Đặt air ring vào chậu .

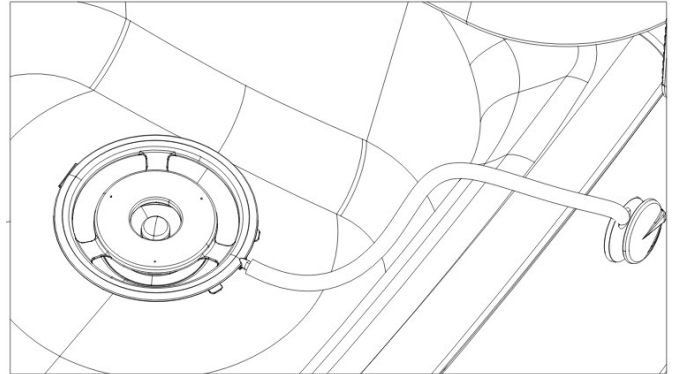

Bước 3: Gắn dây hơi vào Safety Device.

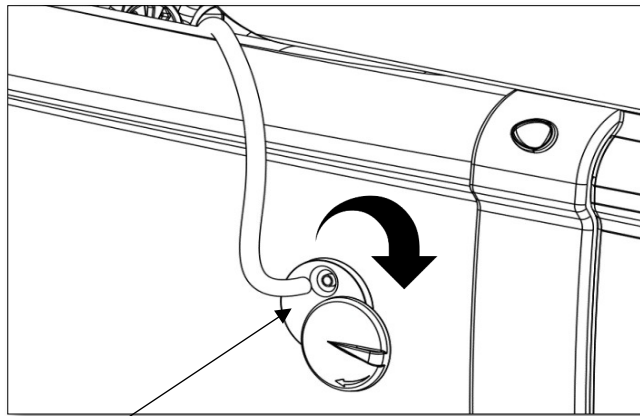

Xoay nắp safety theo chiều kim đồng hồ cho đến khi hết hành trình

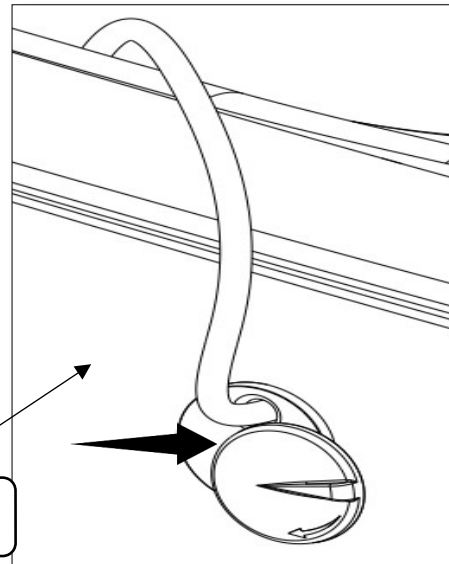


Cắm dây hơi vào đuôi đồng trong safety device

Lưu ý: Cách mở air ring vệ sinh và lắp lại với nhau:

- Cách mở:


Nắm 1 trong 2 tai của air ring rồi kéo cho 2 phần tách ra.

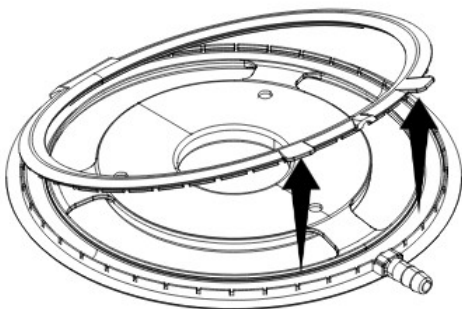


- Cách lắp:

Gá 2 phần air ring lại với nhau theo hướng tự nhiên của bản lề. Sau đó ấn xung quanh cho các ngàm ăn khớp với nhau.

(ấn ngàm bên trong ăn khớp trước rồi mới ấn ngàm bên ngoài của air ring).

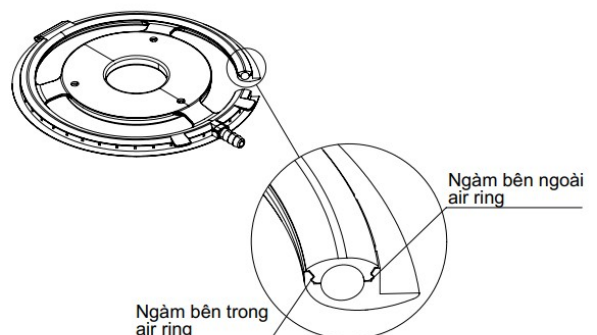


THIẾT LẬP TRƯỚC KHI VẬN HÀNH

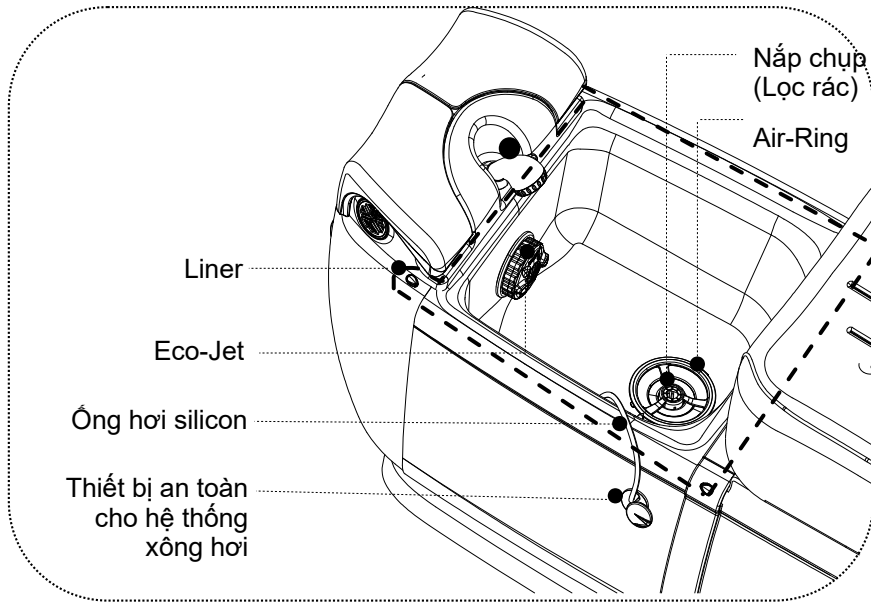



Hệ thống nên được thiết lập như hình trên trước mỗi lần sử dụng dịch vụ.

Lưu ý: Để đảm bảo an toàn cho người vận hành, nếu ống silicon không được kết nối hoặc vô tình bật ra từ đầu nối an toàn. Thiết bị an toàn sẽ tự động tắt hệ thống xông hơi.


2. THIẾT LẬP ECO-JET

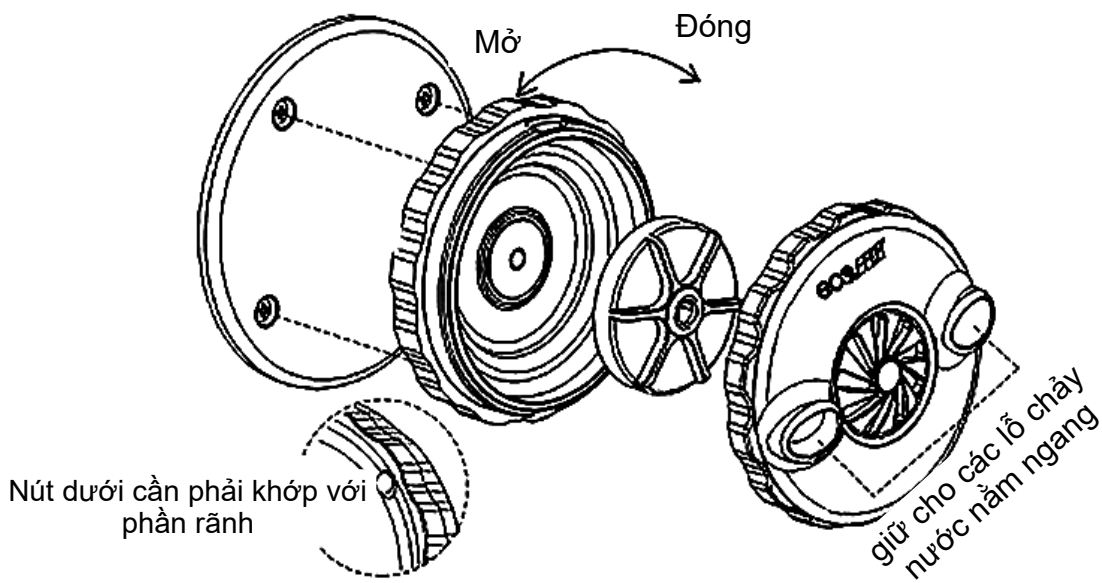

VẬN HÀNH AUTO-FILL / JET SWITCH

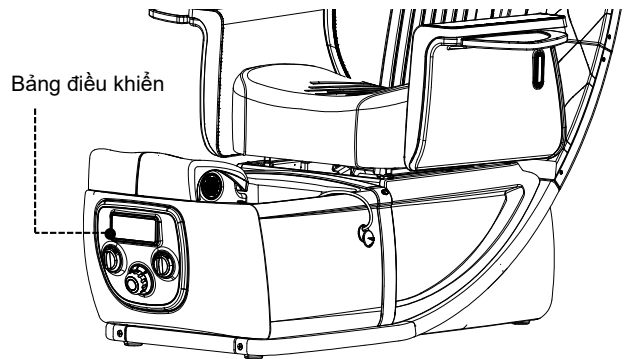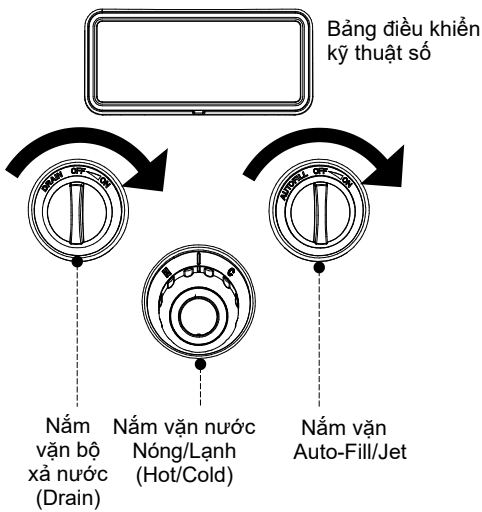

Xem bảng điều khiển ở phía trước để Spa
Làm theo hướng dẫn bên dưới để vận hành ghế Spa

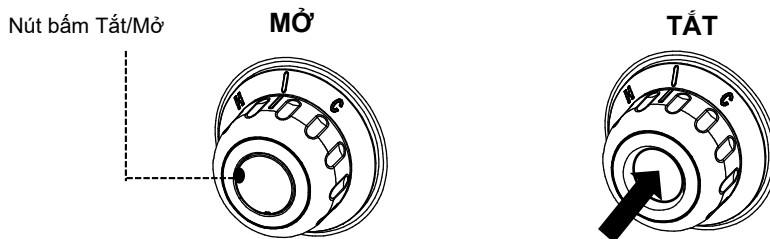

Nhấn vào nút để tắt nước

- Xoay núm vặn Auto-Fill/Jet theo chiều kim đồng hồ và thả ra để cho nước vào và khởi động hệ thống Auto-Fill. Nước sẽ tự động tắt khi nó đạt đến mức cảm biến nước.
- Vặn thêm lần nữa công tắc Auto-Fill/Jet để tắt bơm nước (đồng thời tắt Eco-Jet).
- Vặn núm bộ xả nước (Drain) theo chiều kim đồng hồ để bắt đầu xả. Vặn lại khi xả nước xong.
- Sử dụng núm vặn nước Nóng/Lạnh (Hot/Cold) để điều chỉnh nhiệt độ nước theo cách thủ công.
- Nhấn nút trên núm vặn nước Nóng/Lạnh để Bật/Tắt van nước chính.


***** Núm điều chỉnh nước Nóng/Lạnh nên tắt vào cuối ngày để ngăn ngừa rò rỉ nước.**



- Theo mặc định, Eco-Jet sẽ tự động bật khi mực nước đầy. Để tắt Eco-Jet, nhấn vào nút "Whirlpool" trên bảng điều khiển hoặc xoay núm vặn Auto-Fill /Jet.

***** PHẢI TẮT ECO-JET TRƯỚC KHI XẢ NƯỚC RA NGOÀI BỒN NẾU KHÔNG THIẾT BỊ SẼ HƯ HỎNG.**

VẬN HÀNH BẢNG ĐIỀU KHIỂN KỸ THUẬT SỐ

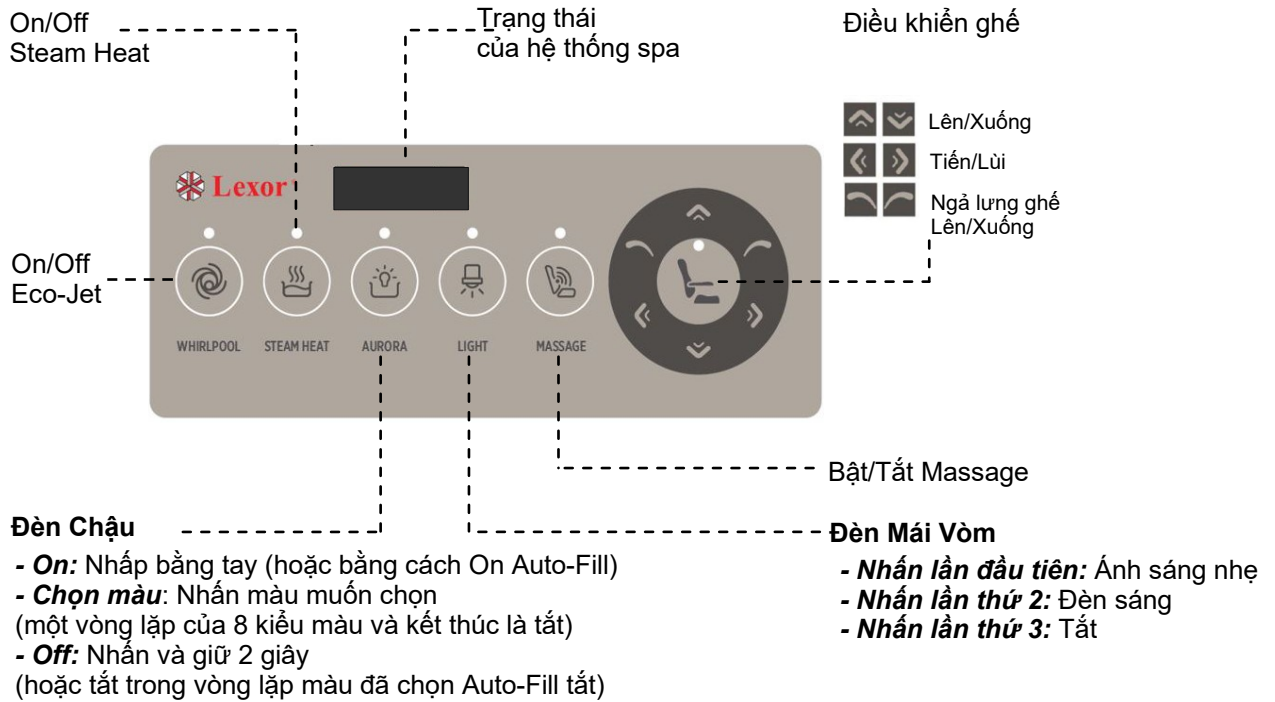

LƯU Ý: Nhấn và giữ nút “Steam Heat” trong 3 giây. Hệ thống sẽ kích hoạt Air-Jet mà không cần xông hơi.

- Đèn LED Xanh/Trắng cho biết trạng thái làm việc hiện tại.
- Hoạt động Eco-Jet có thể khiến một lượng nhỏ xà phòng hoặc dầu dưỡng thể tạo bọt quá mức. Vì lý do này, không sử dụng các sản phẩm này trong chu kỳ xoáy nước.
- Vì lý do an toàn, chức năng xông hơi bị tắt theo mặc định. Nhấn nút để bật nó lên.

CẢNH BÁO:
KHÔNG BẬT “MỞ” ECO-JET MÀ KHÔNG CÓ NƯỚC TRONG CHẬU, VÌ NÓ CÓ THỂ LÀM HƯ HẠI JET VÀ GÂY TIẾNG ỒN.

CẢNH BÁO:
KHÔNG BẬT “MỞ” MÁY BƠM THOÁT NƯỚC NẾU KHÔNG CÓ NƯỚC TRONG CHẬU. BẢO HÀNH BỊ HỦY BỎ NẾU MÁY BƠM CHẠY KHÔ.


THIẾT LẬP CẢM BIẾN NƯỚC VÀ MỨC NƯỚC

1. THIẾT LẬP LẠI CẢM BIẾN NƯỚC (xả hết nước trong chậu trước khi kích hoạt chế độ này)

1. Nhấn và giữ nút "whirlpool" trong 3 giây

2. Màn hình trạng thái sẽ hiển thị "CAL"

3. Nhấp để xác nhận:
 - "CAL" sẽ nhấp nháy nếu thiết lập lại thành công
 - Không nhấp nháy nếu không thành công

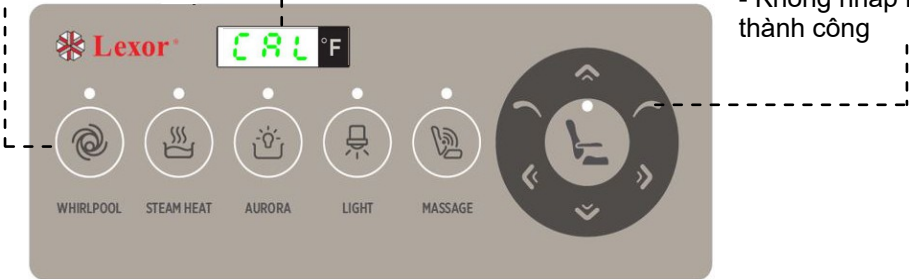

Cần phải chỉnh lại cảm biến nước khi mực nước nằm ngoài phạm vi.

**** Ghi chú :**

- Thao tác này cũng sẽ chỉnh lại mực nước về mặc định = 3.
- Nên bấm chậm
- Nhấn và giữ nút "Whirlpool" trong 3 giây để hệ thống tiếp tục hoạt động hoặc hệ thống sẽ được tự động tiếp tục nếu không có thao tác nào được thực hiện sau 20 giây.

2. ĐIỀU CHỈNH MỨC NƯỚC CHO AUTO-FILL (xả hết nước trong chậu trước khi kích hoạt chế độ này)

**** Ghi chú :**

- Nên bấm chậm.
- Nhấn và giữ nút "Whirlpool" trong 3 giây để tiếp tục hoạt động hệ thống hoặc hệ thống sẽ được tự động tiếp tục nếu không có thao tác nào được thực hiện sau 20 giây.

1. Nhấn và giữ trong 3 giây. Đèn LED sẽ hiển thị "CAL"
 Tiếp tục nhấn nút cho đến khi xuất hiện "L" trên màn hình.



2. Đèn LED sẽ hiển thị "L"

4. Nhấn để xác nhận:
 - "L-x" sẽ nhấp nháy nếu thành công (x = 1: 5)
 - Không nhấp nháy nếu thất bại



3. Nhấn < hoặc > để tăng hoặc giảm mực nước, trong đó 1 là mức thấp nhất và 5 là mức cao nhất


3. ĐIỀU CHỈNH THỜI GIAN VẬN HÀNH STEAMER (tắt tất cả các chức năng của hệ thống để cấu hình)



1. Nhấn và giữ trong 3 giây. Đèn LED sẽ hiện thị “CAL”
Nhấn tới khi “5 5 0” xuất hiện trên màn hình



2. Màn hình LED sẽ hiển thị cài đặt hiện tại

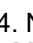


4. Nhấn  để xác nhận:
- Màn hình sẽ nhấp nháy nếu thành công
- Không nhấp nháy nếu thất bại

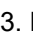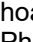3. Nhấn  hoặc  để tăng hoặc giảm cài đặt thời gian chờ. Phạm vi cài đặt là 10 phút đến 60 phút

4. THIẾT LẬP LẠI CÀI ĐẶT BAN ĐẦU


1. Nhấn và giữ trong 3 giây. LED sẽ hiển thị “CAL”
Nhấn cho tới khi “FRC” xuất hiện trên màn hình

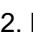


2. Nhấn  để xác nhận:
- Màn hình sẽ nhấp nháy nếu thành công
- Không nhấp nháy nếu thất bại

Tham số mặc định của nhà sản xuất


- Mức nước: 3
- Thời gian chờ Steamer: 20 phút
- Thiết bị an toàn: Bật.
- Đơn vị nhiệt độ: °F

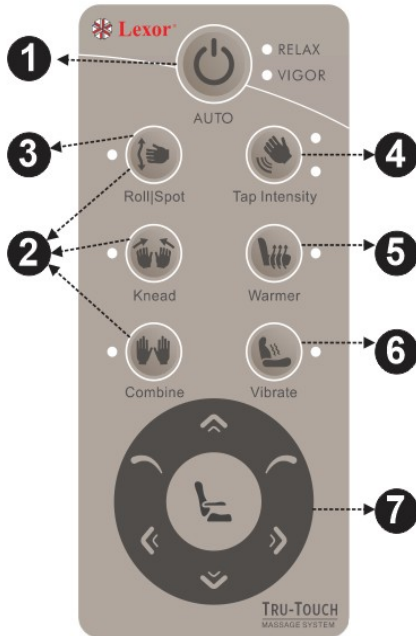HỆ THỐNG MASSAGE & BỘ ĐIỀU KHIỂN


1. Nhấn nút “AUTO” để bắt đầu chế độ tự động massage. Trong 10 giây kể từ lúc khởi động sẽ có 2 lựa chọn. (Relax/Vigor) bằng cách nhấn nút “AUTO” thêm 1 lần nữa.
2. Nhấn bất kỳ nút (Rolling/Spot, Kneading, Tapping, Combine) để nhập chế độ thủ công.
3. Nhấn nút “Rolling/Spot” để dừng cuộn lên/xuống và dừng ở vị trí mong muốn.
4. Nhấn nút “Intensity” để chọn cường độ đánh.
5. Nút “Warmer” là một tùy chọn. Nhấn nút này sẽ bắt đầu ghế sưởi.
6. Nút “Vibrate” là một tùy chọn. Nhấn nút này sẽ bắt đầu tạo rung tại vị trí ngồi.
7. Nhấn bất kỳ nút nào trên ghế (Ngả sau, Ngả trước, Lùi, Tiến, Lên, Xuống) để di chuyển ghế đến vị trí mong muốn.

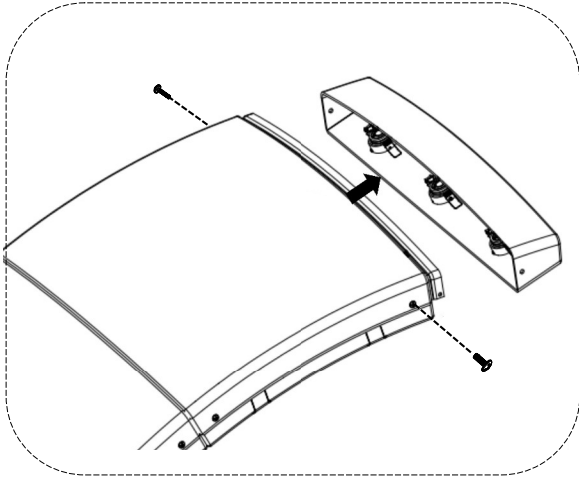THAY THẾ ĐÈN SPOTLIGHT MÁI VÒM


Tháo 2 vít gắn 2 bên hông của mái vòm trên cùng.

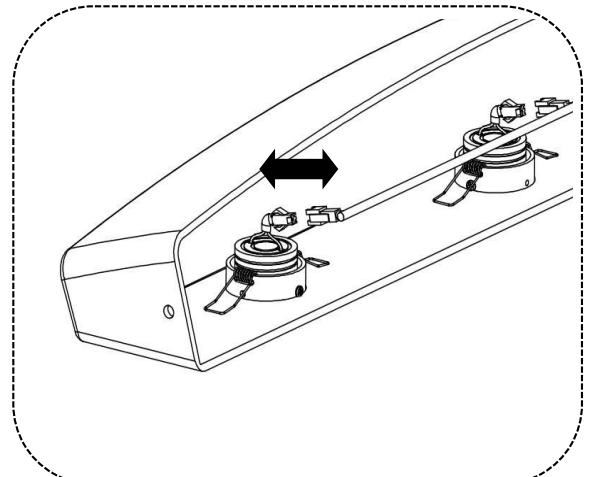



Ngắt kết nối đầu nối cáp Spotlight nếu cần.

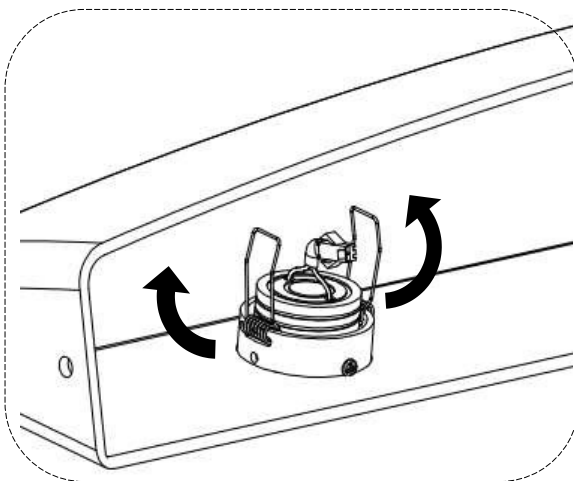


Tháo đèn Spotlight bằng cách nâng giá đỡ lò xo và đẩy vỏ đèn Spotlight xuống.

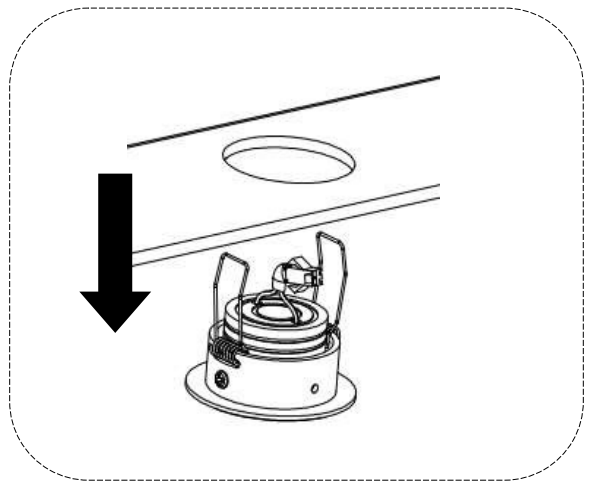


Làm ngược lại các bước trên để lắp đặt lại đèn Spotlight.

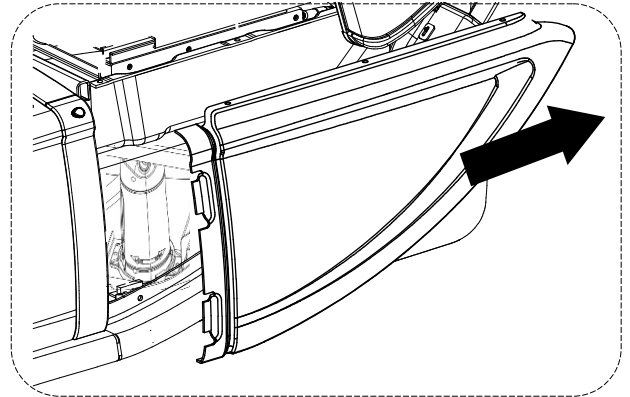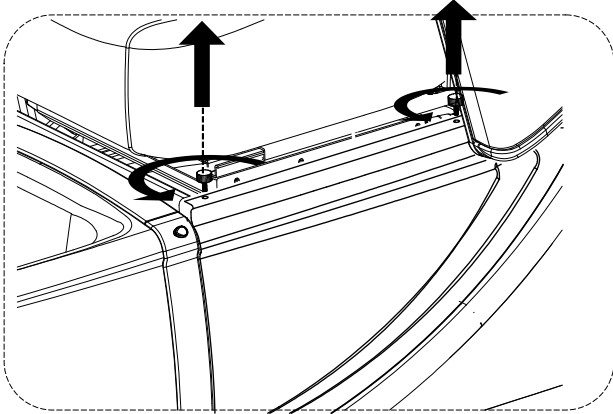THAY THẾ STEAMER**1. THÁO ỚP HÔNG BÊN TRÁI**


Xoay tay ghế bên trái lên. Vặn 2 nút vặn như được hướng dẫn trong hình trên.
Tháo ốp hông bên bằng cách nhấc ốp hông ra khỏi giá đỡ sau đó kéo ốp hông ra.

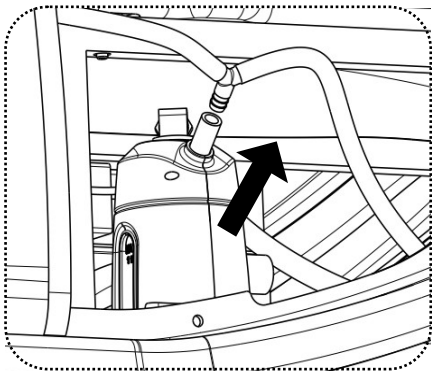2. THAY THẾ BÌNH STEAMER



Tháo đầu nối “Y”
Dùng kim để nới lỏng vòng kim loại và tháo đầu nối.

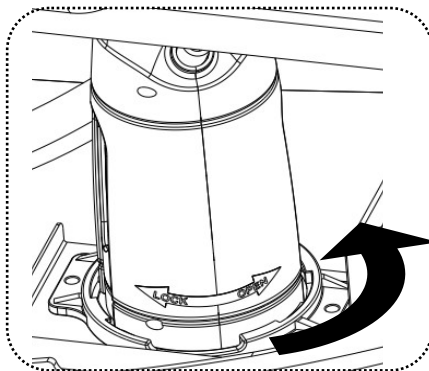

Xoay bình steamer ngược chiều kim đồng hồ ¼ vòng rồi nhấc lên để lấy ra.


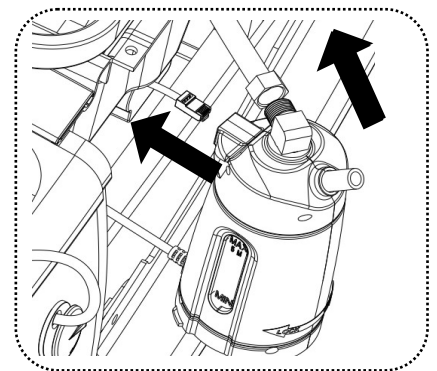


Nhấn chốt trên đầu nối cáp tín hiệu xuống rồi kéo ra
Dùng cờ lê để tháo ống nước.



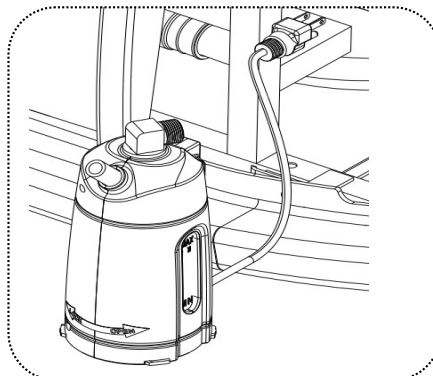
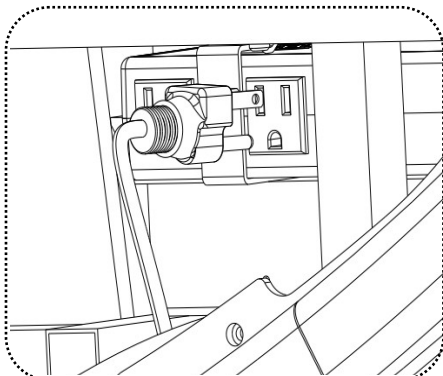


Thận trọng: Khi kết nối lại ống dẫn nước, phải đảm bảo vặn chặt bằng tay và sau đó vặn ½ vòng bằng cờ lê.

Làm ngược lại các bước trên để lắp đặt lại bình steamer.

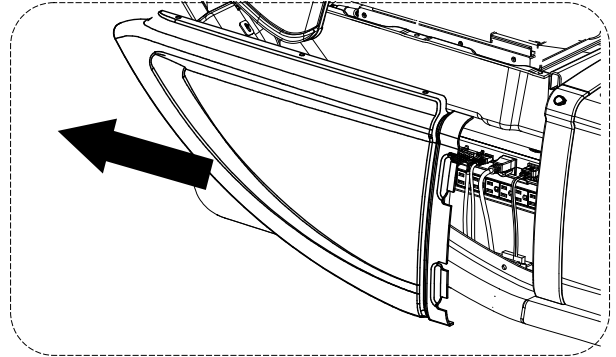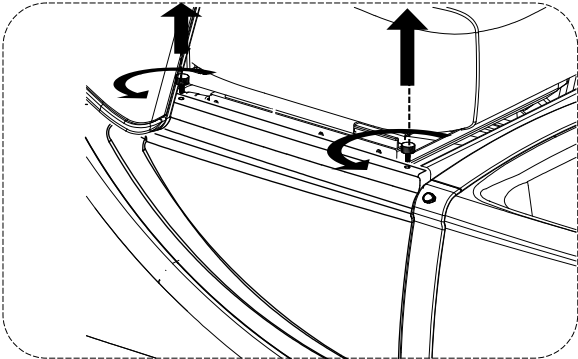THAY THẾ HỘP ĐIỀU KHIỂN AUTO-FILL**1. THÁO ỚP HÔNG BÊN PHẢI**


Xoay tay ghé bên phải. Vặn 2 nút vặn như được hướng dẫn trong hình trên. Tháo ốp hông bên bằng cách nhắc bằng ra khỏi giá đỡ sau đó kéo bằng ra.

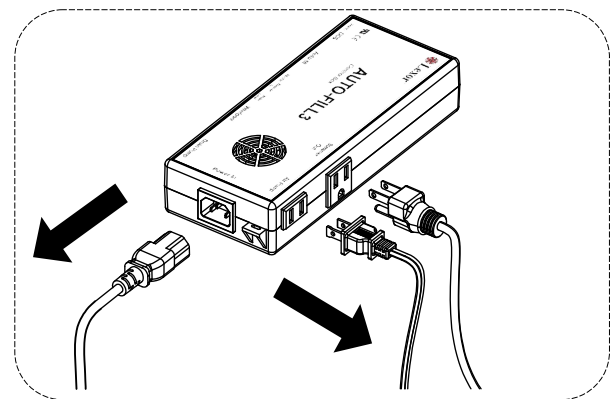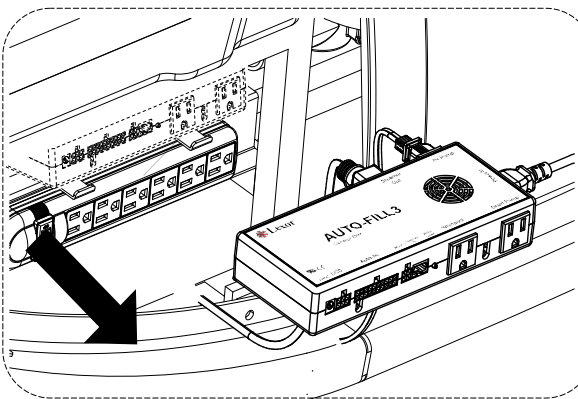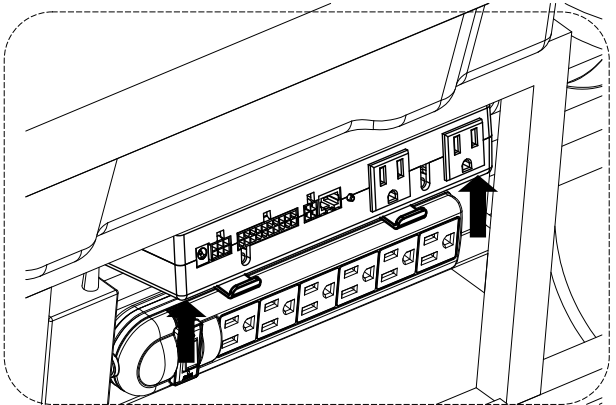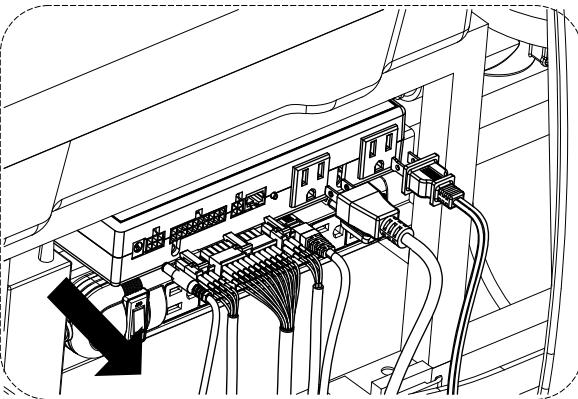2. THAY THẾ HỘP ĐIỀU KHIỂN AUTO-FILL

Tháo tất cả các đầu nối ở mặt trước của hộp điều khiển AF. Đẩy lên và kéo hộp điều khiển AF ra khỏi ngăn chứa sau đó tháo 3 phích cắm điện còn lại.


Đảo ngược các bước trên để lắp đặt lại hộp điều khiển AF.
Tham khảo sơ đồ đầu dây trên ở trang tiếp theo để lắp đặt lại.

3. SƠ ĐỒ DÂY HỘP ĐIỀU KHIỂN AUTO-FILL

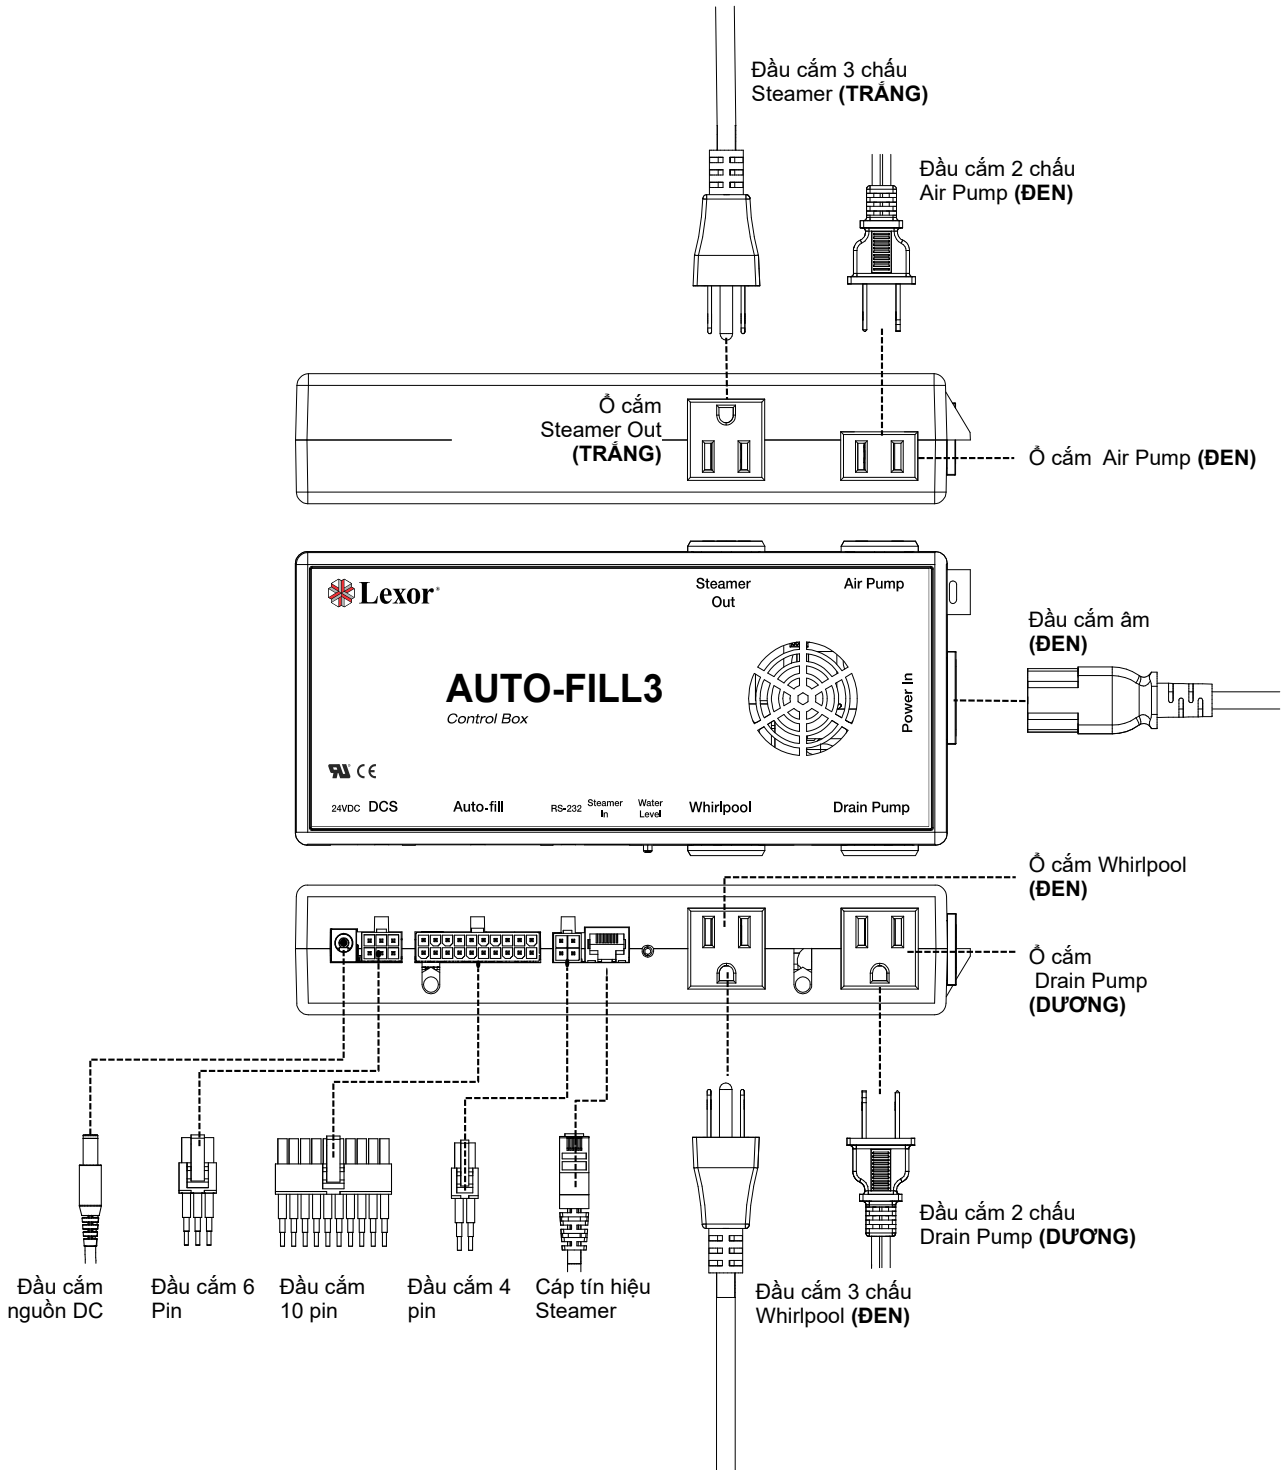


THÁO NẮM VẶN BỘ XẢ NƯỚC VÀ NẮM VẶN AUTO-FILL/JET.**1. THÁO NẮM VẶN BỘ XẢ NƯỚC.**

- **Bước 1.** Kéo chi tiết 1 ra.
- **Bước 2.** Nới lỏng (không tháo rời) 3 con vít màu đen (**chú ý: có 3 con vít màu đen nằm xen kẽ với 3 con vít màu trắng**). Sau đó, lấy chi tiết 2 ra khỏi mặt nạ.
- **Bước 3.** Tháo 3 con vít phía sau của chi tiết 2 để tháo nắp che.
- **Bước 4.** Rút dây kết nối tín hiệu và gỡ dây cáp.

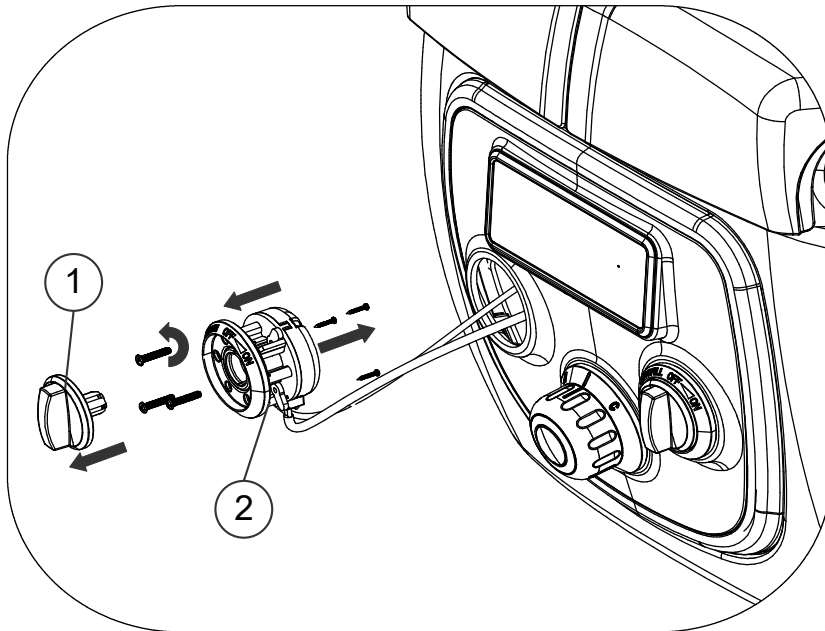
**2. THÁO NẮM VẶN AUTO-FILL/JET.**

- **Bước 1.** Kéo chi tiết 1 ra.
- **Bước 2.** Nới lỏng (không tháo rời) 3 con vít màu đen. (**Chú ý: có 3 con vít màu đen nằm xen kẽ với 3 con vít màu trắng**). Sau đó, lấy chi tiết 2 ra khỏi mặt nạ.
- **Bước 3.** Gỡ dây kết nối tín hiệu.

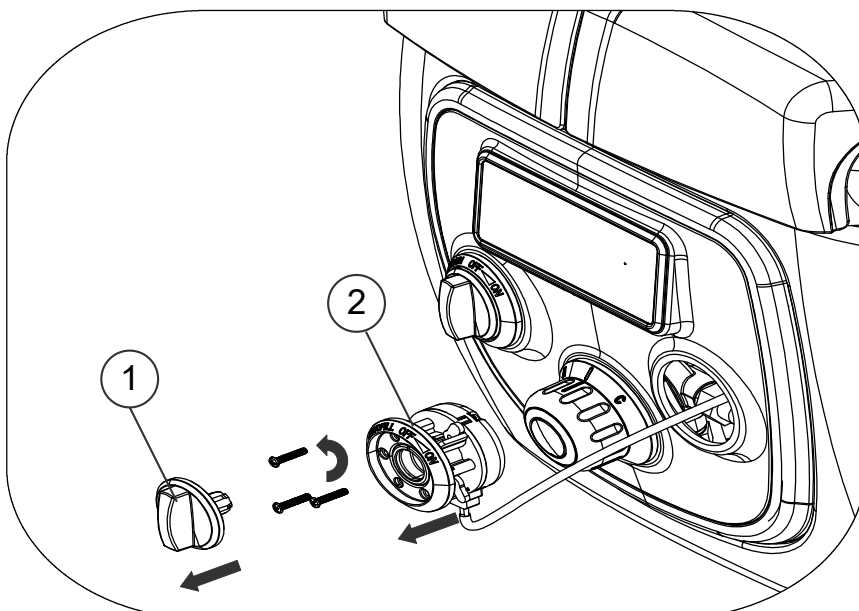


THÁO BẢNG ĐIỀU KHIỂN


Bước 1. Dùng tay gỡ bảng điều khiển kỹ thuật số ra . Sau đó rút toàn bộ dây kết nối tín hiệu ở phía sau bảng điều khiển kỹ thuật số.

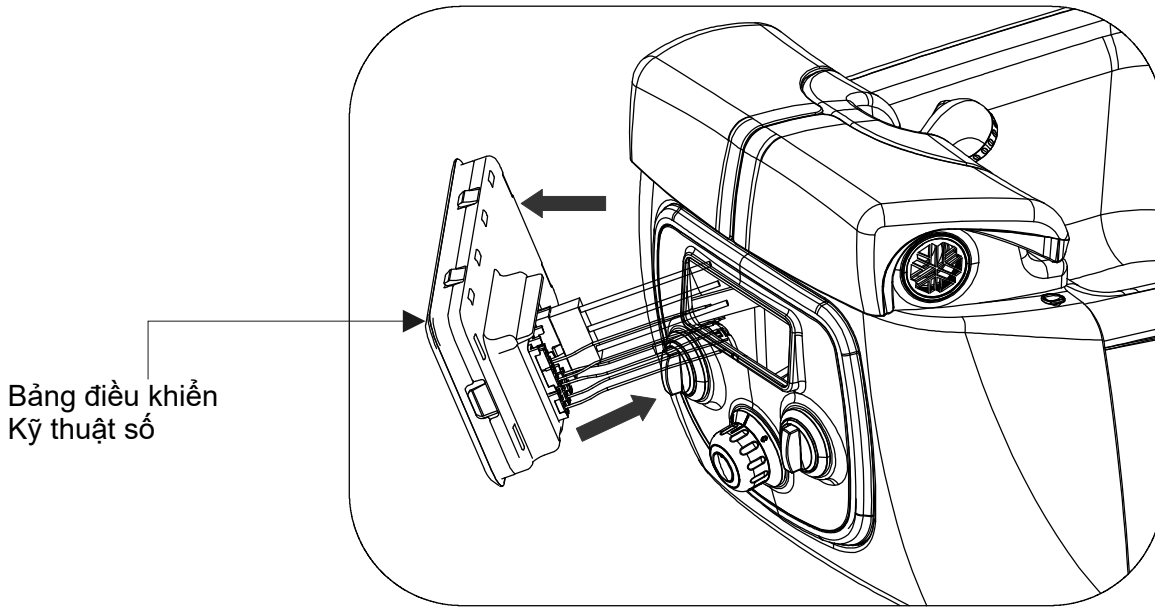


Bước 2: Tháo 2 con vít, sau đó gỡ bảng điều khiển.

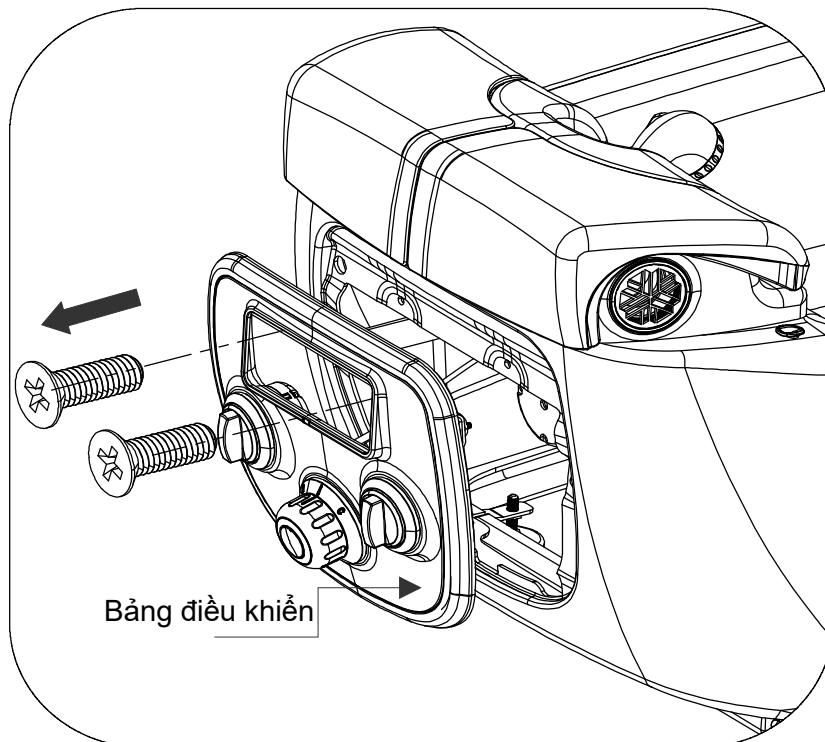

Hướng Dẫn Lắp Ráp Faucet

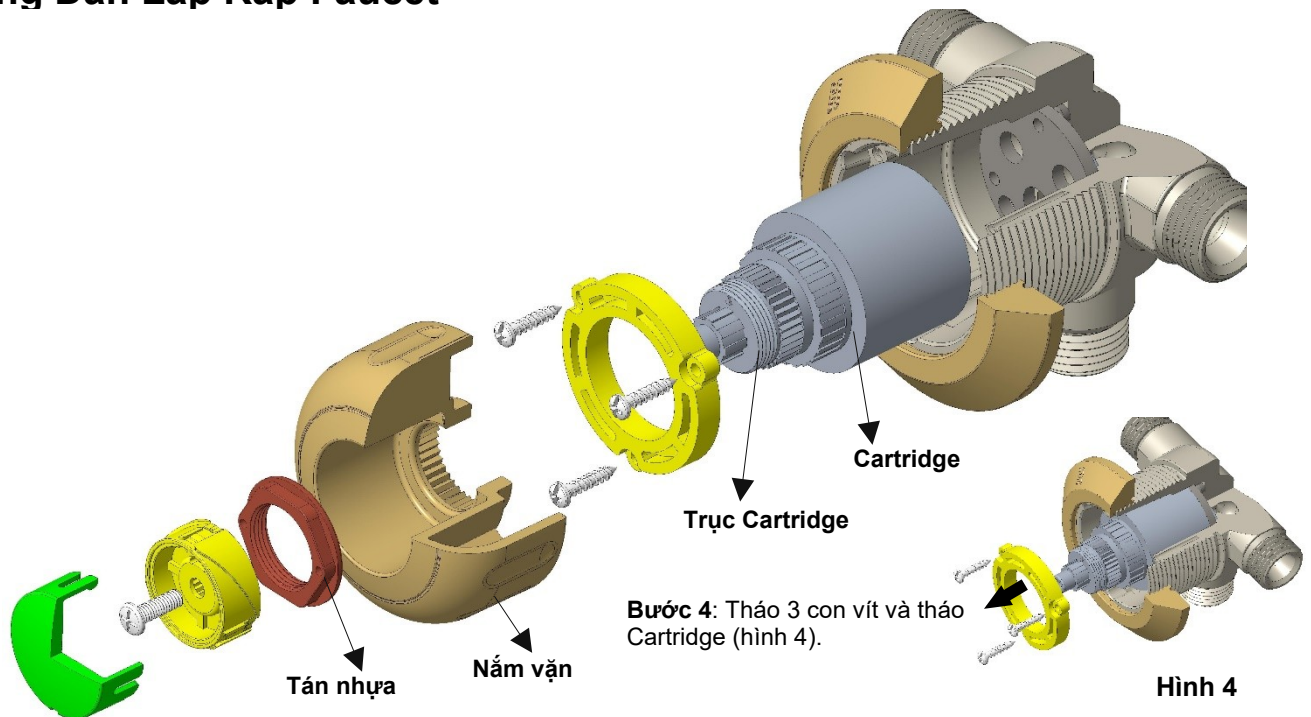


Bước 1: Để mở nắp, dùng một vật nhọn (đầu bút, đầu tăm...) đặt vào rãnh của nắp và xoay ngược chiều kim đồng hồ (hình 1).

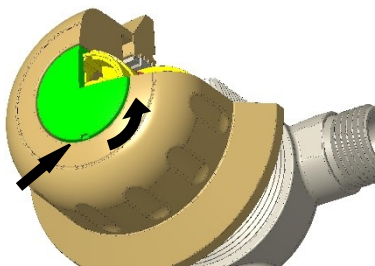


Hình 1

Bước 2: Tháo vít và tháo nút nhấn (hình 2).

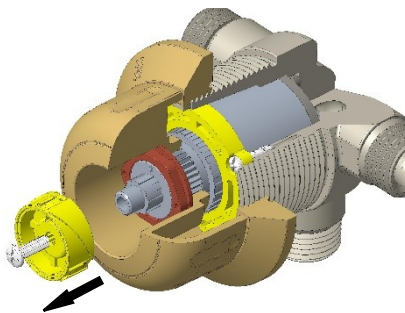


Hình 2

Bước 3: Đưa dụng cụ vào thân Faucet để tháo tán nhựa và nắm vặn (xoay ngược chiều kim đồng hồ) (hình 3).

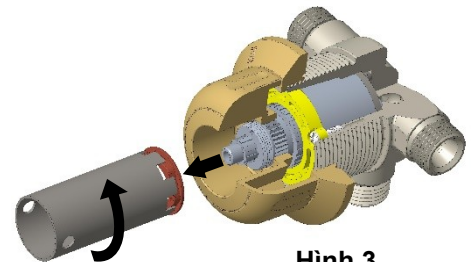


Hình 3

Bước 5: Khi thay Cartridge mới. Chú ý 2 chốt và 2 lỗ (hình 5), phải được lắp đúng vị trí để tránh rò rỉ nước.

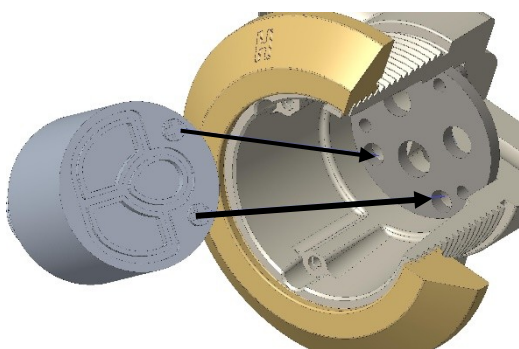


Hình 5

- Bước 6:** Lắp Cartridge vào thân Faucet như ở bước 5.
- Làm ngược lại bước 4 bằng cách lắp cartridge và 3 con vít.
 - Xoay từ từ nắm vặn Cartridge sang hết bên trái "H" (nhìn hình 6.1) hoặc mũi tên bên trong nắm vặn phải trùng với mũi tên có trên Cartridge (xem hình 6.2).
 - Lắp nắm vặn sao cho vạch nằm trên núm trùng với chữ "H" trên thân van và làm ngược lại bước 3 để cố định chúng.
 - Làm ngược lại bước 2 để lắp nút nhấn.
 - Làm ngược lại bước 1 để lắp nắp nút nhấn.

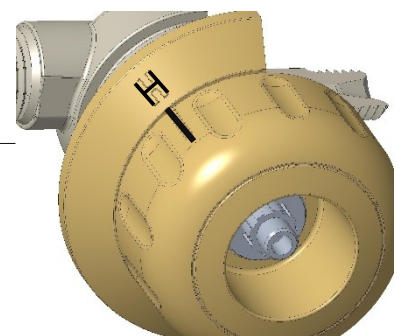

Hình 6.1

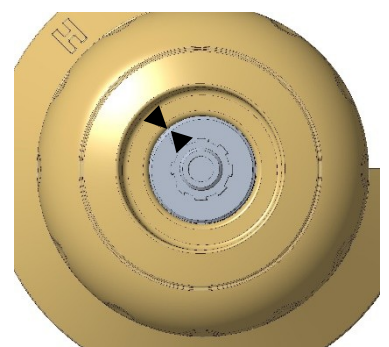


Hình 6.2

THÁO GỐI CHÂN


BƯỚC 1.

1. Rút vòi nước lên và tháo vòi nước.
Lưu ý tránh không để ống nước rơi vào trong bồn.
2. Nâng gối chân lên.
3. Tháo vít ở phía trước.

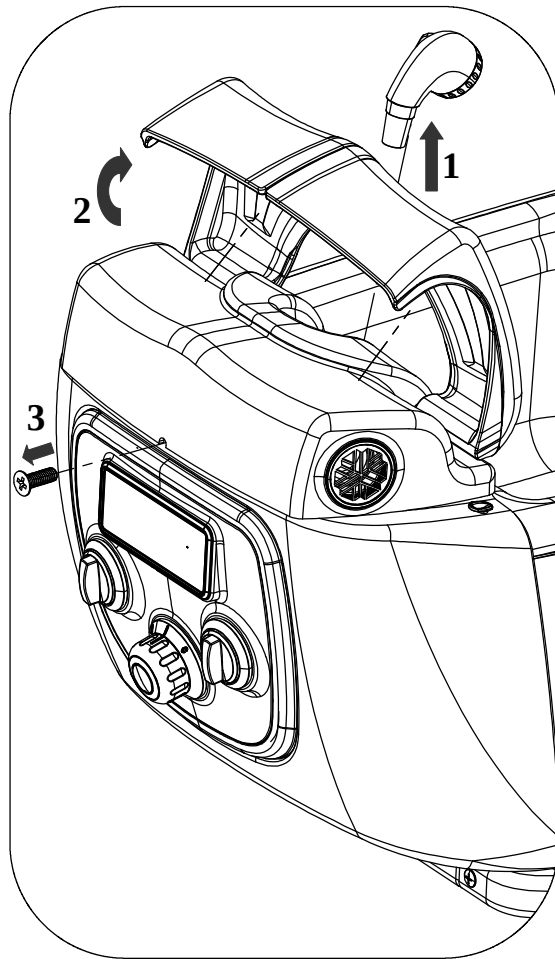

BƯỚC 2.

Nhấc toàn bộ đầu trước gối chân lên và đẩy về phía sau.

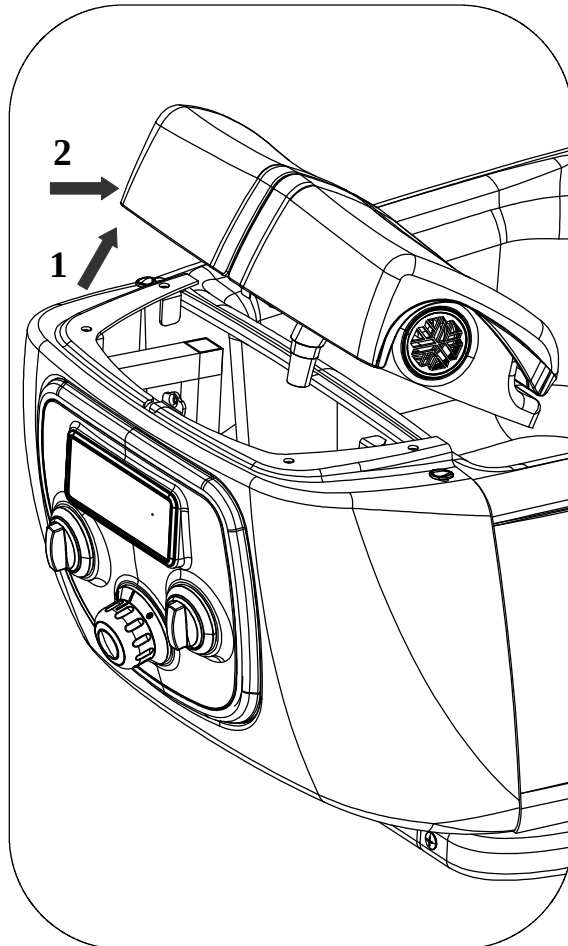

**CẢNH BÁO:**

BẠN PHẢI THAM KHẢO CÁC QUY ĐỊNH CỦA ĐỊA PHƯƠNG VÀ TIỂU BANG VỀ NGUYÊN LIỆU VỆ SINH TẮY RỬA. VIỆC NGÂM CHẬU QUA ĐÊM TRONG MỘT LƯỢNG LỚN DUNG DỊCH CHLORINE CÓ THỂ LÀM HƯ HẠI PHẦN NHỰA CỦA CHẬU

QUY TRÌNH VỆ SINH PHẢI THEO YÊU CẦU CỦA HỘI ĐỒNG QUẢN LÝ NGÀNH TÓC VÀ THẨM MỸ (BUREAU OF BARBERING & COSMETOLOGY) CỦA RIÊNG MỖI TIỂU BANG.

Lưu ý: * Mỗi ghế spa chăm sóc móng chân phải ghi nhật ký vệ sinh *****

Mỗi tiểu bang sẽ có một số khác biệt về phương pháp vệ sinh, bạn vui lòng tham khảo hội đồng quản lý ngành cắt tóc và thẩm mỹ (bureau of barbering and cosmetology) hoặc cơ quan quản lý của tiểu bang để biết thêm thông tin chi tiết.

Khuyến cáo an toàn khi sử dụng ghế spa

Hội đồng quản lý ngành tóc và thẩm mỹ yêu cầu các salon sử dụng hệ thống đánh nước massage chân phải tuân theo các quy trình vệ sinh để đảm bảo được việc vệ sinh và bảo trì các thiết bị đúng cách và cũng để ngăn chặn các loại vi khuẩn hoặc bệnh kí sinh trùng.

Nếu không thực hiện theo các quy định này, bạn có thể sẽ bị nhận phí phạt hoặc thực hiện hình thức kỷ luật. Mỗi ghế vi phạm sẽ bị xử lý phạt riêng theo từng ghế một.

CHÚ Ý: Trích dẫn: Mục 7312, luật kinh doanh và nghề nghiệp (business and profession code). Tham khảo: Mục 7312 (e), luật kinh doanh và nghề nghiệp.

Bên dưới là những đề nghị quy trình vệ sinh gợi ý cho ghế spa của bạn:

Sau mỗi khách hàng

1. Nước phải được xả hết và cặn bẩn phải được loại bỏ ra khỏi chậu.
2. Chậu phải được vệ sinh bằng xà phòng hoặc chất tẩy rửa cùng với nước.
3. Chậu phải được vệ sinh bằng dung dịch tẩy rửa đã được đăng ký với EPA với phương thức hoạt động của từng loại vi khuẩn, nấm và vi rút được minh họa theo sự hướng dẫn của nhà sản xuất.
4. Chậu phải được lau lại bằng khăn sạch.

Vào cuối mỗi ngày

1. Các nắp hoặc lưới lọc phải được lấy ra, tất cả cặn bẩn mắc kẹt lại phía sau lưới lọc phải được loại bỏ và vòi cấp nước phải được vệ sinh bằng xà phòng hoặc dung dịch tẩy rửa cùng với nước.
2. Trước khi thay đổi, lưới lọc phải được ngâm hoàn toàn vào dung dịch tẩy rửa đã được đăng ký với EPA với phương thức hoạt động của từng loại vi khuẩn, nấm và vi rút được minh họa theo sự hướng dẫn của nhà sản xuất.
3. Hệ thống ghế spa phải được rửa sạch bằng xà phòng và nước ấm ít nhất là 10 phút, sau đó ghế sẽ được súc rửa và xả nước bẩn đi.

Ít nhất một lần mỗi tuần

1. Cho nước ấm vào đầy chậu cùng với 1 thìa dung dịch tẩy (gồm có nước và chlorine, trong đó 5.25% là chất tẩy chlorine), hoặc dung dịch tẩy Sodium Hypochlorite 50 mg/l theo hướng dẫn của nhà sản xuất.
2. Hệ thống ghế spa phải được tẩy rửa với dung dịch nước và chất tẩy, hoặc dung dịch Sodium Hypochlorite trong vòng 5 đến 10 phút và để dung dịch này ngâm trong chậu từ 6 đến 10 tiếng.
3. Hệ thống ghế cần phải được xả và súc rửa sạch sẽ trở lại trước khi được tiếp tục sử dụng.

**THE KEY TO SALON SUCCESS.****BẢO HÀNH**

Cập nhật: 23/5/2022

THỜI HẠN BẢO HÀNH BẮT ĐẦU CÓ HIỆU LỰC:

Thời hạn bảo hành bắt đầu vào ngày khách hàng nhận được sản phẩm.

THỜI HẠN BẢO HÀNH ĐỔI TRẢ CÁC BỘ PHẬN CỦA GHẾ SPA 2 NĂM:

Tất cả các bộ phận cho mẫu ghế spa chăm sóc móng chân: Prive Lounge, Prestige, Envision Spa, Elite, Liberte, Luminous và Infinity.

THỜI HẠN BẢO HÀNH TRAO ĐỔI PHỤ TÙNG 90 NGÀY TRÊN CÁC LINH KIỆN CÁ NHÂN ĐƯỢC BÁN:

Tất cả các bộ phận đã mua sẽ chỉ được bảo hành trong 90 Ngày.

SẢN PHẨM KHÔNG BẢO HÀNH:

Bảo hành này không bao gồm đồ nội thất, ghế kỹ thuật viên, ghế khách hàng và phụ kiện.

PHÍ VẬN CHUYỂN THAY THẾ CÁC BỘ PHẬN:

Phí vận chuyển cho các bộ phận thay thế được bảo hiểm theo bảo hành này. Khách hàng phải trả lại các bộ phận bị lỗi cho Lexor, với chi phí của khách hàng. Phần bị lỗi phải bao gồm số RMA (QUYỀN TRẢ LẠI HÀNG) do đại diện hỗ trợ khách hàng của Lexor cung cấp. Số RMA sẽ giúp chúng tôi xác định vị trí các bộ phận và hoàn thành dịch vụ kịp thời. Lexor không chịu trách nhiệm đối với các bộ phận bị lỗi, bị thiếu/mất được trả lại mà không có số RMA được cấp.

ĐIỀU KHOẢN VÀ ĐIỀU KIỆN BẢO HÀNH:

Mòn và rách, nứt do ứng suất nhiệt trên thủy tinh và đá cẩm thạch, hư hỏng vật lý, lạm dụng, sử dụng sai, các sự kiện ngẫu nhiên không được bao gồm trong bảo hành này. Các bộ phận thay thế được cung cấp kèm theo hướng dẫn và được thiết kế đặc biệt để lắp đặt đơn giản. Do đó, không yêu cầu một kỹ thuật viên tại chỗ.

THIỆT HẠI KHI VẬN CHUYỂN :

Các thiệt hại do vận chuyển phải được báo cáo trong vòng hai mươi bốn (24) giờ sau khi nhận được sản phẩm. Khách hàng phải kiểm tra lô hàng để đảm bảo không có thiệt hại trước khi ký vận đơn (BOL - do công ty vận tải đường bộ cung cấp). Nếu có bất kỳ thiệt hại nào đối với lô hàng, vui lòng ghi rõ trên BOL trước khi ký tên và liên hệ ngay với bộ phận hỗ trợ khách hàng của Lexor để báo cáo thiệt hại.

TỪ CHỐI TRÁCH NHIỆM BẢO HÀNH:

Lexor sẽ không có nghĩa vụ sửa chữa, thay thế hoặc hoàn lại tiền cho đến khi quá trình xác minh hoàn tất. Bảo hành này chỉ áp dụng cho ghế spa pedicure Lexor được sử dụng tại Hoa Kỳ. Bảo hành này không thể chuyển nhượng. Bảo hành này sẽ vô hiệu nếu các sản phẩm được chuyển khỏi vị trí giao hàng ban đầu như được cung cấp trong hóa đơn. Hơn nữa, bảo hành sẽ vô hiệu nếu sản phẩm được bảo trì không đúng cách, sơ suất, vệ sinh không đúng cách hoặc bất kỳ trường hợp nào khác ngoài tầm kiểm soát của Lexor.

Tiếp tục chính sách không ngừng nghiên cứu và phát triển để nâng cao chất lượng sản phẩm của chúng tôi. Lexor, Inc. có quyền thay đổi giá cả, các bộ phận, thiết kế và thông số kỹ thuật mà không cần thông báo trước hoặc có nghĩa vụ theo bảo hành này.

Lexor sản xuất, LLC.
7400 Hazard Ave. Westminster, CA 92683
Hỗ trợ khách hàng (800)559-3030

PRIVÉ™
LOUNGE

24/7

BEST CUSTOMER CARE!

 800.559.3630 |  support@lexor.com |  Lexor.com



Lexor.com